



RESIDENTIAL
ME PREMIER SERIES

INSTALLATION, OPERATION & MAINTENANCE MANUAL

Part#: 97B0157N01 | Revised: March 25, 2026

Models: ME 024-072
60Hz - R-454B



Table of Contents

3	Model Nomenclature	49	Electrical
4	Attentions, Cautions, and Warnings	49	Power Wiring
6	General Information	50	Example Wiring Diagram
9	Refrigerant System Servicing	51	Low-Voltage Wiring
12	Minimum Installation Area	54	Refrigerant Detection System
13	Physical Data	56	Thermostat Wiring
14	Horizontal Installation	57	DXM2.6 and Wireless Service Tool
15	Service Access	58	EC Blower Motor Control
18	Duct System Installation	59	Blower Performance Data
19	Field Conversion of Air Discharge	60	Operating and Commissioning Limits
20	Relocation of RDS After Field Conversion	61	Unit System Checkout
21	Vertical Installation	62	Unit Startup Procedure
23	Service Access	65	Unit Operating Conditions
24	Piping Installation	68	Performance Data
25	Applications	78	Full Load Performance: Correction Tables
25	Variable Water Flow Heat Pump	79	Preventative Maintenance
28	Ground-Loop Heat-Pump	80	Troubleshooting
30	Cleaning and Flushing	82	DXM2.6 Functional Flow Chart
33	Antifreeze Charging	83	Troubleshooting Table
35	Multi-Unit Piping and Flushing	86	Functional Troubleshooting Form
38	Ground-Water Heat Pump	87	Startup Log Sheet
40	Water Quality Requirements	88	Warranty
43	Hot Water Generator	92	Revision History
47	Electrical Data: CV EC Blower Motor		

Heat Controller works continually to improve its products. As a result, the design and specifications of each product at the time of order may be changed without notice and may not be as described herein. Please contact Heat Controller's Customer Service Department at 517-787-2100 for specific information on the current design and specifications. Statements and other information contained herein are not express warranties and do not form the basis of any bargain between the parties, but are merely Heat Controller's opinion or commendation of its products.

Model Nomenclature

1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15
M | **E** | **L** | **O** | **2** | **4** | **A** | **G** | **D** | **D** | **O** | **R** | **O** | **V** | **S**

MODEL

M = R-454B Refrigerant

MODEL TYPE

E = Premier Two-Stage Series

SUPPLY & RETURN CONFIGURATIONS

Horizontal Configuration		
	Left	Right
Straight	L	R
Back	B	P

Down Flow Configuration		
	Left	Right
Down	D	N

Vertical Configuration		
	Left	Right
Top	T	K

SIZE

024 060
 036 072
 048

REVISION

A = Current

VOLTAGE¹

G = 208/230-1-60
 J = 208/230-1-60 Refrigerant Detection System

CONTROLS

Control	Standard	Soft Start
DXM2.6	D	4
DXM2.6 with Disconnect	B	-

STANDARD

S = Standard

BLOWER MOTOR

V = Constant Volume (CV) EC

EXTENDED OPTIONS

O = Standard
 P = HWG and Pump

DRAIN PAN/HEAT EXCHANGER OPTIONS³

S = Stainless Steel Drain Pan, Non-Coated Microchannel Air Coil
 R = Stainless Steel Drain Pan, Tin-Coated Air Coil

WATER/HEAT EXCHANGER OPTIONS²

Water Option	Standard	Cupro-Nickel
None	0	Z
MOD Valve, Low System Pressure Drop	C	-
MOD Valve, High System Pressure Drop	-	P
Internal Flow Controller High Head with Check Valve	2	

CABINET

D = Residential

NOTES:

- SE sizes 060 and 072 require J voltage.
- All Open Loop Variable Water Flow Water Circuit Options require a cupronickel Heat Exchanger. All Closed Loop Variable Water Flow Water Circuit Options require a Standard Heat Exchanger. If no Water Circuit Option is selected, then the Heat Exchanger can be either Standard or Cupronickel.
- SE 024-048 offered with Microchannel Air coil only. SE 060-072 offered with Tin-Coated Air coil only.

Models:
ME
024-072

Attentions, Cautions, and Warnings

SAFETY

Warnings, cautions, and notices appear throughout this manual. Read these items carefully before attempting any installation, service, or troubleshooting of the equipment.


DANGER: Indicates an immediate hazardous situation, which if not avoided will result in death or serious injury. DANGER labels on unit access panels must be observed.

WARNING: Indicates a potentially hazardous situation, which if not avoided could result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation or an unsafe practice, which if not avoided could result in minor or moderate injury or product or property damage.

ATTENTION: Notification of installation, operation, or maintenance information, which is important, but which is not hazard-related.

WARNING



Disconnect power supply(ies) before servicing. Refer servicing to qualified service personnel. Electric shock hazard. May result in injury or death!

WARNING

To avoid the release of refrigerant into the atmosphere, the refrigerant circuit of this unit must be serviced only by technicians who meet local, state, and federal proficiency requirements.

WARNING

The installation of water-source heat pumps and all associated components, parts, and accessories which make up the installation shall be in accordance with the regulations of ALL authorities having jurisdiction and MUST conform to all applicable codes. It is the responsibility of the installing contractor to determine and comply with ALL applicable codes and regulations.

WARNING

The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).

WARNING

If unit connected via an air duct system to one or more rooms with R-454B is installed in a room with an area less than A_{min} or has an Effective Dispersal Volume less than minimum, that room shall be without continuously operating open flames or other POTENTIAL IGNITION SOURCES. A flame-producing device may be installed in the same space if the device is provided with an effective flame arrest.

WARNING

All refrigerant discharged from this unit must be recovered WITHOUT EXCEPTION. Technicians must follow industry accepted guidelines and all local, state, and federal statutes for the recovery and disposal of refrigerants. If a compressor is removed from this unit, refrigerant circuit oil will remain in the compressor. To avoid leakage of compressor oil, refrigerant lines of the compressor must be sealed after it is removed.

WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WARNING

An unventilated area where the appliance using FLAMMABLE REFRIGERANTS is installed shall be so constructed that should any refrigerant leak, it will not stagnate so as to create a fire or explosion hazard.

WARNING

Auxiliary devices which may be a POTENTIAL IGNITION SOURCE shall not be installed in the duct work. Examples of such POTENTIAL IGNITION SOURCES are hot surfaces with a temperature exceeding 1,292°F (700°C)

WARNING

An unventilated area where a water-source heat pump is installed and surpasses a R-454B refrigerant charge of 62 oz (1.76 kg), shall be without continuously operating open flames (for example an operating gas appliance) or other POTENTIAL IGNITION SOURCES (for example, an operating electric heater, hot surfaces).

WARNING

Only auxiliary electric heaters approved by the manufacturer shall be installed in connecting ductwork. The installation of any other auxiliary devices is beyond the manufacturer's responsibility.

WARNING

For mechanical ventilation, the lower edge of the air extraction opening where air is exhausted from the room shall not be more than 3.94 inches (100 mm) above the floor. The location where the mechanical ventilation air extracted from the space is discharged shall be separated by a sufficient distance, but not less than 9.84 feet (3 m), from mechanical ventilation air intake openings, to prevent recirculation to the space.

WARNING

Children being supervised are NOT to play with the appliance.

WARNING

Do not pierce or burn.

WARNING

Be aware that refrigerants may not contain odor.

Attentions, Cautions, and Warnings

CAUTION

DO NOT store or install units in corrosive environments or in locations subject to temperature or humidity extremes (e.g., attics, garages, rooftops, etc.). Corrosive conditions and high temperature or humidity can significantly reduce performance, reliability, and service life. Always move and store units in an upright position. Tilting units on their sides will cause equipment damage.

CAUTION

CUT HAZARD - Failure to follow this caution may result in personal injury. Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing heat pumps.

CAUTION

To avoid equipment damage, DO NOT use these units as a source of heating or cooling during the construction process. The mechanical components and filters can quickly become clogged with construction dirt and debris, which may cause system damage and void product warranty.

CAUTION

Maximum allowed inlet water temperature 150°F for HWG applications.

ATTENTION

Servicing shall be performed only as recommended by the manufacturer.

ATTENTION

REFRIGERANT SENSORS for REFRIGERANT DETECTION SYSTEMS shall only be replaced with sensors specified by the appliance manufacturer.

ATTENTION

An unconditioned attic is not considered natural ventilation.

ATTENTION

This unit is equipped with electrically powered safety measures. To be effective, the unit must be electrically powered at all times after installation, other than when servicing.

ATTENTION

For Installation Only in Locations Not Accessible to the General Public.

ATTENTION

LEAK DETECTION SYSTEM installed. Unit must be powered except for service.

General Information

INSPECTION

Upon receipt of the equipment, carefully check the shipment against the bill of lading. Make sure all units have been received. Inspect the packaging of each unit, and inspect each unit for damage. Ensure that the carrier makes proper notation of any shortages or damage on all copies of the freight bill and completes a common carrier inspection report. Concealed damage not discovered during unloading must be reported to the carrier within 15 days of receipt of shipment. If not filed within 15 days, the freight company can deny the claim without recourse.

NOTE: It is the responsibility of the purchaser to file all necessary claims with the carrier. Notify your equipment supplier of all damage within 15 days of shipment.

STORAGE

Equipment should be stored in its original packaging in a clean, dry area. Store units in an upright position at all times. You may stack vertical configurations a maximum of two units high and horizontal configurations a maximum of three units high.

UNIT PROTECTION

Cover units on the job site with either the original packaging or an equivalent protective covering. Cap the open ends of pipes stored on the job site. In areas where painting, plastering, and/or spraying has not been completed, all due precautions must be taken to avoid physical damage to the units and contamination by foreign material. Physical damage and contamination may prevent proper startup and may result in costly equipment cleanup.

Examine all pipes, fittings, and valves before installing any of the system components. Remove any dirt or debris found in or on these components.

PRE-INSTALLATION

Installation, Operation, and Maintenance instructions are provided with each unit. Horizontal equipment is designed for installation above false ceiling or in a ceiling plenum. Other unit configurations are typically installed in a mechanical room. The installation site chosen should include adequate service clearance around the unit. Before unit startup, read all manuals and become familiar with the unit and its operation. Thoroughly check the system before operation.

PREPARE UNITS FOR INSTALLATION AS FOLLOWS:

1. Compare the electrical data on the unit nameplate with ordering and shipping information to verify that the correct unit has been shipped
2. Keep the cabinet covered with the original packaging until installation is complete and all plastering, painting, etc. is finished
3. Verify refrigerant tubing is free of kinks or dents and that it does not touch other unit components
4. Inspect all electrical connections. Connections must be clean and tight at the terminals
5. Remove any blower support packaging (water-to-air units only)
6. Some airflow patterns are field convertible (horizontal units only). Locate the airflow conversion section of this IOM
7. Locate and verify any hot water generator (HWG), hanger, or other accessory kit located in the compressor section or blower section

CHECKS TO THE AREA

Prior to beginning work on systems containing FLAMMABLE REFRIGERANTS, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the REFRIGERATING SYSTEM, these steps shall be completed prior to conducting work on the system.

General Information

Work Procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.

General Work Area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.

Checking for Presence of Refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

Presence of Fire Extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

No Ignition Sources

No person carrying out work in relation to a REFRIGERATION SYSTEM which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

Ventilated Area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

Checks to the Refrigeration Equipment

The following checks shall be applied to installations using FLAMMABLE REFRIGERANTS:

- The actual REFRIGERANT CHARGE is in accordance with the room size within which the refrigerant containing parts are installed
- The ventilation machinery and outlets are operating adequately and are not obstructed
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected
- Refrigerant piping or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded

Checks to Electrical Devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- Capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking
- That no live electrical components and wiring are exposed while charging, recovering, or purging the system
- That there is continuity of earth bonding

General Information

REPAIR TO INTRINSICALLY SAFE COMPONENTS

Intrinsically safe components must be replaced.

CABLING

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

REQUIRED AREA FOR INSTALLATION

The minimum room area of the space (A_{\min}) or a minimum room area of conditioned space (TA_{\min}) shall be corrected for unit's location altitude by multiplying A_{\min} or TA_{\min} by the applicable altitude adjustment factor (AF) for building ground-level altitude (H_{alt}) in feet or meters, as shown in the **Altitude Adjustment** table.

NOTE:

- You can use Imperial or Metric measurements to calculate A_{\min} or TA_{\min} .
- The maximum allowable altitude of installation for this product is 9,843 ft (3,000 m).

Table 1: Altitude Adjustment

H_{alt} ft (m)	AF
0 (0)	1.00
656 (200)	1.00
1,312 (400)	1.00
1,968 (600)	1.00
2,624 (800)	1.02
3,280 (1,000)	1.05
3,937 (1,200)	1.07
4,593 (1,400)	1.10
5,249 (1,600)	1.12
5,905 (1,800)	1.15
6,561 (2,000)	1.18
7,218 (2,200)	1.21
7,874 (2,400)	1.25
8,530 (2,600)	1.28
9,186 (2,800)	1.32
9,843 (3,000)	1.36

Refrigerant System Servicing

REFRIGERANT SYSTEM

Verify that air- and water-flow rates are at proper levels before servicing the refrigerant circuit. To maintain sealed-circuit integrity, do not install service gauges unless unit operation appears abnormal. Reference the operating charts for pressures and temperatures.

Removal and Evacuation

When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration. The following procedure shall be adhered to:

- Safely remove refrigerant following local and national regulations
- Evacuate
- Purge the circuit with Nitrogen
- Evacuate
- Continuously flush or purge with Nitrogen when using flame to open circuit
- Open the circuit

The refrigerant charge shall be recovered into the correct recovery cylinders as venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, refrigerant purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for FLAMMABLE REFRIGERANT). This process shall be repeated until no refrigerant remains in the system (optional for FLAMMABLE REFRIGERANT). When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

The outlet for the vacuum pump shall not be close to any potential ignition sources, and ventilation shall be available.

Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed:

- Ensure that contamination of different refrigerants does not occur when using charging equipment
- Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them
- Cylinders shall be kept in an appropriate position according to the instructions to ensure charging with liquid refrigerant
- Ensure that the REFRIGERATION SYSTEM is grounded prior to charging the system with refrigerant
- Label the system when charging is complete (if not already):
 - For packaged units, the data plate dictates the charge level
 - For split systems, write the charge level on the data plate
- Extreme care shall be taken not to overfill the REFRIGERATION SYSTEM

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

Leak Detection

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems.

A2L-Compliant electronic leak detectors may be used to detect refrigerant leaks but, in the case of FLAMMABLE REFRIGERANTS, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of Ignition and is suitable for the refrigerant used.

Refrigerant System Servicing

Leak-detection equipment shall be set at a percentage of the lower flammability limit of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25% maximum) is confirmed.

Leak-detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

NOTE:

Examples of leak detection fluids are:

- Bubble method
- Fluorescent method agents

If a leak is suspected, all naked flames shall be removed/extinguished.

If a refrigerant leak that requires brazing is identified, all of the refrigerant shall be recovered from the system, or isolated (by means of shutoff valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to Removal and Evacuation section.

DECOMMISSIONING

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is a recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before the task is commenced.

1. Become familiar with the equipment and its operation
2. Isolate system electrically

3. Before attempting the procedure, ensure that:
 - Mechanical-handling equipment is available, if required, for handling refrigerant cylinders
 - All personal protective equipment is available and being used correctly
 - The recovery process is supervised at all times by a competent person
 - Recovery equipment and cylinders conform to the appropriate standards
4. Pump down refrigerant system, if possible
5. If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system
6. Ensure that cylinder is situated on the scales before recovery takes place
7. Start the recovery machine and operate in accordance with instructions
8. Do not overfill cylinders (no more than 80% volume liquid charge)
9. Do not exceed the maximum working pressure of the cylinder, even temporarily
10. When the cylinders have been filled correctly and the process completed, ensure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off
11. Recovered refrigerant shall not be charged into another REFRIGERATING SYSTEM unless it has been cleaned and checked

Labeling - Upon decommissioning, equipment shall be labeled stating that it has been decommissioned and emptied of refrigerant. The label shall be dated and signed.

Refrigerant System Servicing

Models:
ME
024-072

RECOVERY

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labeled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shutoff valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted.

In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.

Models:
ME
024-072

Minimum Installation Area

MINIMUM INSTALLATION AREA

Minimum area where a blower-equipped unit must be installed, and mechanical/natural ventilation is not required

Model	Charge (oz)	Configuration	Minimum Installation Area ft ² (m ²) [A _{min}]			
			Floor	Window	Wall	Ceiling
ME060	102	Vertical	351 (32.61)	195 (18.12)	112 (10.41)	92 (8.55)
		Horizontal	351 (32.61)	209 (19.42)	116 (10.78)	95 (8.83)
ME072	109	Vertical	375 (34.84)	209 (19.42)	120 (11.15)	99 (9.20)
		Horizontal	375 (34.84)	223 (20.72)	124 (11.52)	102 (9.48)

A_{min} = Minimum area where unit is installed where unit has incorporated airflow

h_{inst} (floor) = 0.0 ft (0.0 m)

h_{inst} (window) = 3.3 ft (1.0 m)

h_{inst} (wall) = 5.9 ft (1.8 m)

h_{inst} (ceiling) = 7.2 ft (2.2 m)

Minimum area and CFM requirements for the conditioned space

Model	Charge (oz)	Minimum CFM [Q _{min}]	
		TA _{min} ft ² (m ²)	Q _{min} (ft ³ /min)
ME060	102	5.2 (0.48)	173 (293.07)
ME072	109	5.6 (0.52)	184 (313.19)

TA_{min} = Minimum conditioned area for venting leaked refrigerant

Q_{min} = Minimum ventilation flow rate for conditioned space if space is less than TA_{min}

Minimum area of opening for natural ventilation

Model	Charge (oz)	Anv _{min} in ² (cm ²)
ME060	102	135.65 (344.55)
ME072	109	140.23 (356.18)

Anv_{min} = Minimum natural ventilation area opening

When the openings for connected rooms or natural ventilation are required, the following conditions shall be applied:

- The area of any openings above 11.8 inches (300 mm) from the floor shall not be considered in determining compliance with Anv_{min}.
- At least 50% of the required opening area Anv_{min} shall be below 7.8 inches (200 mm) from the floor.
- The bottom of the lowest openings shall not be higher than the point of release when the unit is installed and not more than 3.9 inches (100 mm) from the floor.
- Openings are permanent openings which cannot be closed.
 - For openings extending to the floor, the height shall not be less than 0.78 inch (20 mm) above the surface of the floor covering.
- A second higher opening shall be provided. The total size of the second opening shall not be less than 50% of minimum opening area for Anv_{min} and shall be at least 3.3 ft (1.5 m) above the floor.

Physical Data

Models:
ME
024-072

ME Series

Model	024	036	048	060	072
Factory Charge R-454B - (oz.)	34	43	59	102	109
Refrigerant Leak Detection System	O	O	O	R	R
Number of Sensors	2	2	2	2	2
Water Connection Size					
Swivel	1"	1"	1"	1"	1"
System Water Volume (gallons) ¹	0.65	0.74	0.89	0.94	0.94
Vertical					
Filter Standard - 2" Throwaway	28 x 24	28 x 29.5	32 x 29.5	36 x 29.5	36 x 29.5
Weight - Operating (lbs.)	298.0	359.0	448.0	475.0	475.0
Weight - Packaged (lbs.)	208.0	369.0	458.0	485.0	485.0
Horizontal					
Filter Standard - 2" Throwaway	2 - 18 x 18	1 - 12 x 20 1 - 20 x 25	1 - 18 x 20 1 - 20 x 24	2 - 20 x 24	2 - 20 x 24
Weight - Operating (lbs.)	298.0	359.0	448.0	475.0	475.0
Weight - Packaged (lbs.)	308.0	369.0	458.0	485.0	485.0
Downflow					
Filter Standard - 2" Throwaway	28.0 x 24.0	28.0 x 29.5	32.0 x 29.5	36.0 x 29.5	36.0 x 29.5
Weight - Operating (lbs.)	298.0	359.0	448.0	475.0	475.0
Weight - Packaged (lbs.)	308.0	369.0	458.0	485.0	485.0
Hot Water Generator					
Swivel - Residential Class	1"	1"	1"	1"	1"
Weight - HWG Adder (lbs.)	313.0	374.0	463.0	490.0	490.0

Notes:

- All dimensions displayed above are in inches unless otherwise marked.
 - All units have TXV expansion device and ½-inch and ¾-inch electrical knockouts.
 - The stainless-steel condensate drain connection is ¾-inch MPT.
 - MPT = Male Pipe Thread
 - O = Optional, R = Required
1. Volume without water options.

Unit Maximum Water Working Pressure

Options	Max Pressure PSIG [kPa]
Base Unit	300 [2,068]
Internal Modulating Valve	300 [2,068]
Internal Variable-Speed Pump	145 [1,000]

Horizontal Installation

HORIZONTAL UNIT LOCATION

Units are not designed for outdoor installation. Locate the unit in an INDOOR area that allows enough space for service personnel to perform typical maintenance or repairs without removing unit from the ceiling. Horizontal units are typically installed above a false ceiling or in a ceiling plenum. Never install units in areas subject to freezing or where humidity levels could cause cabinet condensation (such as unconditioned spaces subject to 100% outside air). During installation, consider accessibility for filter and access panel removal. Provide sufficient room to make water, electrical, and duct connection(s).

If the unit is located in a confined space, such as a closet, make provisions for return air to freely enter the space by means of a louvered door, etc. Remove any access panel screws that are difficult to remove after the unit is installed prior to setting the unit. Refer to the **Typical Horizontal Unit Installation** figure for an example of a typical installation. Refer to product catalog or engineering design guide for dimensional data.

Conform to the following guidelines when selecting unit location:

1. Provide a hinged access door in concealed-spline or plaster ceilings. Provide removable ceiling tiles in T-bar or lay-in ceilings. Refer to horizontal unit dimensions for specific series and model in the product catalog. Size the access opening to accommodate the service technician during the removal or replacement of the compressor, control, or blower assembly.
2. Provide access to hanger brackets, water valves, and fittings. Provide screwdriver clearance to access panels, discharge collars and all electrical connections.
3. DO NOT obstruct the space beneath the unit with piping, electrical cables, and other items that prohibit future removal of components or the unit itself.
4. Use a manual portable jack/lift to lift and support the weight of the unit during installation and servicing.

The installation of water-source heat pump units and all associated components, parts and accessories that make up the installation shall be in accordance with the regulations of ALL authorities having jurisdiction and MUST conform to all applicable codes. It is the responsibility of the installing contractor to determine and comply with ALL applicable codes and regulations.


NOTE: Minimum clearances for installation are the same as the minimum required service clearances. Consult the Horizontal Installation Service Access diagram for more information.

MOUNTING HORIZONTAL UNITS

Horizontal units have four hanger brackets partially attached at the factory; one at each corner. Enclosed within the unit, there is a hanger kit hardware bag containing vibration isolation grommets, washers, screws, and a hanger installation instruction page. Add one screw from the hardware bag to each hanger bracket before unit installation. Tighten each screw to 75 in-lbs (8.5 Nm). See the **Hanger Bracket** figure for more information. Refer to the hanger installation instruction page contained in the hardware bag for details of final hanger bracket attachment and unit suspension.

Use four field-supplied threaded rods and factory-provided vibration isolators to suspend the unit. Safely lift the unit into position supporting the bottom of the unit. Ensure the top of the unit is not in contact with any external objects. Connect the top end of the four all-thread rods, slide rods through the brackets and grommet then assemble washers and double nuts at each rod. Ensure that the unit is approximately level and that the threaded rod extends past the nuts.


Figure 1: Hanger Bracket

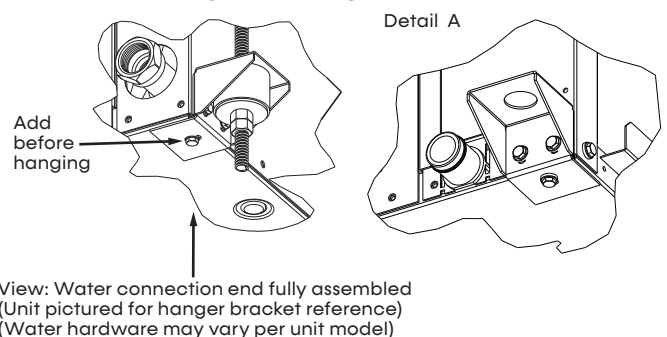


Horizontal Installation Service Access

Models:
ME
024-072


LEFT RETURN BACK DISCHARGE

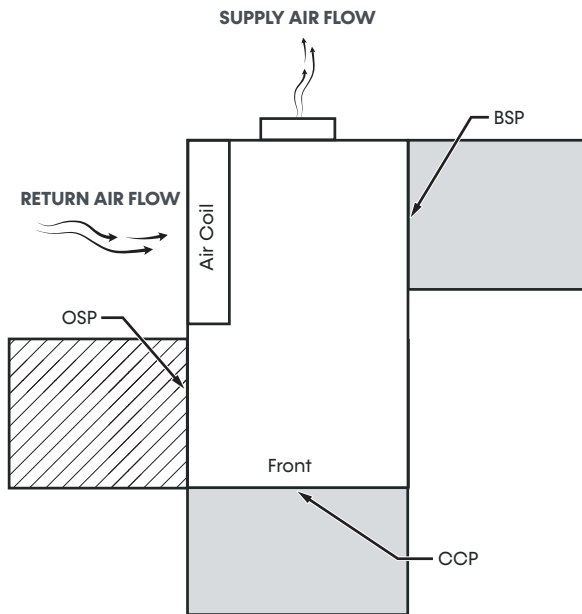


RIGHT RETURN BACK DISCHARGE

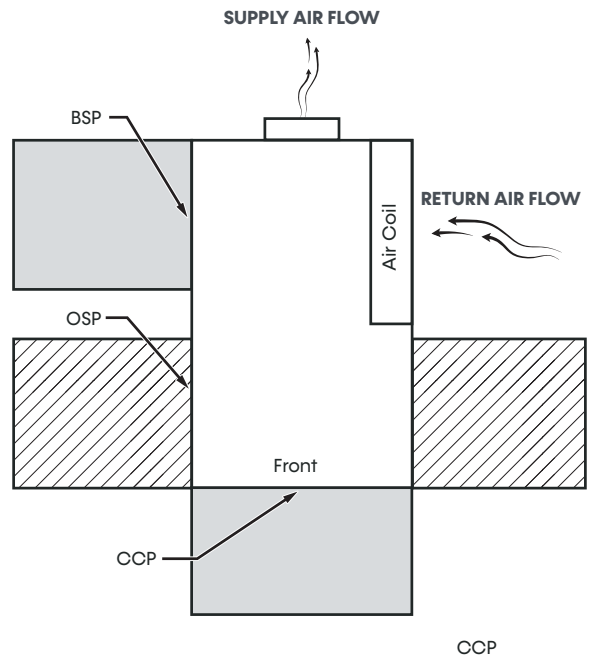

LEFT RETURN STRAIGHT DISCHARGE

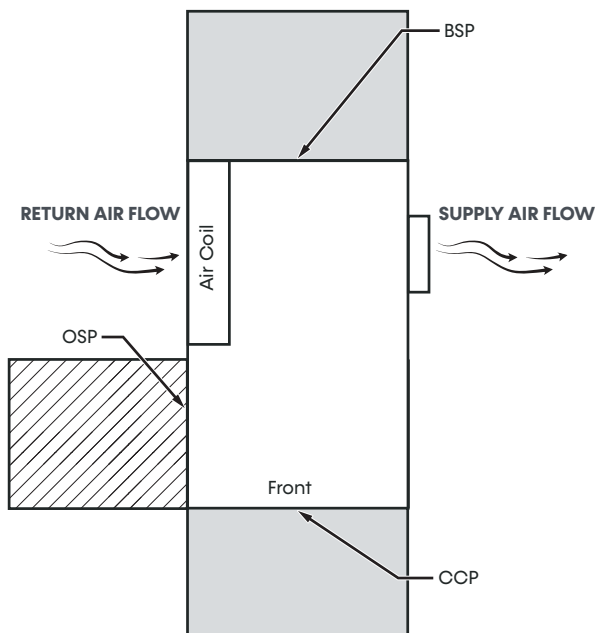

RIGHT RETURN STRAIGHT DISCHARGE

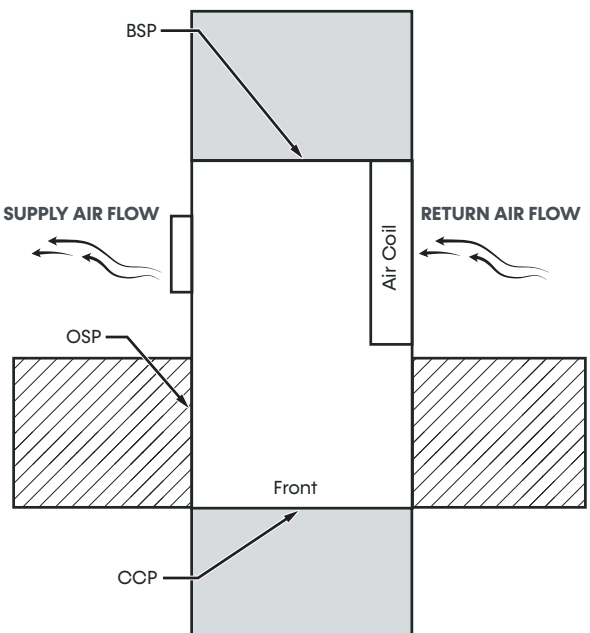

NOTES

1. While clear access to all removable panels is not required, installer should take care to comply with all building codes and allow adequate clearance for future field service.
2. CCP and BSP requires 2-feet of service access.
3. Blower service access is through back panel on straight discharge units or through panel opposite air coil on back discharge units.
4. OSP are removable panels that provide additional access to the units interior. Clear access to OSP panels is not required and they are not to be used in place of the mandatory CCP and BSP panels.

- = Mandatory Service Access 2-foot (61 cm)
- = Optional Service Access 2-foot (61 cm)

LEGEND

- CCP = CONTROL/COMPRESSOR ACCESS**
- BSP = BLOWER SERVICE PANEL**
- OSP = OPTIONAL SERVICE PANEL (NOT REQUIRED)**

Models:
ME
024-072

Horizontal Installation

Figure 2: Horizontal Unit Pitch


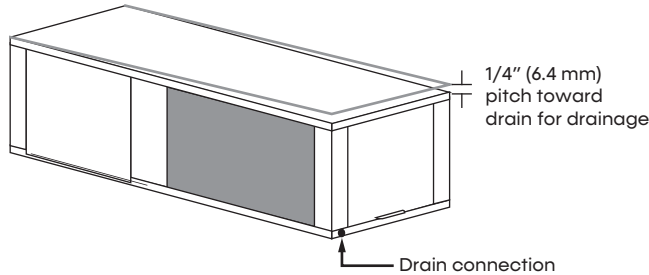


Figure 3: Typical Horizontal Unit Installation

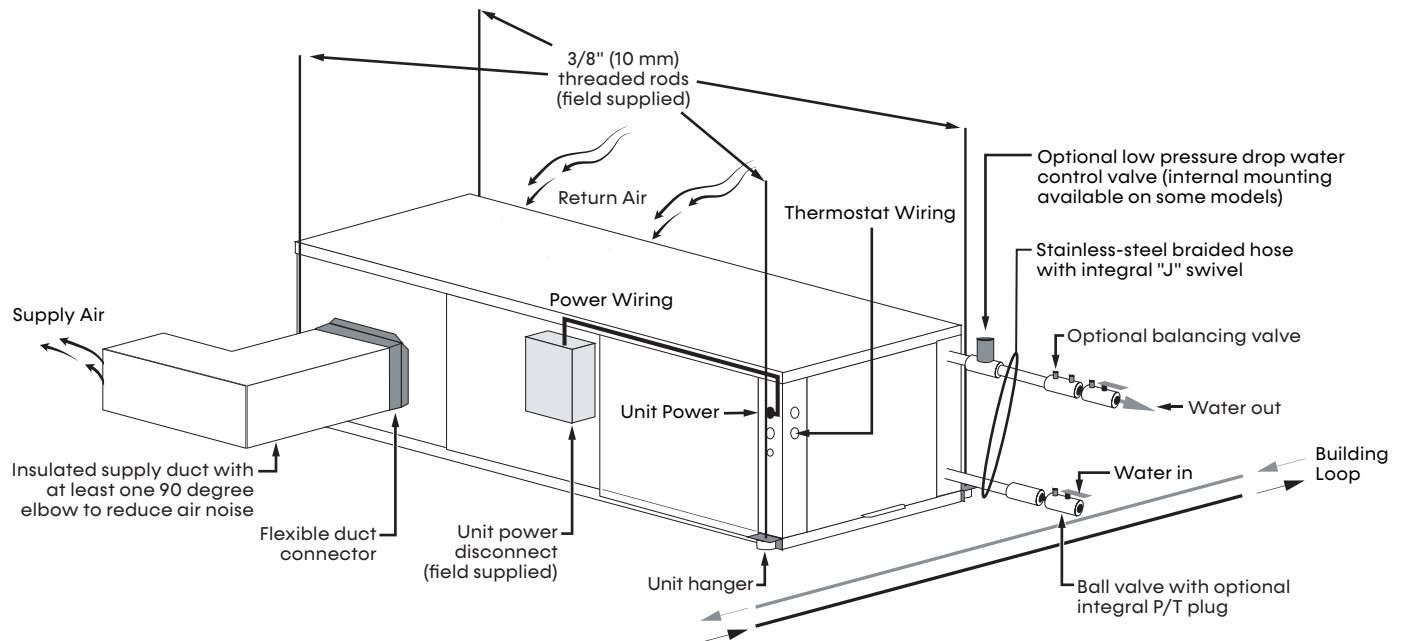

AIR COIL

To obtain maximum performance, clean the air coil before startup. Use a 10% solution of dishwasher detergent and water for both sides of the coil. Follow with a thorough water rinse. **Do not use ultraviolet-based antibacterial systems.**

⚠ ATTENTION

Installation Note - Ducted Return: Many horizontal WSHPs are installed in a return air ceiling plenum application (above ceiling). Vertical WSHPs are commonly installed in a mechanical room with free return (e.g. louvered door). Filter rails are the industry standard and are included on commercial heat pumps only for holding the filter. For ducted return applications, the filter rail must be removed and replaced with a duct flange or filter frame. Canvas or flexible connectors should also be used to minimize vibration between the unit and ductwork.

Horizontal Installation

Models:
ME
024-072

CONDENSATE PIPING

A condensate drain line must be installed and pitched away for the unit to allow for proper drainage. This connection must meet all local plumbing/building codes.

To improve the condensate drainage, pitch the unit toward the drain using the **Horizontal Condensate Connection** figure as an example. Ensure that unit pitch does not cause condensate leaks inside the cabinet.

Install condensate trap at each unit with the top of the trap positioned below the unit condensate drain connection using the **Horizontal Condensate Connection** figure as an example. Design the depth of the trap (water-seal) based upon the amount of ESP capability of the blower (where 2-inches [51 mm] of ESP capability requires 2-inches [51 mm] of trap depth). As a general rule, 1 ½ inch (38 mm) trap depth is the minimum.


Each unit must be installed with its own individual trap and connection to the condensate line (main) or riser. Provide a means to flush or blow out the condensate line. DO NOT install units with a common trap and/or vent.

Always vent the condensate line when dirt or air can collect in the line or a long horizontal drain line is required. Also vent when large units are working against higher external static pressure than other units connected to the same condensate main since this may cause poor drainage for all units on the line. **WHEN A VENT IS INSTALLED IN THE DRAIN LINE, IT MUST BE LOCATED AFTER THE TRAP IN THE DIRECTION OF THE CONDENSATE FLOW.**

STAINLESS STEEL DRAIN PANS

The condensate connection is ¾-inch MPT. Field-provided female adapter required for condensate drain connection.

Figure 4: Horizontal Condensate Connection

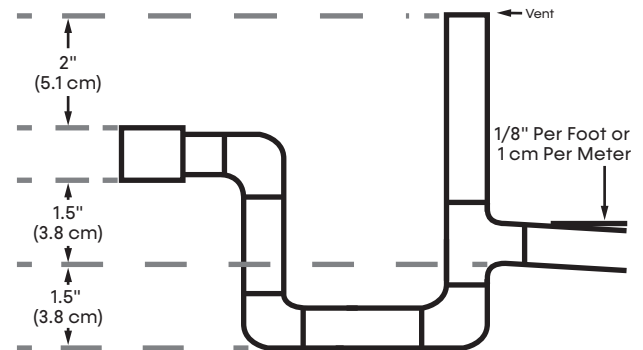

CAUTION

Ensure condensate line is pitched toward drain 1/8 inch per foot (11 mm per m) of run.

Duct System Installation

DUCT SYSTEM INSTALLATION

Proper duct sizing and design is critical to the performance of the unit. The duct system should be designed to allow adequate and even airflow through the unit during operation. Airflow through the unit **MUST** be at or above the minimum rated airflow for a given unit size to avoid equipment damage. Design duct systems for quiet operation. Refer to the following horizontal and vertical duct system example figures:

- **Typical Horizontal Unit Installation**
- **Typical Vertical Unit Installation Using Ducted Return Air**

A flexible connector is recommended for both discharge and return air duct connections on metal duct systems to eliminate the transfer of vibration to the duct system. To maximize sound attenuation of the unit blower, include internal fiberglass duct liner in the supply and return plenums or construct them using ductboard for the first few feet. Using the unit with uninsulated ductwork in an unconditioned space is not recommended, as the unit's performance may be adversely affected.

Include at least one 90-degree elbow in the supply duct to reduce air noise. If air noise or excessive air flow is a problem, adjust the blower speed. For airflow charts, consult the product catalog for the series and model of the specific unit.

Before a unit is connected to existing ductwork, check to ensure that the ductwork has the capacity to handle the airflow required for the unit. If ducting is too small, as in the replacement of a heating only system, install larger ductwork. Check all existing ductwork for leaks and repair as necessary.

An unventilated area where water source heat pump is installed and surpasses a R-454B refrigerant charge of 62 oz (1.76 kg), shall be without continuously operating open flames (for example an operating gas appliance) or other **POTENTIAL IGNITION SOURCES** (for example an operating electric heater, hot surfaces).

Only auxiliary electric heaters approved by the manufacturer shall be installed in connecting ductwork. The installation of any other auxiliary devices is beyond the manufacturer's responsibility.

For duct-connected units, false ceilings or drop ceilings may be used as a return air plenum as long as the manufacturer's RDS is installed as shown in the **RDS Installation** figure in the *Refrigerant Detection System* section.

WARNING

Ducts connected to an appliance shall not contain a **POTENTIAL IGNITION SOURCE**.

WARNING

Keep any required ventilation openings clear of obstruction.

WARNING

For mechanical ventilation, the lower edge of the air extraction opening where air is exhausted from the room shall not be more than 3.94 inches (100 mm) above the floor. The location where the mechanical ventilation air extracted from the space is discharged shall be separated by a sufficient distance, but not less than 9.84 feet (3 m), from mechanical ventilation air intake openings, to prevent recirculation to the space.

Field Conversion of Air Discharge

OVERVIEW

Convert horizontal unit blower assembly between side (straight) and back (end) discharge using the instructions below.

NOTE: It is not possible to field convert return air between left or right return models due to the necessity of refrigeration copper piping changes.

PREPARATION

Convert the unit's discharge configuration on the ground before hanging. If the unit is already hung, take it down for field conversion. If the unit to be converted includes a factory-installed RDS, see the *Move the RDS Sensor After Field Conversion* section.

SIDE-TO-BACK DISCHARGE CONVERSION

1. Place unit in well lit area. Remove the screws as shown in the **Left Return – Side-to-Back** figure to free top panel and discharge panel.
2. Lift out the access panel and set aside. Lift and rotate the discharge panel to the other position as shown, being careful with the blower wiring.
3. Check blower wire routing and connections for tension or contact with sheet metal edges. Re-route if necessary.
4. Check refrigerant tubing for contact with other components.
5. Reinstall the top panel and screws noting that the location for some screws have changed.
6. Manually spin the fan wheel to ensure that the wheel is not rubbing or obstructed.
7. Replace access panels.

BACK-TO-SIDE DISCHARGE CONVERSION

If the discharge is changed from back to side, use above instruction noting that illustrations are reversed.

LEFT VERSUS RIGHT RETURN

The conversion process of side-to-back or back-to-side discharge for either right or left return configuration is the same. In some cases, it is possible to rotate the entire unit 180 degrees if the return air connection needs to be on the opposite side. **NOTE: rotating the unit moves the piping to the other end of the unit.**

Figure 5: Left Return – Side-to-Back


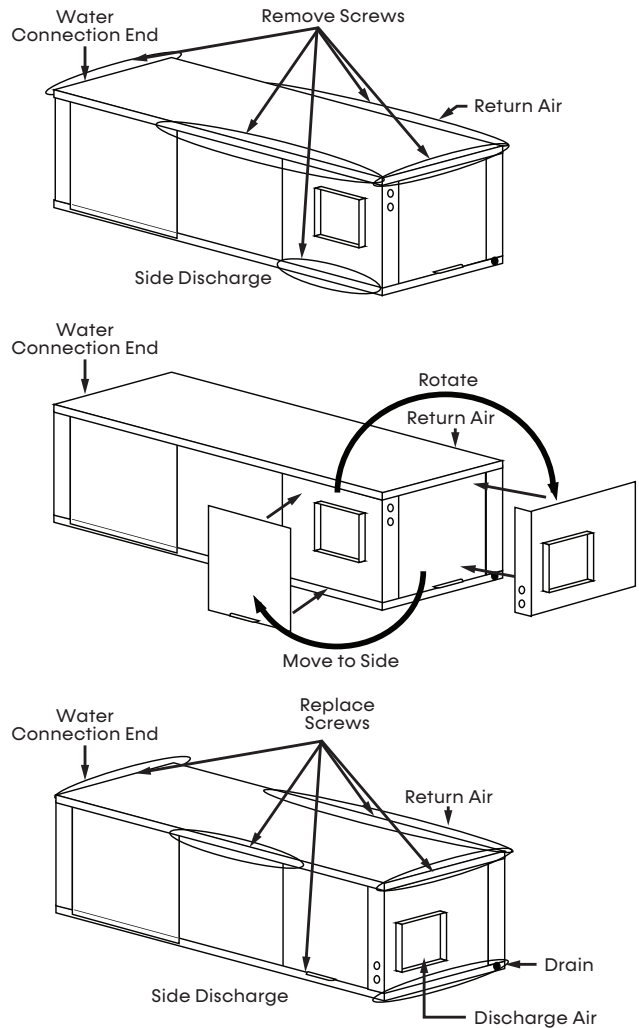


Figure 6: Right Return – Side-to-Back

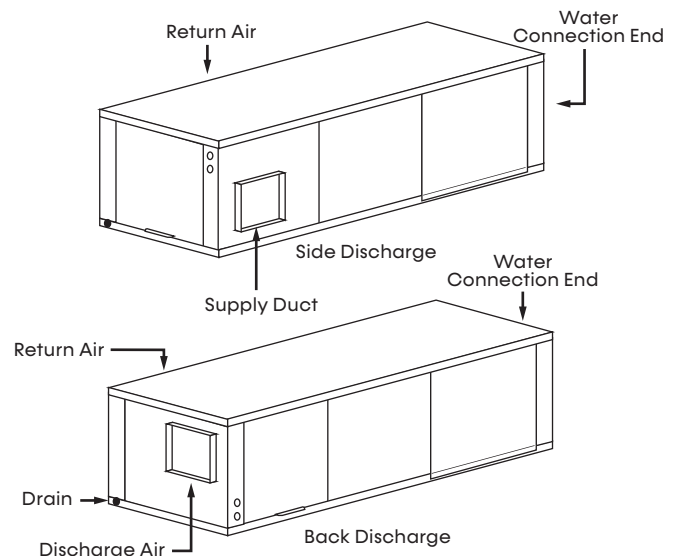


Models:
ME
024-072

Relocation of RDS After Field Conversion


REFRIGERANT DETECTION SYSTEM SENSOR LOCATIONS

After field converting air discharge on units with a factory-installed Refrigerant Detection System (RDS), move the RDS sensor to the location the unit configuration requires. The following examples detail RDS sensor location per return and discharge configuration.


**Left Return Back Discharge
Sensor on the Right Side of the Unit**

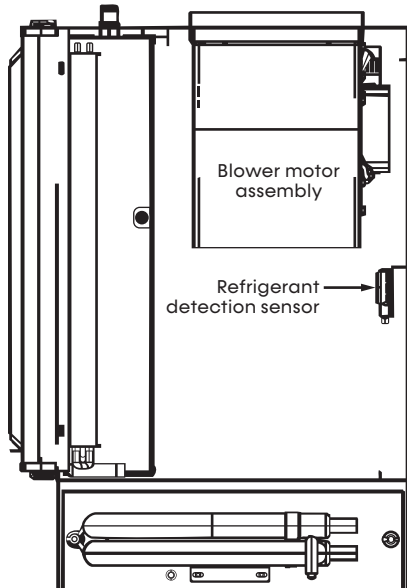


**Right Return Back Discharge
Sensor on the Left Side of the Unit**

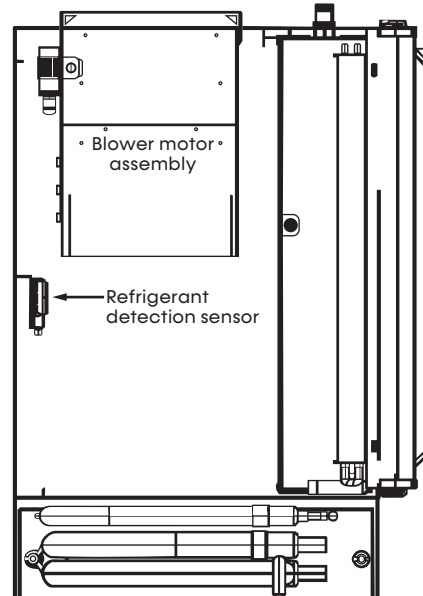

**Left Return Straight Discharge
Sensor on the Back Side of the Unit**

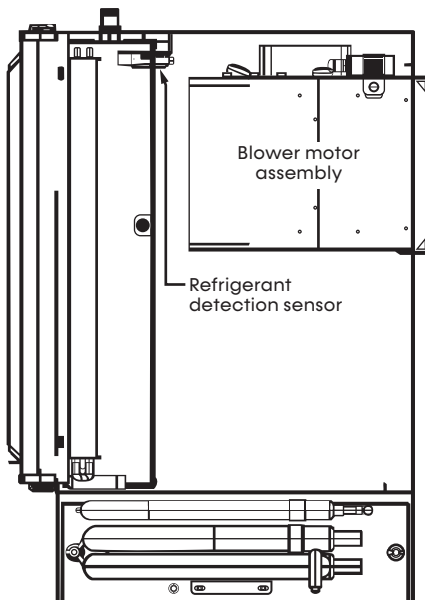

**Right Return Straight Discharge
Sensor on the Back Side of the Unit**

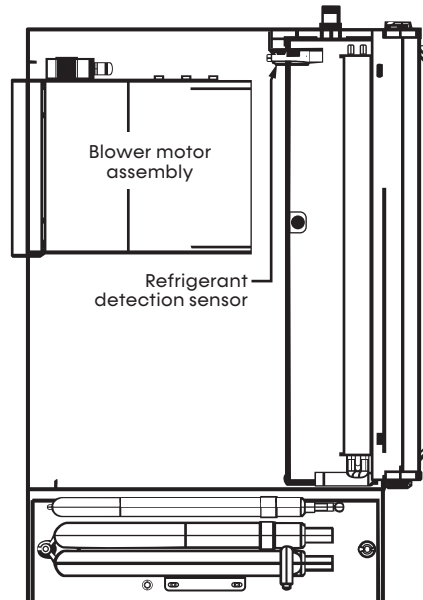

Vertical Installation

VERTICAL UNIT LOCATION

Units are not designed for outdoor installation. Locate the unit in an INDOOR area that allows enough space for service personnel to perform typical maintenance or repairs without removing unit from the mechanical room/closet. Never install units in areas subject to freezing or where humidity levels could cause cabinet condensation (such as unconditioned spaces subject to 100% outside air). Allow for access for easy removal of the filter and access panels. Provide sufficient room to make water, electrical, and duct connection(s). **NOTE: Minimum clearances for installation are the same as the minimum required service clearances. Consult the service clearances on for reference of installation clearances.**

If the unit is located in a confined space, such as a closet, provisions must be made for return air to freely enter the space by means of a louvered door, etc. Remove any access panel screws that may be difficult to remove after the unit is installed prior to setting the unit. Refer to submittal data or the engineering design guide for dimensional data. Use the following example figures for typical vertical installation references:

- **Vertical Unit Mounting**

- **Typical Vertical Unit Installation Using Ducted Return Air**

1. For optimal sound performance, install the unit on a piece of rubber, neoprene, or other mounting pad material for sound isolation. The pad should be at least $\frac{3}{8}$ -inch (10 mm) to $\frac{1}{2}$ -inch (13 mm) in thickness. The vibration isolation pad should cover the entire base of the unit and slightly extend past all four edges of the base.
2. Provide adequate clearance for filter replacement and drain pan cleaning. Do not block filter access with piping, conduit, or other materials.
3. Provide access for fan and fan motor maintenance and for servicing the compressor and coils without removing the unit.
4. Provide an unobstructed path to the unit within the closet or mechanical room. Space should be sufficient to allow removal of the unit, if necessary.

5. In limited side access installations, pre-removal of the control box side mounting screws will allow control box removal for future servicing.
6. Provide access to water valves and fittings and screwdriver access to the unit side panels, discharge collar and all electrical connections.

Figure 7: Vertical Unit Mounting


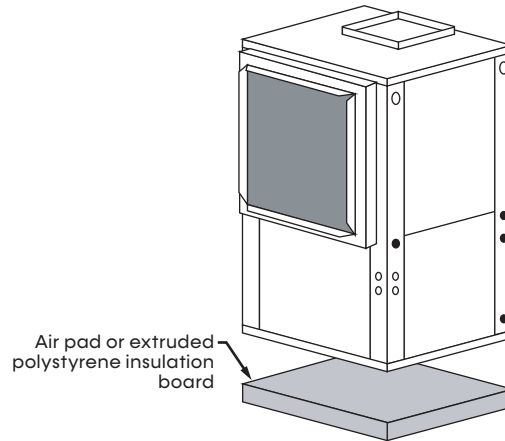


Figure 8: Typical Vertical Unit Installation Using Ducted Return Air

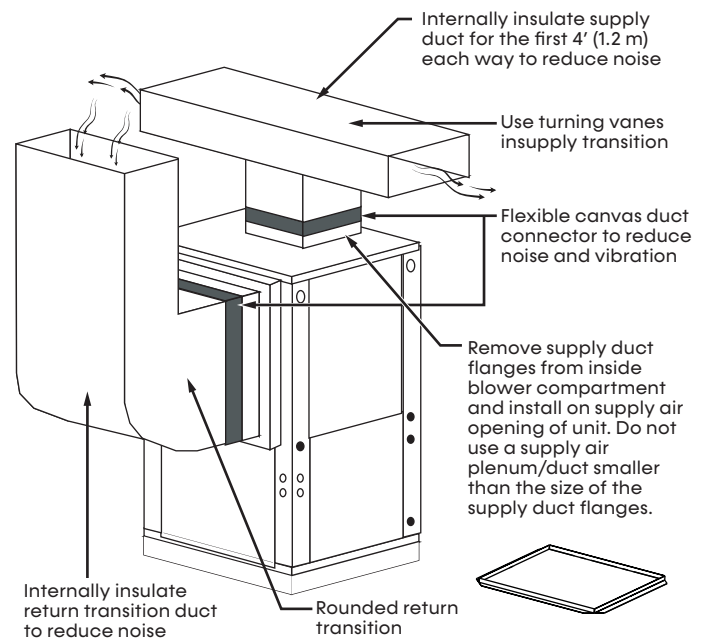

Models:
ME
024-072


Vertical Installation

SOUND ATTENUATION FOR VERTICAL UNITS

Sound attenuation is achieved by enclosing the unit within a small mechanical room or a closet. Additional measures for sound control include the following:

1. Mount the unit so that the return air inlet is 90 degrees to the return air grille. Use the **Vertical Sound Attenuation** figure for reference. Install a sound baffle as illustrated to reduce line-of-sight sound transmitted through return air grilles.
2. Mount the unit on a rubber or neoprene isolation pad to minimize vibration transmission to the building structure.

Figure 9: Vertical Sound Attenuation

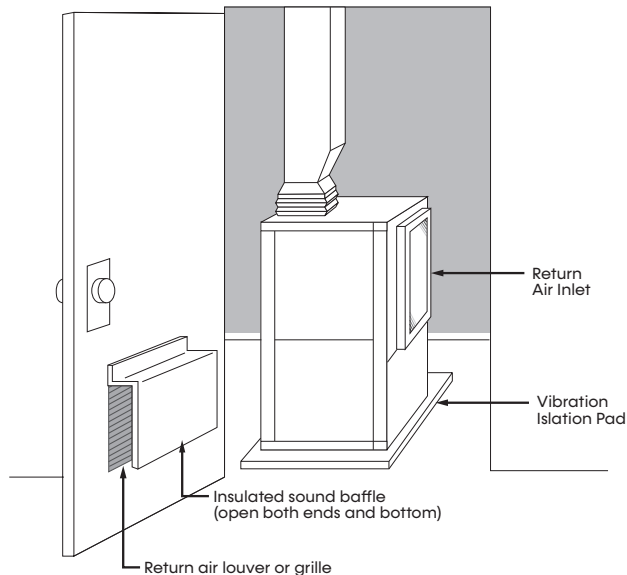

CONDENSATE PIPING FOR VERTICAL UNITS

A condensate line must be installed and pitched away from the unit to allow for proper drainage. This connection must meet all local plumbing and building codes.

Install condensate traps at each unit with the top of the trap positioned below the unit condensate drain connection. Design the depth of the trap (water-seal) based on the amount of ESP capability of the blower, where 2-inches (51 mm) of ESP capability requires 2-inches (51 mm) of trap depth. As a general rule, 1 1/2-inches (38 mm) of trap depth is the minimum.

Always vent the condensate line when dirt or air can collect in the line or a long horizontal drain line is required. Also vent when large units are working against higher external static pressure than other units connected to the same condensate main since this may cause poor drainage for all units on the line. **WHEN A VENT IS INSTALLED IN THE DRAIN LINE, IT MUST BE LOCATED AFTER THE TRAP IN THE DIRECTION OF THE CONDENSATE FLOW.**


Each unit must be installed with its own individual vent (where necessary) and a means to flush or blow out the condensate drain line. Do not install units with a common trap and/or vent.

Condensate drain connection is a 3/4-inch MPT that couples to 3/4-inch FPT schedule 40/80 PVC. If the connection is not secure, the connection may leak.


Vertical Installation Service Access

Models:
ME
024-072

LEFT RETURN

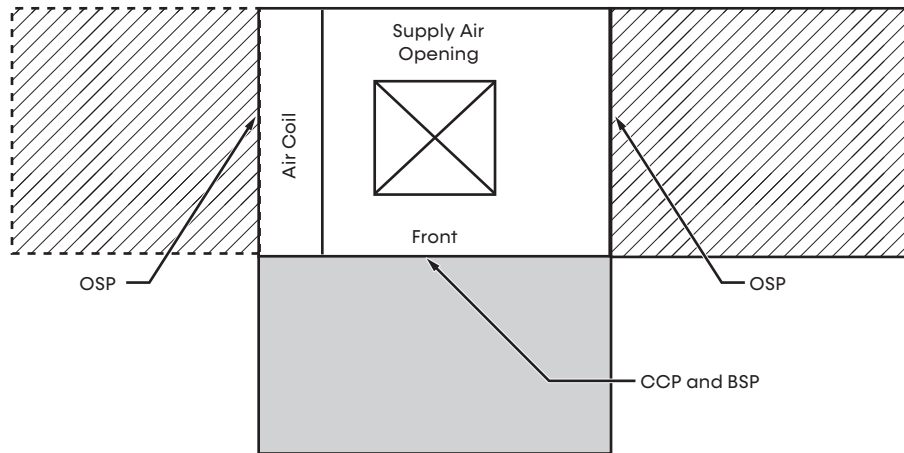

RIGHT RETURN

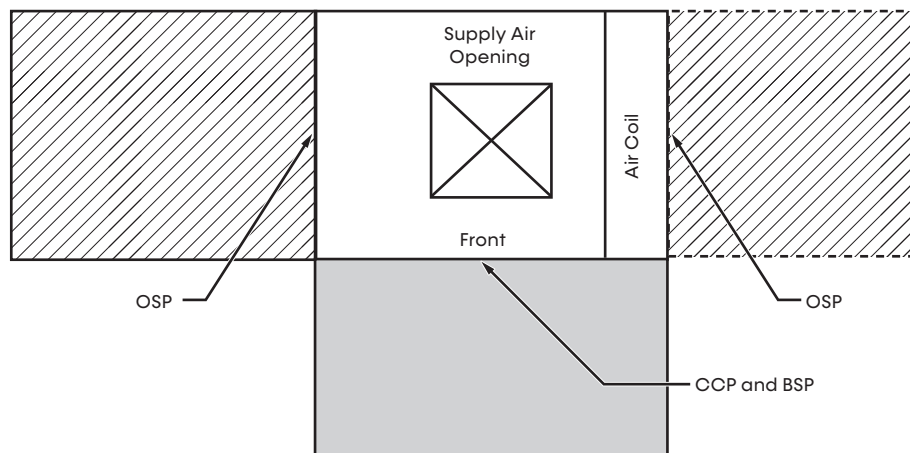

NOTES

1. While clear access to all removable panels is not required, installer should take care to comply with all building codes and allow adequate clearance for future field service.
2. Front and side access is preferred for service access. However, all components may be serviced from the front access panel if side access is not available.
3. OSP are removable panels that provide additional access to the units interior. Clear access to OSP panels is not required and they are not to be used in place of the mandatory CCP and BSP panels.
4. Top supply air is shown, the same clearances apply to bottom supply air units.

 = Mandatory Service Access 2 feet (61 cm)

 = Optional Service Access 2 feet (61 cm)

LEGEND

CCP = CONTROL/COMPRESSOR ACCESS
BSP = BLOWER SERVICE PANEL
OSP = OPTIONAL SERVICE PANEL (NOT REQUIRED)


Piping Installation

WATER CONNECTIONS

Swivel piping fittings are used for water connections that are rated for 300 psi (2,068 kPa) operating pressure. The connections have a rubber gasket seal similar to a garden hose gasket, which when mated to the flush end of most 1-inch threaded male pipe fittings provides a leak-free seal without the need for thread sealing tape or joint compound. However, due to selected options, unit maximum operating pressure may be lower. Use the **Unit Maximum Working Pressure** table to verify working pressures for all options. Check for burrs and ensure that the rubber seal is in the swivel connector prior to attempting any connection (rubber seals are shipped attached to the swivel connector). **DO NOT OVERTIGHTEN** or leaks may occur.

The female locking ring is threaded onto the pipe threads which holds the male pipe end against the rubber gasket, and seals the joint. **HAND TIGHTEN ONLY! DO NOT OVERTIGHTEN!**

Figure 10: Water Connection

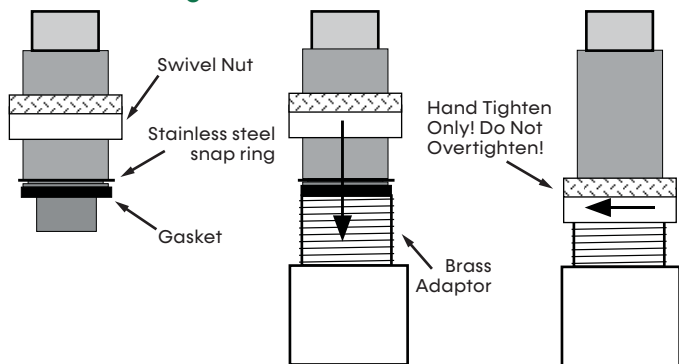

Applications

Variable Water Flow Heat Pump

Models:
ME
024-072

Variable Water Flow is a revolutionary new, intelligent, and efficient way to circulate water (or water plus antifreeze) using internal, variable-speed water flow control. The factory-installed high efficiency variable-speed pumps uses almost half the wattage of traditional fixed speed pump. Variable Water Flow technology improves the life expectancy of the unit by reducing the amount of energy required to optimize the flow of water throughout the system and also reduces the space, cost, and labor required to install external water flow control mechanisms (flow controllers, solenoid and flow control valves).

VARIABLE WATER FLOW CONFIGURATIONS

- **Low System Pressure Drop Modulating Motorized Valve – Typical for External Central Pumping.**

Primarily for use on multi-unit applications with central pumping. With this option the unit includes a low pressure drop, high C_v modulating motorized water valve that is controlled by the DXM2.6 based on the difference in the entering and leaving water temperature ΔT . This valve is a factory installed feature for the ME.

- **High System Pressure Drop Modulating Motorized Valve – Typical for High Pressure Water System such as Open Loop Systems.**

With this option the unit includes a high pressure drop modulating water valve that is controlled by the DXM2.6 based on the difference in the entering and leaving water temperature ΔT . A low C_v valve is used to provide more precise control against high system pressure differential type of loops. This valve is a factory installed option for the ME.

- **Internal Flow Controller (Closed Loop Applications)**


This is the most common configuration for closed loops. With this factory-installed option, the unit is built with an Internal Variable Speed Pump and other components to flush and operate the unit correctly (including an expansion tank, flush ports and flushing valves). The pump speed is controlled by the DXM2.6 based on the difference in entering and leaving water temperatures (ΔT). The Internal Flow Controller pump may include an optional internal check valve for multiple unit installations. A copper water coil is standard with this option.

NOTE: Internal Flow Controllers are also very suitable for multiple unit installations depending on pump performance requirements.

Variable speed pump or motorized modulating valve delivers variable water flow, controlled by DXM2.6, based on loop water ΔT .




Figure 11: Internal Flow Controller

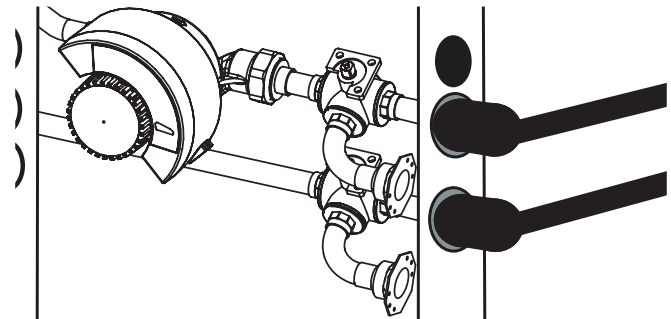

Models:
ME
024-072

Applications Variable Water Flow Heat Pump

Typical Open Loop Application (Shown with Internal Modulating Motorized Valve)

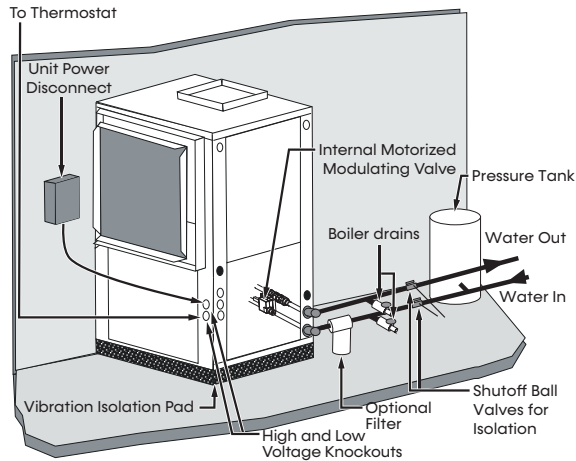

For use on applications using external source for flow.

WATER PRESSURE SCHRADER PORTS

The pressure ports built in to the unit are provided as a means of measuring pressure drop through the water-to-refrigerant heat exchanger. The water pressure ports are Schrader ports smaller than refrigerant Schrader ports. They are the same size as tire Schrader ports. A digital pressure gauge is recommended for taking pressure readings through these ports. The water flow through the unit can be determined by measuring the water pressure at the “water pressure out” port and subtracting it from the water pressure at the “water pressure in” port. Comparing the pressure differential to the pressure drop table (wpd)/flow rate in the **Coax Water Pressure Drop** table in this manual will determine the flow rate through the unit.

High System Pressure Drop Valve

Model	CV	Close off	MOPD	WPD Adders		
				GPM	PSI	FT
ME024	4.7	200	30	3.0	0.41	0.94
				4.5	0.92	2.12
				6.0	1.63	3.76
ME036	4.7	200	30	4.5	0.92	2.12
				6.8	2.09	4.84
				9.0	3.67	8.47
ME048	4.7	200	30	6.0	1.63	3.76
				9.0	3.67	8.47
				12.0	6.52	15.06
ME060	7.4	200	30	7.5	1.03	2.37
				11.3	2.33	5.39
				15.0	4.11	9.49
ME072	7.4	200	30	7.5	1.32	3.05
				11.3	2.99	6.91
				15.0	5.28	12.19


Low System Pressure Drop Valve

Model	CV	Close Off	MOPD	WPD Adders		
				GPM	PSI	FT
ME024	4.7	200	30	3.0	0.41	0.94
				4.5	0.92	2.12
				6.0	1.63	3.76
ME036	7.4	200	30	4.5	0.37	0.85
				6.8	0.84	1.95
				9.0	1.48	3.42
ME048	10.0	200	30	6.0	0.36	0.83
				9.0	0.81	1.87
				12.0	1.44	3.33
ME060	19.0	200	30	7.5	0.16	0.36
				11.3	0.35	0.82
				15.0	0.62	1.44
ME072	19.0	200	30	7.5	0.20	0.46
				11.3	0.45	1.05
				15.0	0.80	1.85


Applications Variable Water Flow Heat Pump

Models:
ME
024-072

Standard Head Variable Pump Performance

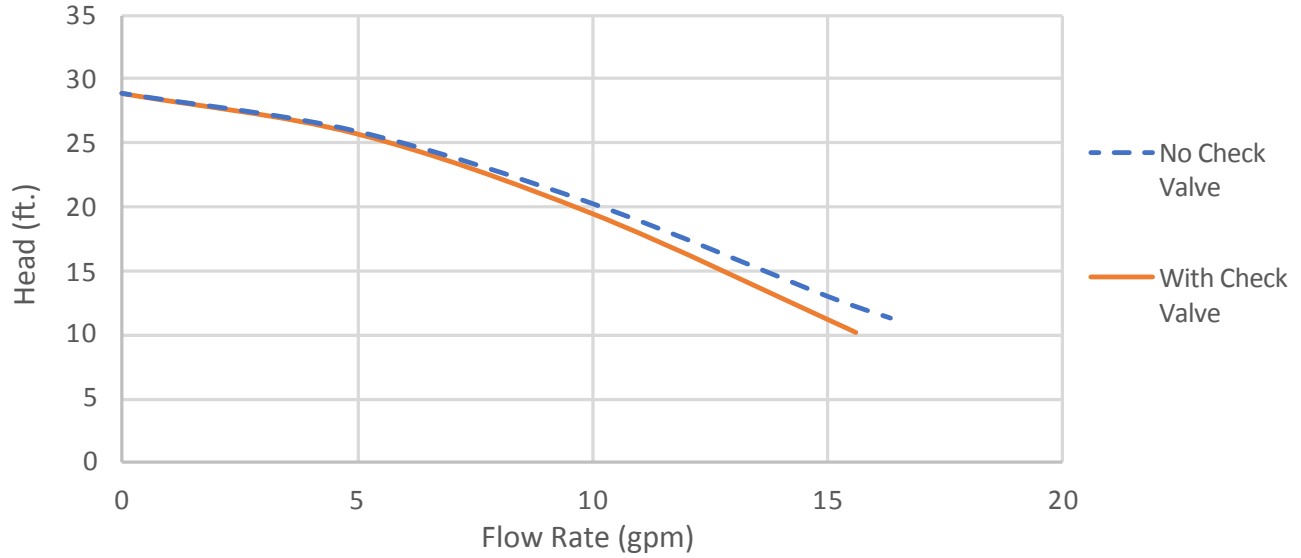

High Head Variable Pump Performance

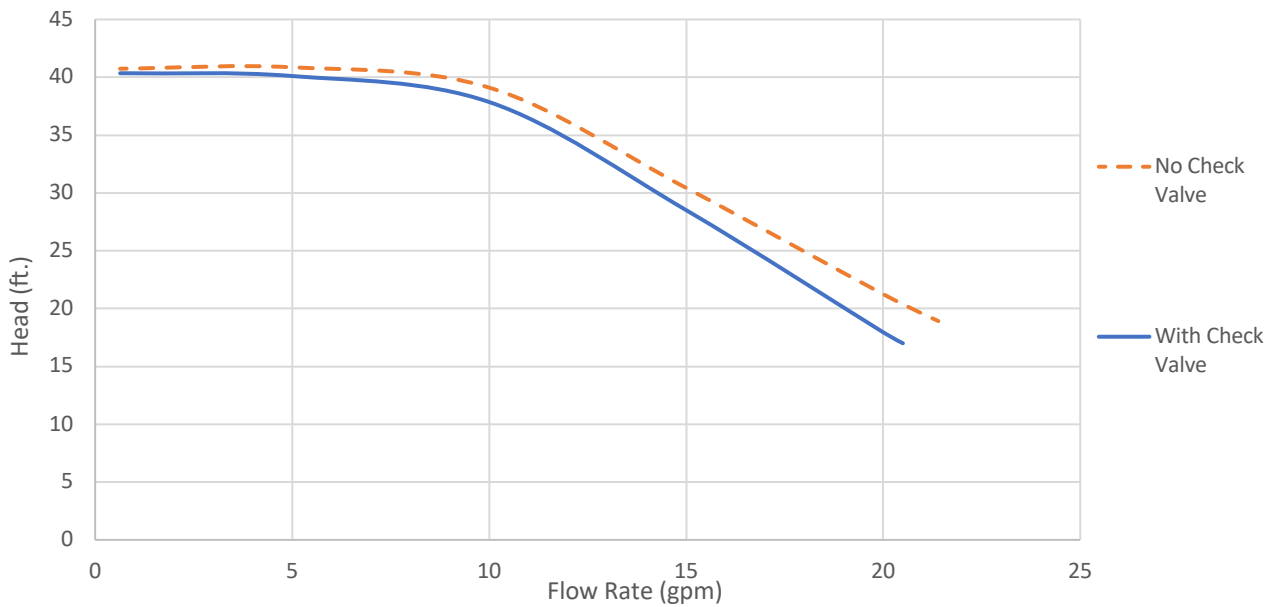

Models:
ME
024-072

Applications

Ground-Loop Heat-Pump

⚠ CAUTION

The following instructions represent industry accepted installation practices for closed-loop earth-coupled heat-pump systems. Instructions are provided to assist the contractor in installing trouble-free ground loops. These instructions are recommendations only. State/provincial and local codes MUST be followed and installation MUST conform to ALL applicable codes. It is the responsibility of the installing contractor to determine and comply with ALL applicable codes and regulations.

PRE-INSTALLATION

Prior to installation, locate and mark all existing underground utilities, piping, etc. Install loops for new construction before sidewalks, patios, driveways, and other construction has begun. During construction, accurately mark all ground-loop piping on the plot plan as an aid in avoiding potential future damage to the installation.

PIPING INSTALLATION

Limit all ground-loop piping materials to polyethylene fusion only for in-ground sections of the loop. Do not use galvanized or steel fittings at any time due to their tendency to corrode. Do not use any plastic-to-metal threaded fittings due to their potential to leak in earth-coupled applications. Use flanged fittings as a substitute. Use P/T plugs for easy flow measurement using the pressure drop of the unit heat exchanger.

Ground-loop temperatures can range between 25 and 110°F (-4 to 43°C). Flow rates between 2.25 and 3 GPM (2.41 to 3.23 l/m per kW) of cooling capacity is recommended in these applications.

Test individual horizontal loop circuits before backfilling. Test vertical U-bends and pond loop assemblies prior to installation. Use pressures of at least 100 psi (689 kPa) when testing. Do not exceed the pipe pressure rating. Test the entire system when all loops are assembled.

FLUSHING THE GROUND LOOP

After system installation and testing is complete, flush the system to remove all foreign objects and purge to remove all air. For more information, see Ground-Loop Cleaning and Flushing section.

ANTIFREEZE

For operation when water is used instead of an antifreeze solution, you must calculate the leaving water temperature (LWT). Flow must be maintained to a level such that the LWT is maintained above 40°F (4.4°C) when the JW3 jumper is not clipped. Otherwise, use appropriate levels of a proper antifreeze solution in systems with leaving water temperatures of 40°F (4.4°C) or below (or where piping is routed through areas subject to freezing) and clip the JW3 jumper. Alcohols and glycols are commonly used as antifreeze. Consult your local sales office to determine the antifreeze best suited to your area. Maintain freeze protection to 15°F (9°C) below the lowest expected entering loop temperature. For example, if 30°F (-1°C) is the minimum expected entering loop temperature, the leaving loop temperature is 22 to 25°F (-6 to -4°C) and freeze protection is at 15°F (-10°C).

Calculation is as follows:


$$30^{\circ}\text{F} - 15^{\circ}\text{F} = 15^{\circ}\text{F} \quad [-1^{\circ}\text{C} - 9^{\circ}\text{C} = -10^{\circ}\text{C}]$$

Premix and pump all alcohols from a reservoir outside of the building when possible. If an outside reservoir is not available, introduce alcohol under the water level to prevent fumes. Calculate the total volume of fluid in the piping system, then use the **Antifreeze Percentages by Volume** table to determine the amount of antifreeze needed. Check antifreeze concentration from a homogenized sample using a hydrometer or refractometer to measure specific gravity.


Applications Ground-Loop Heat-Pump

Models:
ME
024-072

**Figure 12: Typical Closed Loop with Central Pumping
(Shown with internal modulating water valve)**

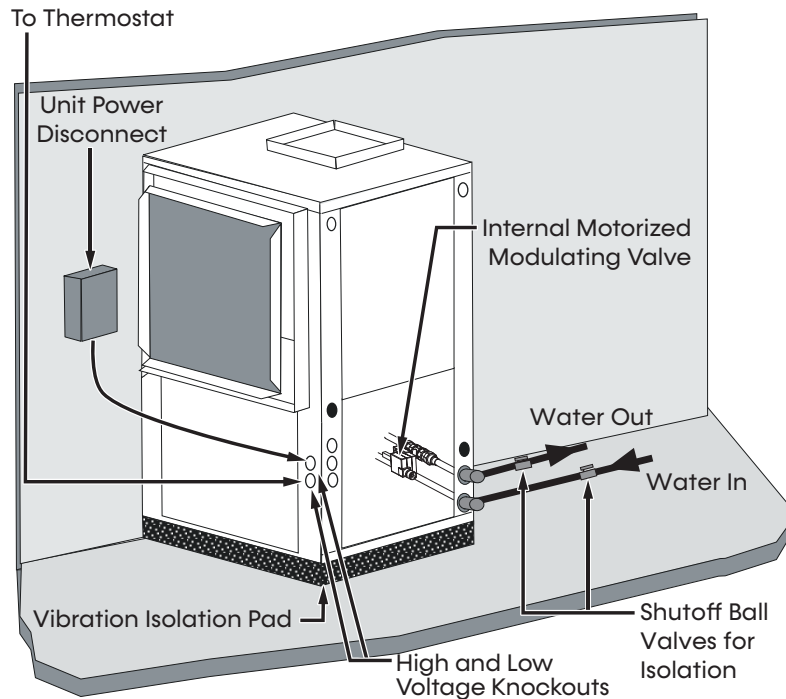

**Figure 13: Typical Closed-Loop Application
(Shown with internal flow controller)**

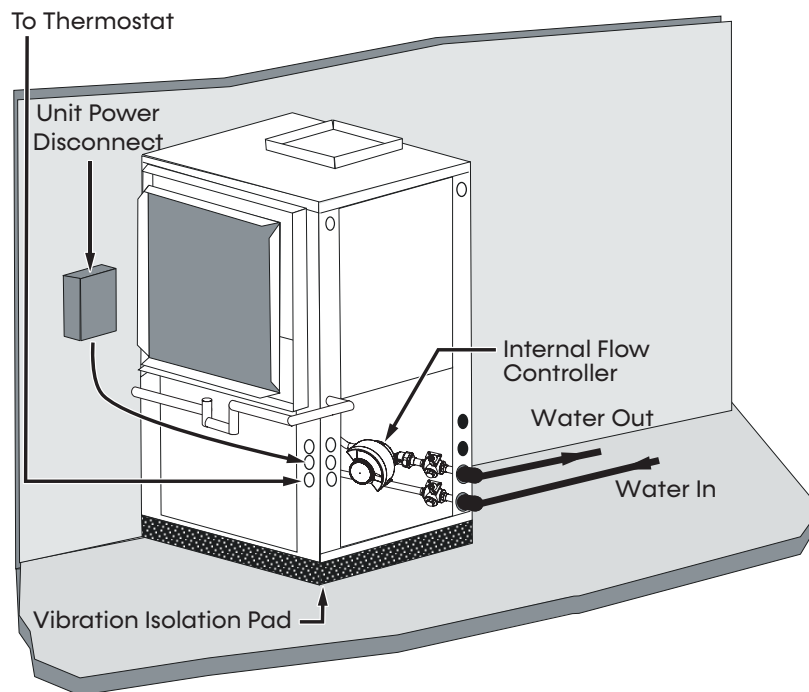

Models:
ME
024-072

Ground-Loop Heat Pump Cleaning and Flushing

After piping is complete between the unit and the ground loop, final purging and charging of the loop is required.

A flush cart with at least a 1.5 hp (1.1 kW) pump is required to achieve adequate flow velocity in the loop to purge air and dirt particles from the loop. Antifreeze solution is used in most areas to prevent freezing. Remove all air and debris from the earth loop piping system before operation. Flush the loop with a high volume of water at 2 fps (0.6 m/s) in all piping.

A fine-mesh (20 micron) or similar filter cartridge is required in the loop return line of the flush cart to eliminate all debris from the loop system. Failure to protect the brazed-plate heat exchangers can lead to product damage and loss of warranty. See the **Minimum Flow** table for the flow rate required to attain 2 fps (0.6 m/s). Follow the steps below for proper flushing.

**Table 2: Minimum Flow
(required to achieve 2 ft/sec)**

PE Pipe Size	Flow (GPM)
3/4"	4 [4.3 L/M per KW]
1"	6 [6.5 L/M per KW]
1 1/4"	10 [10.8 L/M per KW]
1 1/2"	13 [14.0 L/M per KW]
2"	21 [22.6 L/M per KW]

Units with internal variable-speed pumps include a check valve internal to the pump. It is not possible to flush backwards through this pump. Take care to connect the flush cart hoses so that the flush cart discharge is connected to the water in flushing valve of the heat pump.

LOOP FILL

Fill the loop with water from a garden hose through flush cart before using flush cart pump to ensure an even fill and increase flushing speed (see the **Valve Position A – Loop Fill/Flush** figure). When water consistently returns back to the flush reservoir, switch to valve position B (see the **Valve Position B – Unit Fill/Flush** figure).

Isolate the expansion tank for this flushing procedure using the ball valve. During dead heading of flush cart pump, isolation prevents compression of the bladder in the expansion tank, and prevents the flush cart fluid level from dropping below available capacity.


⚠ WARNING

DISCONNECT ELECTRICAL POWER SOURCE TO PREVENT INJURY OR DEATH FROM ELECTRICAL SHOCK.

Figure 14: Typical Cleanable Flush Cart Strainer (100 mesh [0.149 mm])



Figure 15: Cam Fittings for Flush Cart Hoses

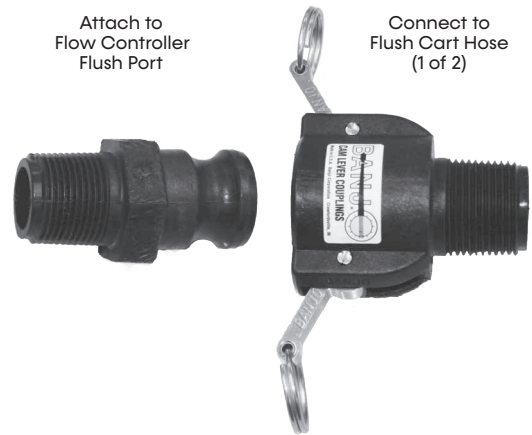

⚠ ATTENTION


A hydrostatic pressure test is required on ALL piping, especially underground piping before final backfill per IGSHPA and the pipe manufacturers recommendations.

Ground-Loop Heat Pump Cleaning and Flushing

Models:
ME
024-072

Figure 16: Valve Position A – Loop Fill/Flush

UNIT FILL

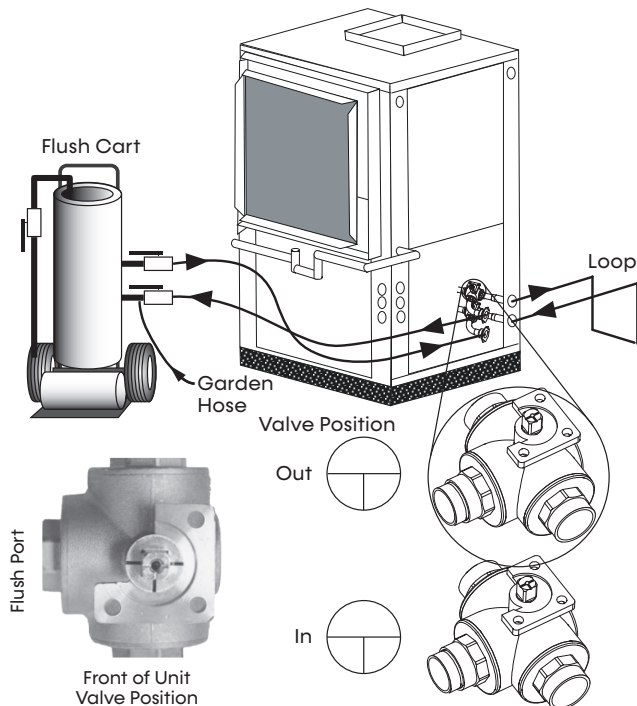


Switch the unit fill valves to Position B while flush cart is pumping to fill the unit heat exchanger (see the **Valve Position B – Unit Fill/Flush** figure). Maintain Position B until water is consistently returned into the flush reservoir.

LOOP FLUSH

Switch to valve Position A. Shut off the supply water and turn on the flush cart to begin flushing. Once the flush reservoir is full, do not allow the water level in the flush cart tank to drop below the pump inlet line or air can be pumped out to the earth loop. Try to maintain a fluid level in the tank above the return tee so that air cannot be continuously mixed back into the fluid. Use surges of 50 psi (345 kPa) to help purge air pockets by shutting off the flush cart return valve going into the flush cart reservoir. This process 'dead heads' the pump to 50 psi (345 kPa). To dead head the pump until maximum pumping pressure is reached, open the valve. Pressure surges through the loop to purge air pockets from the piping system. Notice the drop in fluid level in the flush cart tank. If all air is purged from the system, the level only drops 3/8 inch in a 10-inch (25.4 cm) diameter PVC flush tank (about a half gallon [1.9 liters]) since liquids are incompressible. If the level drops more than this level, continue flushing until air is not being compressed in the loop fluid. Do this a number of times to ensure all air is purged.

Figure 17: Valve Position B – Unit Fill/Flush

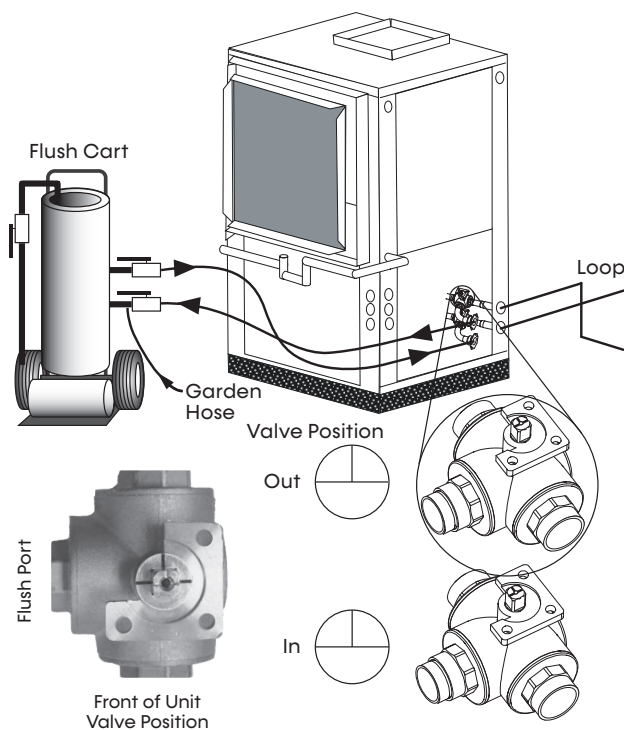

⚠ ATTENTION

Actual flushing time require will vary for each installation due to piping length, configuration, and flush cart pump capacity. 3/8 inches or less fluid level drop is the **ONLY** indication that flushing is complete.


Switch valves to Position B to flush the unit. Flush through the unit until all air pockets are removed.

Move valves to Position C. Switching both valves to Position C allows water to flow through the loop and the unit heat exchanger. Dead head again to check for air in the loop. Fluid level drop is your only indication of air in the loop.

Models:
ME
024-072

Ground-Loop Heat Pump Cleaning and Flushing

Figure 18: Valve Position C – Full Flush

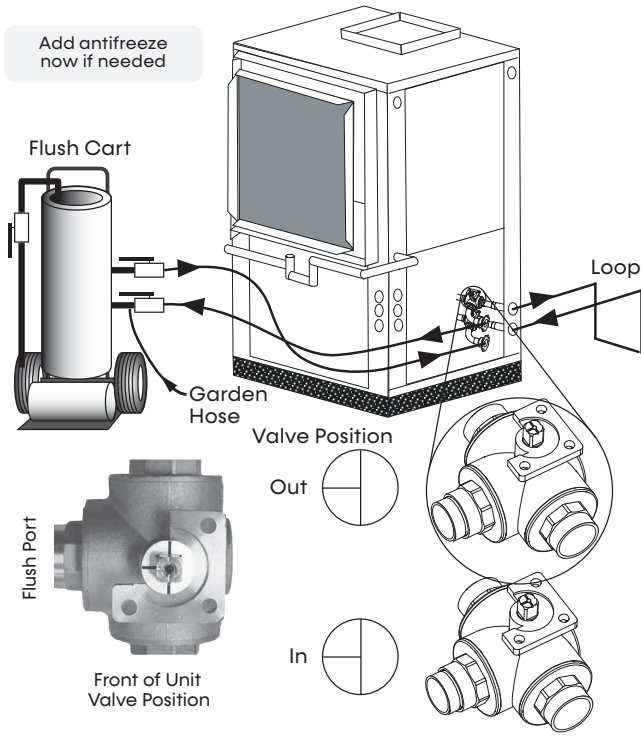

PRESSURIZE AND OPERATE


Close the flush cart return valve to pressurize the loop to at least 50 psi (345 kPa) as shown in the **Valve Position D – Pressurize and Operation** figure. Do not exceed 75 psi (517 kPa). Open the isolation valve to the expansion tank and bleed air from the expansion tank piping using the Schrader valve located in front of the expansion tank. This allows loop pressure to compress the expansion tank bladder and charges the expansion tank with liquid. After pressurizing, close the flush cart supply valve to isolate the flush cart. Move the flow controller valves to Position D.

Before unit operation, verify that installed strainers are clean and free of any debris from loop flushing.

The loop's static pressure fluctuates seasonally with higher pressures in the winter months than during the cooling season. This fluctuation is normal and should be considered when charging the system for the first time. Unhook the flush cart from the internal flow controller. Install flow controller caps to ensure that any condensation or leakage remains contained within the flow controller package.

After completely flushing, target a loop pressure between 50 and 75 psi (345 to 517 kPa) for sufficient pressure for all seasons.

Figure 19: Valve Position D – Pressurize and Operation

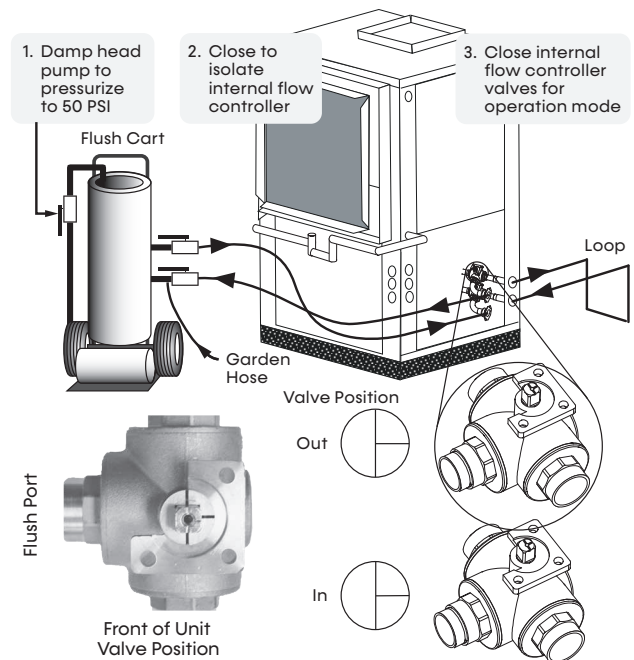

⚠ ATTENTION

It is recommended to run the unit in the cooling, then heating mode for 15-20 minutes each to 'temper' the fluid temperature and prepare it for pressurization. This procedure helps prevent the periodic "flat" loop condition of no pressure.

Ground-Loop Heat Pump Antifreeze Charging

Models:
ME
024-072

GROUND-LOOP ANTIFREEZE CHARGING

It is highly recommended to utilize premixed antifreeze fluid where possible to ensure proper concentration levels.

The following procedure is based on pure antifreeze and can be implemented during the Full Flush procedure with three-way valves as shown in the **Valve Position C – Full Flush** figure. When using a premixed mixture of 15°F (-9.4°C) freeze protection, you can fill and flush the system with the premix directly to prevent handling pure antifreeze during installation.

WARNING

Always use properly marked vehicles (D.O.T. placards), and clean/suitable/properly identified containers for handling flammable antifreeze mixtures. Post and advise those on the job site of chemical use and potential dangers of handling and storage

WARNING

Always dilute alcohols with water (at least 50% solution) before using. Alcohol fumes are flammable and can cause serious injury or death if not handled properly.

When handling methanol (or any alcohol), always wear eye protection and rubber gloves as alcohols are easily absorbed through the skin.

CAUTION

Always obtain MSDS safety sheets for all chemicals used in ground loop applications including chemicals used as antifreeze.

ATTENTION

DO NOT use automotive windshield washer fluid as antifreeze. Washer fluid contains chemicals that will cause foaming.

1. Flush loop until all air has been purged from system and pressurize to check for leaks before adding any antifreeze.
2. Run discharge line to a drain and hook up antifreeze drum to suction side of pump (if not adding below water level through approved container). Drain flush cart reservoir down to pump suction inlet so reservoir can accept the volume of antifreeze to be added.
3. Use the **Fluid Volume** table to calculate the total fluid volume of the loop. Next, calculate the amount of antifreeze needed using the **Antifreeze Percentage by Volume** table to determine appropriate freeze-protection level. Many southern applications require freeze protection because of piping exposed to ambient conditions.
4. Isolate the unit and prepare to flush only through loop (see the **Valve Position A – Loop Fill/Flush** figure). Start the flush cart and gradually introduce the required amount of liquid to the flush cart tank until attaining the proper antifreeze protection. Always introduce alcohols under water or use suction of pump to draw in directly to prevent fuming. The rise in flush reservoir level indicates amount of antifreeze added (some carts are marked with measurements in gallons or liters). A 10-inch-diameter (25.4 cm) cylinder, 3-foot (91.4 cm) tall holds approximately 8-gallons (30.3 liters) of fluid, plus the hoses, approximately two gallons (7.6 liters), which equals about 10 gallons (37.9 liters) total. If more than one tank full is required, immediately drain the tank by opening the waste valve of the flush cart. Note the color of the discharge fluid. Add food coloring to the antifreeze to help indicate where the antifreeze is in the circuit and prevent the dumping of antifreeze out the waste port. Repeat if necessary.
5. Take care when handling methanol (or any alcohol). Always wear eye protection and rubber gloves. Alcohol fumes are flammable and care should be taken with all flammable liquids. Open flush valves to flush through both the unit and the loop, then flush until fluid is homogeneous. It is recommended to run the unit in the heating and cooling mode for 15-20 minutes each to temper the fluid temperature and prepare it for pressurization. Use this period to clean the area. This procedure helps prevent the periodic “flat” loop condition.
6. Close the flush cart return valve then immediately close the flush cart supply valve, leaving a positive pressure in the loop of approximately 50 psi (345 kPa). Pressure check the system. Check the freeze protection of the fluid with the proper hydrometer to ensure that the correct amount of antifreeze is added to the system. Place the hydrometer into the flush reservoir then compare the reading to the following figures to determine the level of freeze protection:
 - **Methanol Specific Gravity**
 - **Propylene Glycol Specific Gravity**
 - **Ethanol Specific Gravity**

Models:
ME
024-072

Ground-Loop Heat Pump Antifreeze Charging

Do not antifreeze more than a +10°F (-12.2°C) freeze point. Specific gravity hydrometers are available in the residential price list. Repeat after reopening and flushing for a minute to ensure a good second sample of fluid. Inadequate antifreeze protection can cause nuisance low temperature lockouts during cold weather.

- Close the flush cart return valve then immediately close the flush cart supply valve and shut off the flush cart, leaving a positive pressure in the loop of approximately 50-75 psi (345-517 kPa). Refer to the **Valve Position D – Pressurize and Operation** figure.

LOW WATER TEMPERATURE CUTOUT SETTING – DXM2.6

When antifreeze is selected, clip the LT1 jumper (JW3) to select the low temperature (antifreeze 10°F [-12.2°C]) set point and avoid nuisance faults (see the *Low Water Temperature Cutout Selection* section in this manual).

Figure 20: Low Temperature Cutout Selection

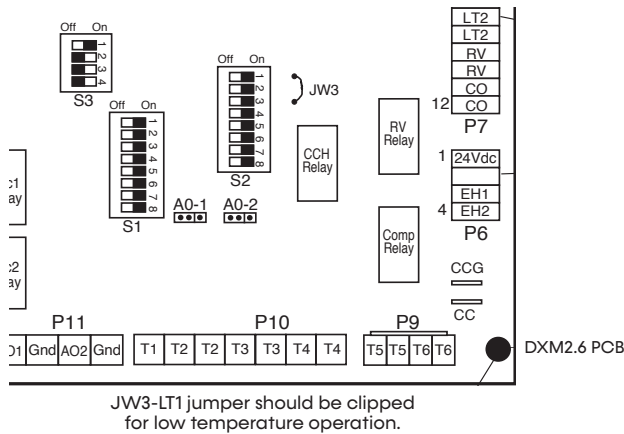


Figure 21: Methanol Specific Gravity

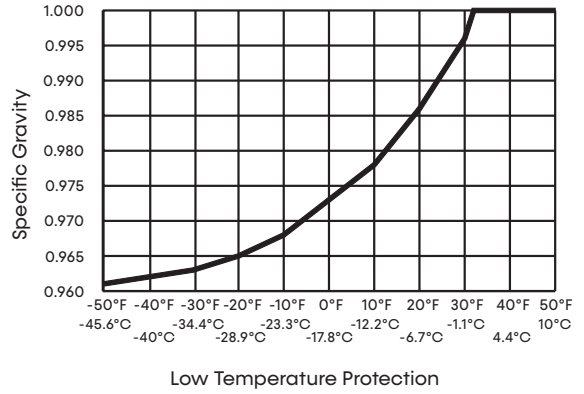


Figure 22: Propylene Glycol Specific Gravity

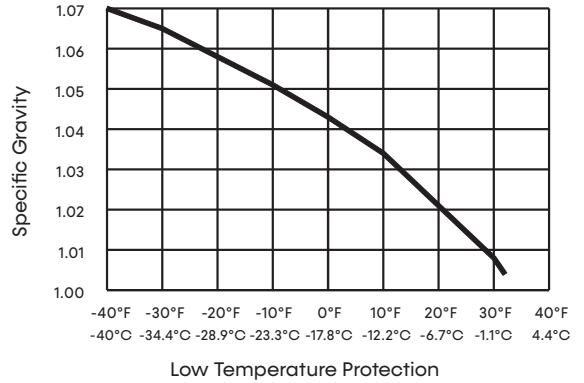


Figure 23: Ethanol Specific Gravity

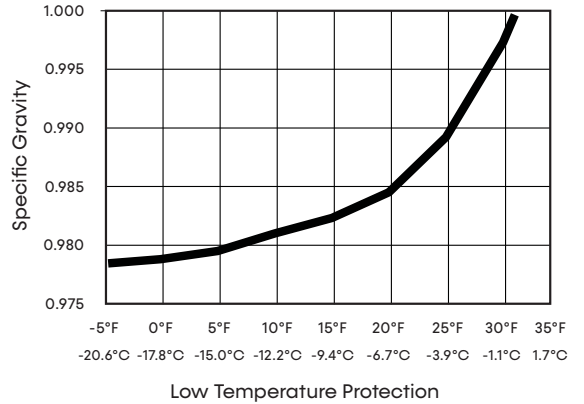


Table 3: Antifreeze Percentages by Volume

Type	Minimum Antifreeze Concentration % for Low Temperature Protection			
	10°F [-12.2°C]	15°F [-9.4°C]	20°F [-6.7°C]	25°F [-3.9°C]
Methanol	21%	17%	13%	9%
100% USP food grade Propylene Glycol	29%	24%	19%	12%
Ethanol ¹	28%	24%	18%	12%

1. Must not be denatured with any petroleum based product

Ground-Loop Heat Pump Multi-Unit Piping and Flushing

Models:
ME
024-072

Often projects require more than one heat pump. Where possible, it is recommended to use a common ground loop with multiple units. Common ground loops with multiple units bring new challenges, including the need to avoid backward flow through inactive units, increase pumping requirements, and more complex flushing needs. Three types of multi-unit systems are described below with guidelines for installation of each type.

Variable Water Flow internal variable flow technology improves efficiency and longevity for multi-unit systems. Variable Water Flow is available in three different configurations:

- Internal variable-speed pump
- Internal modulating valve for closed loops
- Internal modulating valve for open loops

Never use the high head internal modulating valve for open loops with closed loop systems.

The internal variable-speed pump version of Variable Water Flow includes an internal variable-speed circulator controlled by the DXM2.6, internal three-way flushing valves, an internal bladder type expansion tank, and front-mounted pressure ports that allow access only to the pressure drop across the coaxial heat exchanger. The internal expansion tank operates as a pressure battery for the geothermal system. It absorbs fluid from the loop when loop pressure rises and injects fluid into the loop when loop pressure falls. This expansion tank helps to maintain constant loop pressure and avoids flat loops due to seasonal pressure changes in the loop.

When using the internal variable-speed pump as the loop pump in multi-unit installations, it is important to ensure that the variable-speed pump provides adequate flow through the heat pump against the loop head when all units are operating.

Do not combine units with the standard head pump with units with high head pumps on the same loop. Standard head pumps are best suited for small applications with a single unit.

It is possible to flush a multi-unit system through the unit's flushing valves with suitable equipment. Calculate the valve's flushing pressure drop to determine if it is acceptable. Find engineering data for the three-way flushing valves in the **Internal Three-Way Flushing Valve Data** table.

Table 4: Internal Three-Way Flushing Valve Data

Model	Flushing Connection	Straight Flow Cv	90° Flow Cv
ME024 - 036	3/4" FPT	25	10.3
ME048 - 072	1" FPT	58	14.5

For example, if a system includes two 2-ton units and four ¾-loop circuits, calculate the flushing pressure drop as follows:

Using the data provided in the **Internal Three-Way Flushing Valve Data** table, 4 gpm is required to flush each ¾-inch circuit. If there is no provision to isolate the circuits for flushing, flush with a minimum of four circuits x 4 gpm/circuit = 16 gpm total. Verify the other pipe sizes used to ensure that 16 gpm total flow is sufficient to flush all piping.

Calculate pressure drop through the flushing valve using the following formula:

$$\Delta P = (GPM/C_v)^2 \text{ where,}$$

$$\Delta P = \text{pressure drop in psi through the valve while flushing}$$

$$GPM = \text{flushing flow in gallons per minute}$$

$$C_v = \text{valve } C_v \text{ in flushing mode}$$

The **Internal Three-Way Flushing Valve Data** table details that the C_v for the flushing valve in a ME024 is 10.3 in the flushing mode (90° flow). Therefore, $\Delta P = (GPM/C_v)^2 = (16/10.3)^2 = 2.4$ psi (5.54 ft hd) per valve (there are two flushing valves). As long as the flushing pump is capable of providing 16 gpm at the flushing pressure drop of the loop plus the 2.4 x 2 valves = 4.8 psi (11.09 ft hd) of the flushing valves, use the internal flushing valves. If the flushing pump is not able to overcome the pressure drop of the internal flushing valves, use larger external flushing valves.

Models:
ME
024-072

Ground-Loop Heat Pump Multi-Unit Piping and Flushing

UNIT CONFIGURATION

The VS PUMP PARALLEL configuration is required for multiple Variable Water Flow units with internal variable-speed flow controllers and check valves piped in parallel and sharing a common loop. Find and configure VS PUMP PARALLEL in the Wireless Service Tool's **Unit Configuration** menu:

Unit Configuration

Board Name
DXM2.6

Heat Pump Family
ME

Heat Pump Size
036

Blower Type
ECM

Loop Configuration
VS Loop Pump w/ Parallel

MULTIPLE UNITS WITH INTERNAL FLOW CONTROLLERS

The simplest multi-unit systems consist of internal flow controllers without external pumps or external flushing valves. The units are piped in parallel and use the internal flushing valves for system flushing. The variable-speed pump includes an internal check valve to prevent back flow (short circuiting) through the units.


In this configuration, begin by flushing the unit farthest from the loop using the internal flushing valves. After the loop is flushed, change the internal flushing valves to flush the heat pump. Next, move the flushing cart to the next closest unit to the loop.

Flush the loop through the internal flushing valves. This is important as there may be air and debris in the lines from this unit to the common piping. After flushing starts, flush the air moved into the loop. After

the loop is flushed through the second unit, change the flushing valves to flush the second unit. Repeat this process for additional units. Always begin with the unit farthest from the loop and end with the unit closest to the loop.

Use this flushing application for systems up to 12 tons, depending on loop design. It is important to perform appropriate calculations to confirm that the variable-speed pump provides adequate flow through all heat pumps.

Figure 24: Multiple Units with Internal Flow Controllers

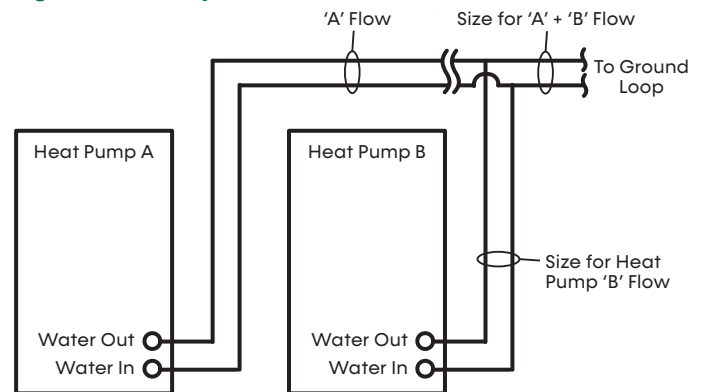

MULTIPLE UNITS WITH INTERNAL FLOW CONTROLLERS AND EXTERNAL FLUSHING VALVES

When the number of units or flushing requirements reaches a point where it is no longer feasible to flush through the internal valves, install external flushing valves. In this configuration, use three-way flushing valves or install additional isolation valves to isolate the loop during flushing.


First, flush the ground loop. Close the indoor-loop shutoff valve (or the internal flushing valves in all units) and open the ground-loop shutoff valve to prevent flow through the indoor loop while flushing the ground loop.

After the ground loop is flushed, close the ground-loop shutoff valve and open the indoor-loop valve(s) to flush the units and indoor piping. Remember that there is an internal check valve in the variable-speed pump and that backward flow the unit is not possible.

Ground-Loop Heat Pump Multi-Unit Piping and Flushing

Models:
ME
024-072

Figure 25: Multiple Units with Internal Flow Controllers and External Flushing Valves

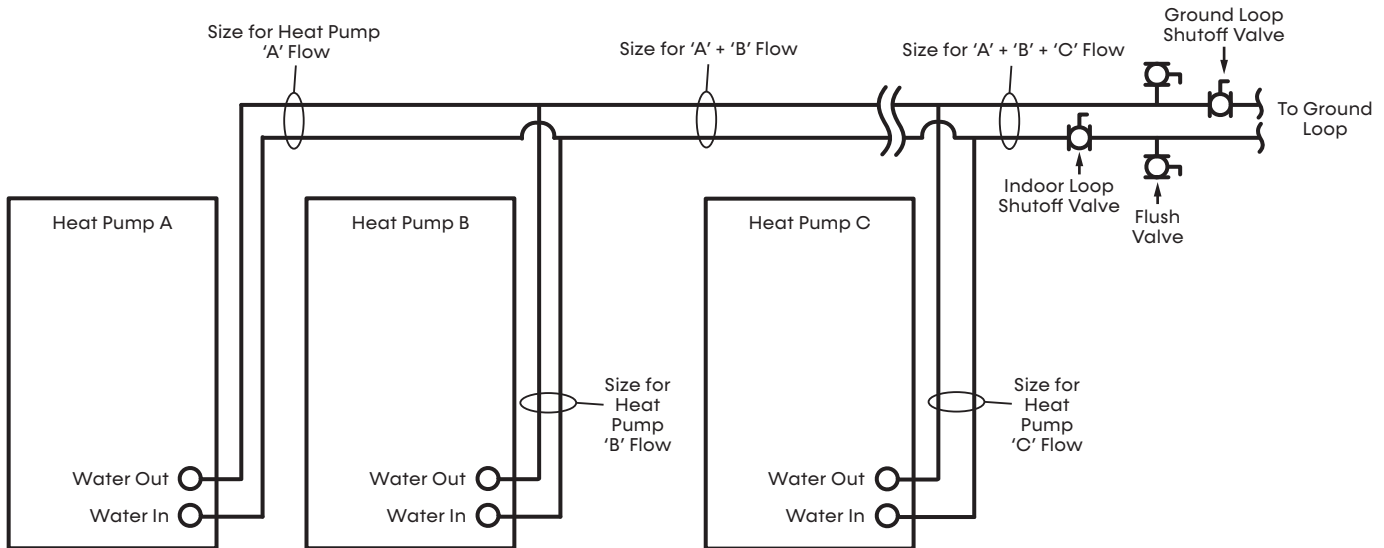

MULTIPLE UNITS WITH INTERNAL MODULATING VALVES AND CENTRAL PUMP


In this configuration, multiple units are used in conjunction with a central variable-speed pump and units with closed-loop modulating valves are used. **NOTE: Do not use open-loop modulating valves on a closed-loop system.** External flushing valves are required. This application is for larger systems, including commercial.

Before flushing, manually open all modulating valves as detailed in Closed Loop – External Central Pumping section of this manual. Next, flush the ground loop.

Close a pump-isolation valve and open the ground-loop shutoff valve to prevent flow through the indoor loop while flushing the ground loop.

After the ground loop is flushed, close the ground-loop shutoff valve and open the pump-isolation valve to flush the units and indoor piping. After the system is flushed, remember to return the modulating valves to their normal operating position.

Figure 26: Multiple Units with Internal Modulating Valves and Central Pump

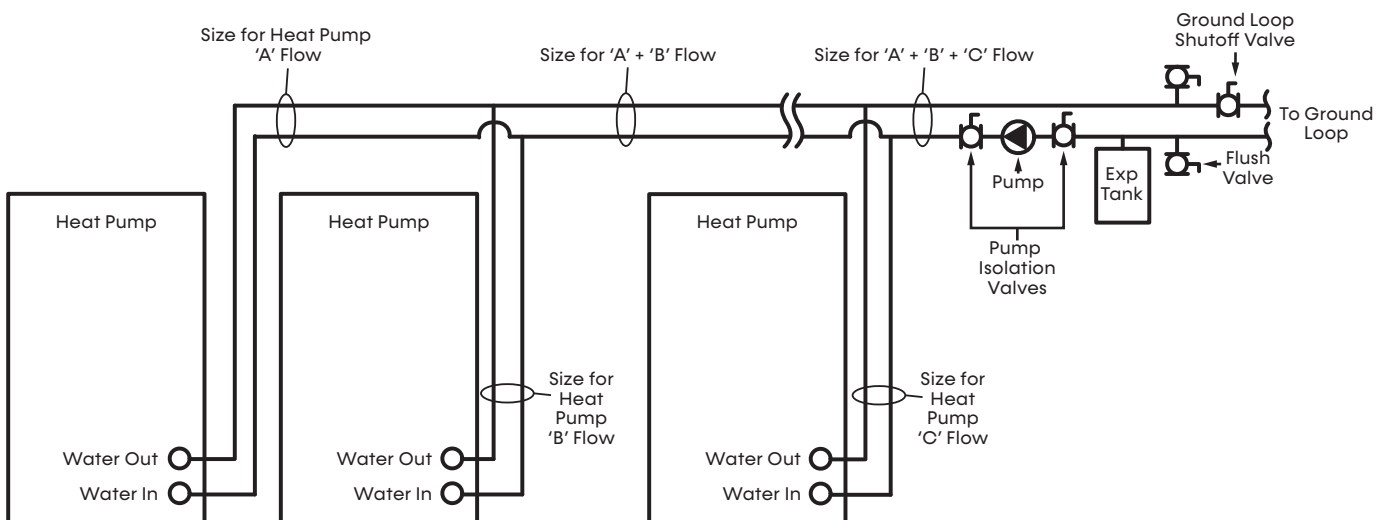

Models:
ME
024-072

Applications

Ground-Water Heat Pump

OPEN LOOP GROUND WATER SYSTEMS

Include shutoff valves for ease of servicing. Tee boiler drains or other valves into the lines to allow for acid flushing of the heat exchanger. Position shutoff valves to allow flow through the coax via the boiler drains without allowing flow into the piping system. Use P/T plugs with units that do not include Variable Water Flow so that flow can be measured using the pressure drop of the unit heat exchanger. Units equipped with any of the four Variable Water Flow configurations have built in Schrader ports. You can see water temperature with myUplink. Limit supply and return water piping to copper, HPDE, or other acceptable high-temperature material. **Note: PVC or CPVC material is not recommended as they are not compatible with the polyolester oil used in R-454B products.**

Water quantity should be plentiful and of good quality. Consult the *Water Quality Requirements* section for water quality guidelines. You can order the unit with either a copper or cupronickel water heat exchanger. Consult the **Water Quality Requirements** table for recommendations. Copper is recommended for closed-loop systems and open-loop ground water systems that are not high in mineral content or corrosiveness. In conditions anticipating heavy scale formation or in brackish water, a cupronickel heat exchanger is recommended. In ground water situations where scaling could be heavy or where biological growth such as iron bacteria is present, an open loop system is not recommended. Heat exchanger coils may lose heat-exchange capabilities over time due to build up of mineral deposits. Heat exchangers must only be serviced by a qualified technician as special cleaning solutions and pumping equipment are required. Desuperheater coils can become scaled and eventually plugged. In areas with extremely hard water, inform the owner that the heat exchanger may require occasional flushing using an appropriate cleaning solution. In some cases, the desuperheater option should not be recommended due to hard water conditions and additional maintenance required.

WARNING

Polyolester Oil, commonly known as POE oil, is a synthetic oil used in many refrigeration systems including those with R-454B refrigerant. POE oil, if it ever comes in contact with PVC or CPVC piping, may cause failure of the PVC/CPVC. PVC/CPVC piping should never be used as supply or return water piping with water-source heat pump products containing R-454B as system failures and property damage may result.

WATER QUALITY REQUIREMENTS

Consult the **Water Quality Requirements** table. Access scaling potential using the pH/Calcium hardness method. If the pH <7.5 and the calcium hardness is less than 100 ppm, scaling potential is low. If this method yields numbers out of range of those listed, calculate the Ryznar Stability and Langelier Saturation indices. Use the appropriate scaling surface temperature for the application, 150°F (66°C) for direct use (well water/open loop) and DHW (desuperheater); 90°F (32°F) for indirect use. Create a monitoring plan in these probable scaling situations. Reference other water quality issues such as iron fouling, corrosion prevention and erosion, and clogging in the **Water Quality Requirements** table.

EXPANSION TANK AND PUMP

Use a closed, bladder-type expansion tank to minimize mineral formation due to air exposure. Size the expansion tank to provide at least one minute continuous run time of the pump using its drawdown capacity rating to prevent pump short cycling. Discharge water from the unit is not contaminated in any manner and can be disposed of in various ways, depending on local building codes (e.g. recharge well, storm sewer, drain field, adjacent stream or pond, etc.). Most local codes forbid the use of sanitary sewer for disposal. Consult your local building and zoning department to ensure compliance in your area.

Size the pump to handle the home's domestic water load (typically 5-9 gpm [23-41 l/m]) plus the flow rate required for the heat pump. Choose pump sizing and expansion tank as complimentary items. For example, an expansion tank that is too small can cause premature pump failure due to short cycling. Consider variable-speed pumping applications for the inherent energy savings and smaller pressure tank requirements.

Applications

Ground-Water Heat Pump

Models:
ME
024-072

FLOW REGULATION: UNITS WITHOUT VARIABLE WATER FLOW

You can accomplish flow regulation using two methods.

- Most water control valves have a built-in flow adjustment. Determine flow rate by measuring the pressure drop through the unit heat exchanger then compare to **Typical Unit Operating Pressures and Temperatures** tables. Since the pressure is constantly varying, two pressure gauges might be needed. Adjust the water control valve until the desired flow of 1.5 to 2 gpm per ton (2.0 to 2.6 l/m per kW) is achieved.
- Install and mount a flow-control device on the outlet of the water-control valve. The device is typically a brass fitting with an orifice of rubber or plastic material that is designed to allow a specified flow rate. Flow-control devices may produce a velocity noise, but you can reduce this noise by applying some back pressure from the ball valve located on the discharge line. Slightly close the valve to spread the pressure drop over both devices, lessening the velocity noise.

NOTE: When EWT is below 50°F (10°C), 2 gpm/ton (2.6 l/m per kW) is required.

Figure 27: Typical Open Loop/Well (shown with internal modulating water valve)


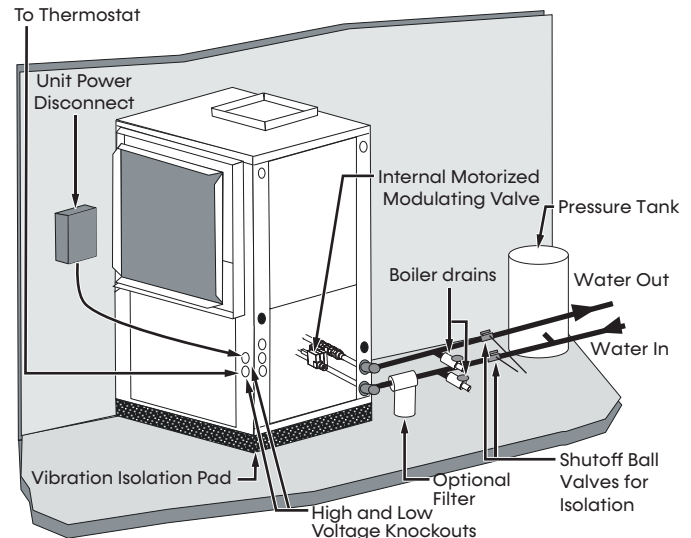


Figure 28: Typical Open Loop/Well Application without Variable Water Flow

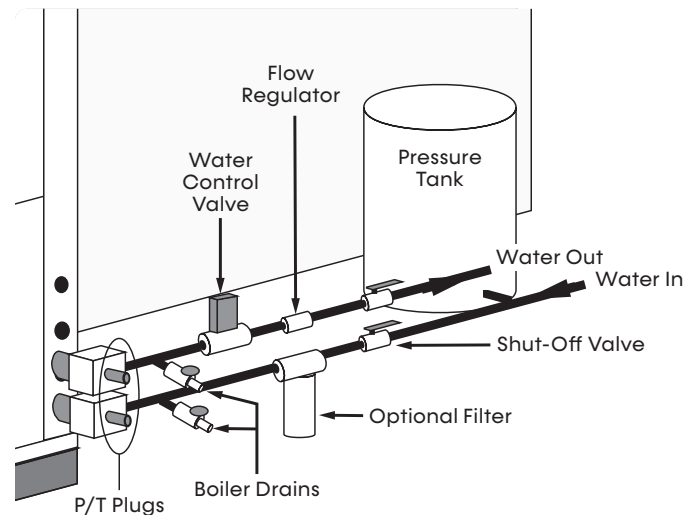

Models:
ME
024-072

Water Quality Requirements

Table 5: Water Quality Requirements

Clean water is essential to the performance and life span of water-source heat pumps. Contaminants, chemicals, and minerals all have the potential to cause damage to the water heat exchanger if not treated properly. All closed water loop systems should undergo water quality testing and be maintained to the water quality standards listed in this table.

Water Quality Requirements For Closed-Loop and Open-Loop Systems							
	Description	Symbol	Units	Heat Exchanger Type			
				Closed Loop Recirculating		Open Loop, Tower, Ground Source Well	
				All Heat Exchanger Types	Coaxial HX Copper Tube in Tube	Coaxial HX Cupronickel	Brazed- Plate HX 316 SS
Scaling Potential	pH - Chilled Water <85°F			7.0 to 9.0	7.0 to 9.0	7.0 to 9.0	7.0 to 9.0
	pH - Chilled Water >85°F			8.0 to 10.0	8.0 to 10.0	8.0 to 10.0	8.0 to 10.0
	Alkalinity	(HCO ₃ ⁻)	ppm - CaCO ₃ equivalent	50 to 500	50 to 500	50 to 500	50 to 500
	Calcium	(Ca)	ppm	<100	<100	<100	<100
	Magnesium	(Mg)	ppm	<100	<100	<100	<100
	Total Hardness	(CaCO ₃)	ppm - CaCO ₃ equivalent	30 to 150	150 to 450	150 to 450	150 to 450
	Langelier Saturation Index	LSI		-0.5 to +0.5	-0.5 to +0.5	-0.5 to +0.5	-0.5 to +0.5
Ryznar Stability Index	RSI		6.5 to 8.0	6.5 to 8.0	6.5 to 8.0	6.5 to 8.0	
Corrosion Prevention	Total Dissolved Solids	(TDS)	ppm - CaCO ₃ equivalent	<1000	<1000	<1000	<1000
	Sulfate	(SO ₄ ²⁻)	ppm	<200	<200	<200	<200
	Nitrate	(NO ₃ ⁻)	ppm	<100	<100	<100	<100
	Chlorine (free)	(Cl)	ppm	<0.5	<0.5	<0.5	<0.5
	Chloride (water < 80°F)	(Cl ⁻)	ppm	<20	<20	<150	<150
	Chloride (water > 120°F)	(Cl ⁻)	ppm	<20	<20	<125	<125
	Hydrogen Sulfide ^a	(H ₂ S)	ppb	<0.5	<0.5	<0.5	<0.5
	Carbon Dioxide	(CO ₂)	ppm	0	<50	10 to 50	10 to 50
	Iron Oxide	(Fe)	ppm	<1.0	<1.0	<1.0	<0.2
	Manganese	(Mn)	ppm	<0.4	<0.4	<0.4	<0.4
	Ammonia	(NH ₃)	ppm	<0.05	<0.1	<0.1	<0.1
	Chloramine	(NH ₂ CL)	ppm	0	0	0	0
Fouling & Biological	Iron bacteria		cells/mL	0	0	0	0
	Slime-forming bacteria		cells/mL	0	0	0	0
	Sulfate-reducing bacteria		cells/mL	0	0	0	0
	Suspended Solids ^b	(TSS)	ppm	<10	<10	<10	<10
Electrolysis All HX types	Earth Ground Resistance ^x		Ohms		Consult NEC and local electrical codes for grounding requirements		
	Electrolysis Voltage ^d		mV		Measure voltage and internal water loop to HP ground		
	Leakage Current ^d		mA		Measure current in water loop pipe		
Building Primary Electrical Ground to unit, must meet local diameter and penetration length requirements. Do not connect heat pump to steel pipe unless dissimilar materials are separated by using Di-electric unions. Galvanic corrosion of heat pump water pipe will occur							

Water Quality Requirements

1. The **Water Quality Requirements** table provides water quality requirements for coaxial and brazed-plate heat exchangers.
2. The water must be evaluated by an independent testing facility comparing site samples against this table. When water properties are outside of these parameters, the water must either be treated by a professional water treatment specialist to bring the water quality within the boundaries of this specification, or an external secondary heat exchanger must be used to isolate the heat pump water system from the unsuitable water. Failure to do so will void the warranty of the heat pump system and will limit liability for damage caused by leaks or system failure.
3. Regular sampling, testing and treatment of the water is necessary to assure that the water quality remains within acceptable levels thereby allowing the heat pump to operate at optimum levels.
4. If closed-loop systems are turned off for extended periods, water samples must be tested prior to operating the system.
5. For optimal performance, it is recommended that the closed-loop piping systems are initially filled with deionized water.
6. Well water with chemistry outside of these boundaries, and salt water or brackish water requires an external secondary heat exchanger. Surface/Pond water should not be used.
7. If water temperature is expected to fall below 40°F (4.4°C), antifreeze is required. Refer to the heat pump IOM for the correct solution ratios to prevent freezing.
 - α Hydrogen sulfide has an odor of rotten eggs. If one detects this smell, a test for H₂S must be performed. If H₂S is detected above the limit indicated, remediation is necessary. Consult with your water testing/treatment professional. If a secondary heat exchanger is required, use appropriate materials as recommended by the heat exchanger supplier.
 - β Suspended solids and particulates must be filtered to prevent fouling and failure of heat exchangers. Strainers or particulate filters must be installed to provide a maximum particle size of 600 micron (0.60 mm, 0.023 inch) using a 20 to 30 mesh screen size. When a loop is installed in areas with fine material such as sand or clay, further filtration is required to a maximum of 100 micron. Refer to the Strainer / Filter Sizing Chart to capture the particle sizes encountered on the site.
 - χ The WSHP piping system or other plumbing pipes must not be used as the building ground. An electrical grounding system using a dedicated ground rod meeting NEC and local electrical codes must be installed.
 - δ Refer to the **Antifreeze Percentages by Volume** table for instructions on measuring resistance and leakage currents within water loops.

Strainer / Filter Sizing


Mesh Size	Particle Size		
	Microns	Millimeter	Inch
20	840	0.840	0.0340
30	533	0.533	0.0210
60	250	0.250	0.0100
100	149	0.149	0.0060
150	100	0.100	0.0040
200	74	0.074	0.0029

- ppm = parts per million
- ppb = parts per billion

Models:
ME
024-072


Water Quality Requirements

Measuring Electrolysis, Voltage, and Current for Ground-Water Applications

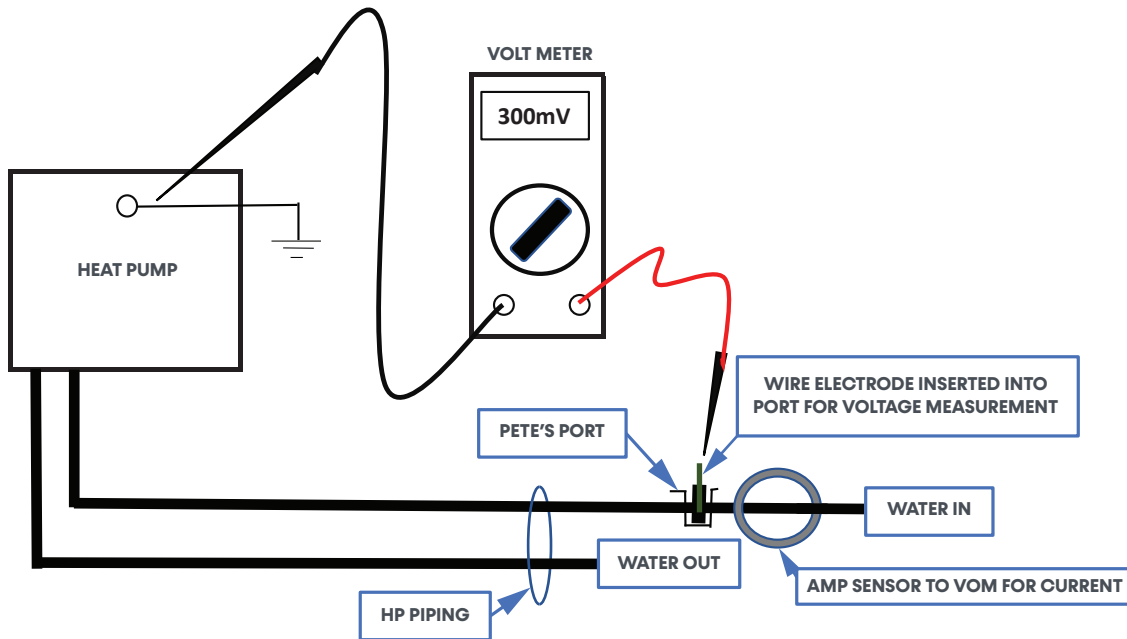

- Measure the electrolysis voltage using a volt meter between the heat pump ground and a #14 AWG solid copper wire electrode inserted into the water using a Pete's style access port.
- The heat pump must be operating and the water stream flowing.
- The voltage measured should be less than 300mV (0.300V). If the voltage is higher than 500mV, electrolysis occurs resulting in corrosion.
- If voltage is measured, the cause is a high-resistance earth ground or current on the neutral conductor. Remedial measures should be performed.
- Measure the current flowing through the piping system by using an amp clamp probe on the water-in line. The heat pump must be operating and the water stream flowing.
- There should be zero amps measured. If current is present, there is leakage current to the plumbing system and it must be rectified to prevent pipe corrosion.

Measuring Earth Ground Resistance

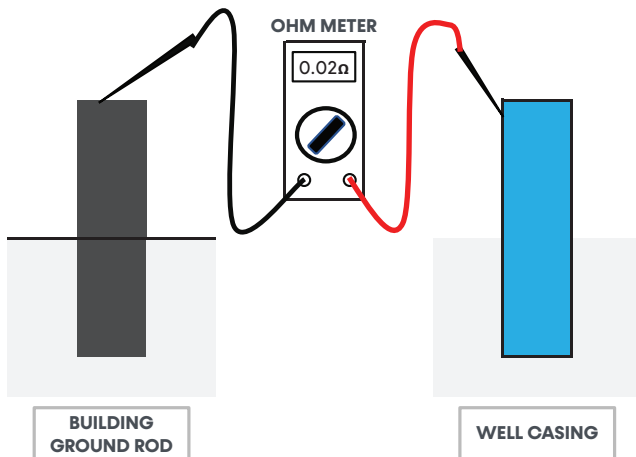

- Measure the earth ground bond using an Ohm meter between the building's ground rod and the steel well casing.
- The resistance measured should be zero Ohms. The NEC allows a resistance to ground up to 20 Ohms. Any resistance above zero indicates a poor earth ground, which may be the result of a hot neutral line or that conductive water is present. Both of these may lead to electrolysis and corrosion of the heat pump piping. A check for both should be performed and resolved.

NOTE: If the well casing is plastic, create a conductive path by inserting a #6 AWG bare copper wire into the well water. Remove the temporary conductor when finished.

Hot Water Generator

The Hot Water Generator (HWG) or desuperheater option provides considerable operating-cost savings by utilizing heat energy from the compressor discharge line to help satisfy domestic hot water requirements. The HWG is active throughout the year, providing virtually free hot water when the heat pump operates in the cooling mode or hot water at the COP of the heat pump during operation in the heating mode. Actual HWG water-heating capacities are provided in the appropriate heat pump performance data.

Heat pumps equipped with the HWG option include a built-in water-to-refrigerant heat exchanger that eliminates the need to tie into the heat pump's refrigerant circuit in the field. The control circuit and pump are also built in for residential equipment. Refer to figure **Typical HWG Installation** for an example of typical HWG water piping connections on a unit with built-in circulating pump. This piping layout prevents sludge/debris from the bottom of the tank being pulled into the HWG pump. **Due to high water temperature and potable water pressure, only use copper piping.**

The temperature setpoint of the HWG is field selectable to 125°F or 150°F. The 150°F setpoint allows more heat storage from the HWG. For example, consider the amount of heat that can be stored by the HWG when using the 125°F setpoint, versus the amount of heat that can be generated by the HWG when using the 150°F setpoint.

In a typical 50-gallon two-element electric water heater, the lower element is turned down to 100°F, or the lowest setting, to get the most from the HWG. The tank eventually stratifies so that the lower 80% of the tank, or 40 gallons, becomes 100°F (controlled by the lower element). The upper 20% of the tank, or 10 gallons, is maintained at 125°F (controlled by the upper element).

⚠ WARNING

A 150°F setpoint may lead to scalding or burns. The 150°F setpoint must only be used on systems that employ an approved anti-scald valve.


Using a 125°F setpoint, the HWG heats the lower 40 gallons of water from 100°F to 125°F, providing up to 8,330 Btu's of heat. Using the 150°F setpoint, the HWG heats the same 40 gallons of water from 100°F to 150°F and the remaining 10 gallons of water from 125°F to 150°F, providing a total of up to 18,743 Btu's of heat, or more than twice as much heat as when using the 125°F setpoint.

Electric water heaters are recommended. If a gas, propane, or oil water heater is used, a second preheat tank is required. See the **Two-tank HWG Installation** figure for an example. If the electric water heater has only a single center element, the dual-tank system is recommended to ensure a usable entering water temperature for the HWG.

Typically a single tank of at least 50 gallons (189 liters) is used to limit installation costs and space. Dual tank systems are preferred as they provide the maximum storage and temperate source water to the HWG. See the **Two-tank HWG Installation** for an example.

It is always advisable to use water-softening equipment on domestic-water systems to reduce the scaling potential and lengthen equipment life. In extreme water conditions, it may be necessary to avoid the use of the HWG option since the potential cost of frequent maintenance may offset or exceed any savings. Use the **HWG Water Piping** table for scaling potential tests.

Figure 29: Typical HWG Installation

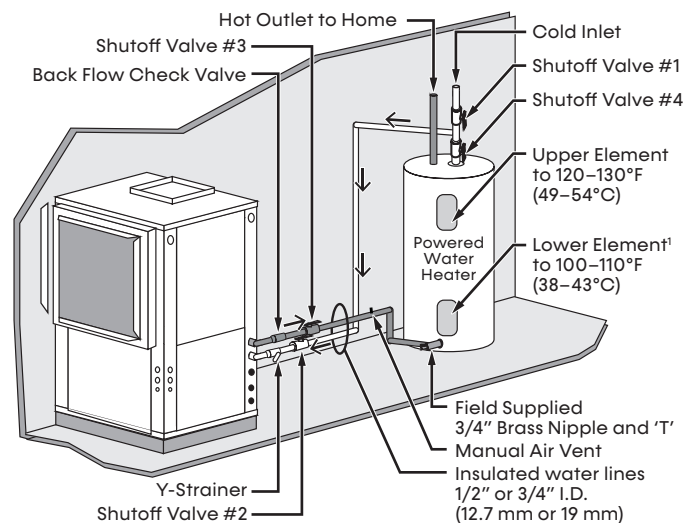


1. Lower element must be set below 110°F to prevent element from turning on when HWG pump circulates.

Models:
ME
024-072

Hot Water Generator

Figure 30: Two-tank HWG Installation

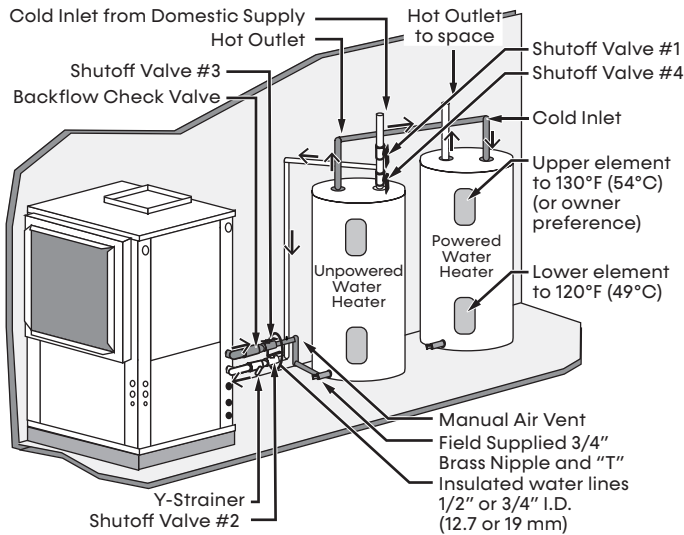

INSTALLATION

The HWG is controlled by two sensors and the DXM2.6. One sensor is located on the compressor discharge line to sense the discharge refrigerant temperature. The other sensor is located on the HWG heat exchanger's "Water In" line to sense the potable water temperature.

DXM2.6 Advanced Communicating Controls monitors the refrigerant and water temperatures to determine when to operate the HWG. The HWG operates any time the refrigerant temperature is sufficiently above the water temperature. Once the HWG has satisfied the water heating demand during a heat pump run cycle, the controller cycles the pump at regular intervals to determine if an additional HWG cycle can be utilized.

When the control is powered and the HWG pump output is active for water temperature sampling or HWG operation, the DXM2.6 status LED slowly flashes (On 1 second, Off 1 second).

If the control detects a HWG fault, the DXM2.6 status LED flashes a numeric fault code as follows:


- High Water Temperature (> 160°F) (five flashes)
- Hot Water Sensor Fault (six flashes)
- Compressor Discharge Sensor Fault (six flashes)

Fault code flashes have a duration of 0.3 seconds with a 10-second pause between fault codes. For example, a Compressor Discharge Sensor Fault is six flashes 0.3 seconds long, then a 10 second pause, then six flashes again, etc.

WARNING

Using 150°F setpoint on the HWG results in water temperatures sufficient to cause severe physical injury in the form of scalding or burns, even when the hot water tank temperature setting is visibly set below 150°F. The 150°F HWG setpoint must only be used on systems that employ an approved anti-scald valve (part number (AVAS4) at the hot water storage tank with such valve properly set to control water temperatures distributed to all hot water outlets at a temperature level that prevents scalding or burns.

Figure 31: Anti-scald Valve Piping Connection

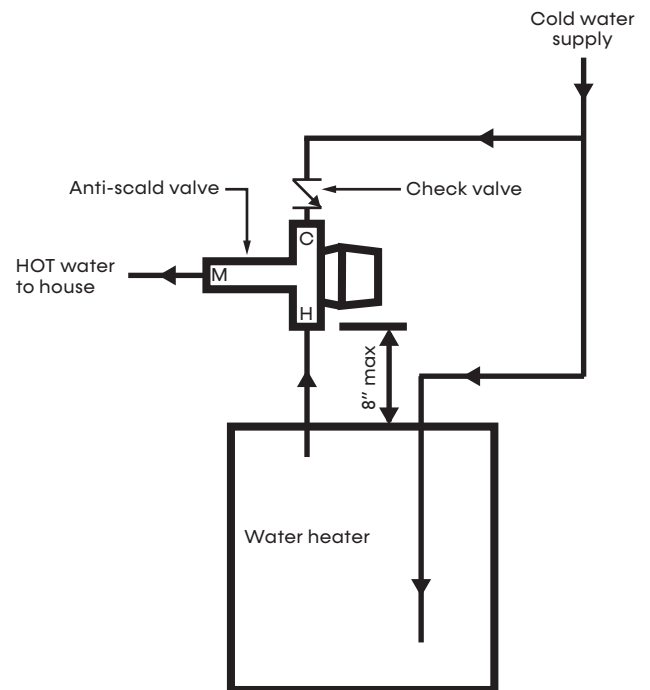

Hot Water Generator

- Hot Water Generator settings are determined by DIP switches 3-2, 3-3, and 3-4.
- DIP 3-2 controls the HWG Test Mode and provides for forced operation of the HWG output, activating the HWG pump for up to five minutes.
 - ON = HWG test mode,
OFF = normal HWG operation.
 - The control reverts to standard operation after five minutes regardless of switch position.
- DIP 3-3 determines HWG setpoint temperature and provides for selection of the HWG operating setpoint.
 - ON = 150°F (66°C),
OFF = 125°F (52°C)
- DIP 3-4 is for the HWG status and provides HWG operation control
 - ON = HWG mode enabled,
OFF = HWG mode disabled
 - Units are shipped from the factory with this switch in the OFF position.

WARNING

The HWG pump is fully wired from the factory. Use extreme caution when working around the microprocessor control as it contains line voltage connections that presents a shock hazard that can cause severe injury or death.


The heat pump, water piping, pump, and hot water tank should be located where the ambient temperature does not fall below 50°F (10°C). Keep water piping lengths at a minimum. DO NOT use a one-way length greater than 50 ft. (15 m). Refer to the table, **HWG Water Piping** for recommended piping sizes and maximum lengths.

All installations must be in accordance with local codes. The installer is responsible for knowing the local requirements, and for performing the installation accordingly. DO NOT activate the HWG (turn DIP 3-4 to the ON position) until Initial Startup section is completed. Powering the pump before all installation steps are completed will damage the pump.

WATER TANK PREPARATION

1. Turn off power or fuel supply to the hot water tank.
2. Connect a hose to the drain valve on the water tank.
3. Shut off the cold water supply to the water tank.
4. Open the drain valve and open the pressure relief valve or a hot water faucet to drain tank.
5. When using an existing tank, it should be flushed with cold water after it is drained until the water leaving the drain hose is clear and free of sediment.
6. Close all valves and remove the drain hose.
7. Install HWG water piping.

Figure 32: Hot Water Generator Settings

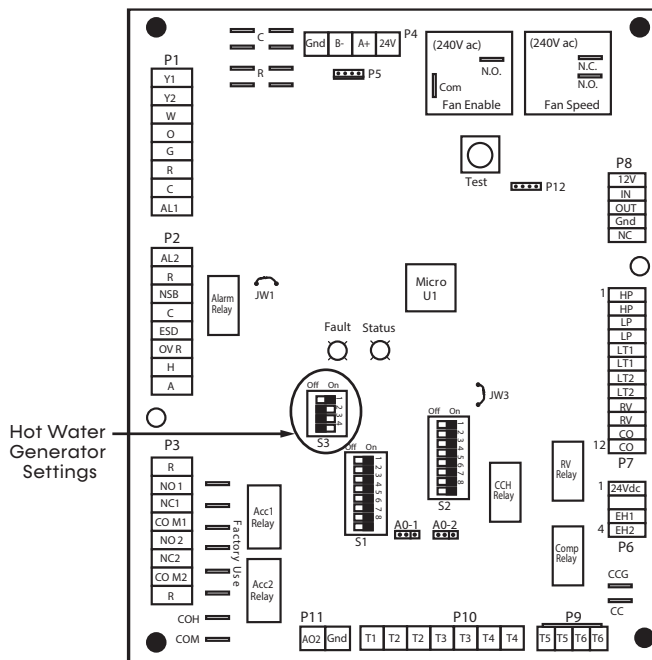

Models:
ME
024-072

Hot Water Generator

HWG WATER PIPING

- Using at least ½-inch (12.7-mm) I.D. copper, route and install the water piping and valves. Install an approved anti-scald valve if the 150°F HWG setpoint is or will be selected. An appropriate method must be employed to purge air from the HWG piping. This may be accomplished by flushing water through the HWG or by installing an air vent at the high point of the HWG piping system.
- Insulate all HWG water piping with no less than ¾-inch (10-mm) wall closed-cell insulation.
- Open both shutoff valves and make sure the tank drain valve is closed.

WATER TANK REFILL

- Close valve #4. Ensure that the HWG valves (valves #2 and #3) are open. Open the cold water supply (valve #1) to fill the tank through the HWG piping. This will force water flow through the HWG and purge air from the HWG piping.
- Open a hot-water faucet to vent air from the system until water flows from faucet; turn off faucet. Open valve #4.
- Depress the hot water tank pressure relief valve handle to ensure that there is no air remaining in the tank.
- Inspect all work for leaks.
- Before restoring power or fuel supply to the water heater, adjust the temperature setting on the tank thermostat(s) to insure maximum utilization of the heat available from the refrigeration system and conserve the most energy. On tanks with both upper and lower elements and thermostats, the lower element should be turned down to 100°F (38°C) or the lowest setting; the upper element should be adjusted to 120-130°F (49-54°C). Depending upon the specific needs of the customer, you may want to adjust the upper element differently. On tanks with a single thermostat, use a preheat tank as shown in the figure, **Two-tank HWG Installation**.
- Replace access cover(s) and restore power or fuel supply.

INITIAL STARTUP

- Make sure all valves in the HWG water circuit are fully open.
- Turn on the heat pump and allow it to run for 10-15 minutes.
- Set S3-4 to the “ON” position (enabled) to engage the HWG. Use the **Hot Water Generator Settings** figure for an example.
- The HWG pump should not run if the compressor is not running.
- The temperature difference between the water entering and leaving the HWG coil should be approximately 5-10°F (3-6°C).
- Allow the unit to operate for 20 to 30 minutes to ensure that it is functioning properly.

Table 6: HWG Water Piping

Unit Nominal Tonnage	Nominal HWG Flow (gpm)	1/2" Copper (max length')	3/4" Copper (max length')
2.0	0.8	50	-
2.5	1.0	50	-
3.0	1.2	50	-
3.5	1.4	50	-
4.0	1.6	45	50
5.0	2.0	25	50
6.0	2.4	10	50

1. Maximum length is equivalent length (in feet) one way of type L copper.

WARNING

Use only copper piping for HWG piping due to the potential of high water temperatures for water that has been in the HWG heat exchanger during periods of no-flow conditions (HWG pump not energized). Piping other than copper may rupture due to high water temperature and potable water pressure. CPVC, PEX, or other plastic pipe should not be used HWG piping.

Electrical Data: CV EC Blower Motor

Models:
ME
024-072

Units with External Pump Only

Model	Voltage Code	Rated Voltage	Voltage Min/Max	Compressor				Fan Motor FLA	Pump		Total Unit FLA	Min Circ Amp	Fuse HACR
				MCC	RLA	LRA	Qty		External				
ME024	G.J.	208/230-1-60	187/252	16.0	10.3	62.0	1	4.2	4		18.5	21.1	30
ME036	G.J.	208/230-1-60	187/252	22.7	14.6	76.0	1	4.2	4		22.8	26.5	40
ME048	G.J.	208/230-1-60	187/252	28.6	18.3	138.0	1	7.5	4		29.8	34.4	50
ME060	J.	208/230-1-60	187/252	34.8	22.3	149.0	1	7.5	4		33.8	39.4	60
ME072	J.	208/230-1-60	187/252	43.7	28.0	166.0	1	7.5	4		39.5	46.5	70

Units with External Pump and HWG (no Internal Flow Controller)

Model	Voltage Code	Rated Voltage	Voltage Min/Max	Compressor				Fan Motor FLA	Pump		Total Unit FLA	Min Circ Amp	Fuse HACR
				MCC	RLA	LRA	Qty		External	HWG FLA			
ME024	G.J.	208/230-1-60	187/252	16.0	10.3	62.0	1	4.2	4	0.28	18.8	21.4	30
ME036	G.J.	208/230-1-60	187/252	22.7	14.6	76.0	1	4.2	4	0.28	23.1	26.7	40
ME048	G.J.	208/230-1-60	187/252	28.6	18.3	138.0	1	7.5	4	0.28	30.1	34.7	50
ME060	J.	208/230-1-60	187/252	34.8	22.3	149.0	1	7.5	4	0.28	34.1	39.7	60
ME072	J.	208/230-1-60	187/252	43.7	28.0	166.0	1	7.5	4	0.28	39.8	46.8	70

Units with Internal Flow Controller and HWG with Pump - Standard Head Variable Pump

Model	Voltage Code	Rated Voltage	Voltage Min/Max	Compressor				Fan Motor FLA	Pump		Total Unit FLA	Min Circ Amp	Fuse HACR
				MCC	RLA	LRA	Qty		Motor FLA	HWG FLA			
ME024	G.J.	208/230-1-60	187/252	16.0	10.3	62.0	1	4.2	0.64	0.28	15.4	18.0	25
ME036	G.J.	208/230-1-60	187/252	22.7	14.6	76.0	1	4.2	0.64	0.28	19.7	23.4	35
ME048	G.J.	208/230-1-60	187/252	28.6	18.3	138.0	1	7.5	0.64	0.28	26.7	31.3	45
ME060	J.	208/230-1-60	187/252	34.8	22.3	149.0	1	7.5	0.64	0.28	30.7	36.3	50
ME072	J.	208/230-1-60	187/252	43.7	28.0	166.0	1	7.5	0.64	0.28	36.4	43.4	70

Units with Internal Flow Controller with Pump - Standard Head Variable Pump

Model	Voltage Code	Rated Voltage	Voltage Min/Max	Compressor				Fan Motor FLA	Pump		Total Unit FLA	Min Circ Amp	Fuse HACR
				MCC	RLA	LRA	Qty		Motor FLA				
ME024	G.J.	208/230-1-60	187/252	16.0	10.3	62.0	1	4.2	0.64		15.1	17.7	25
ME036	G.J.	208/230-1-60	187/252	22.7	14.6	76.0	1	4.2	0.64		19.4	23.1	35
ME048	G.J.	208/230-1-60	187/252	28.6	18.3	138.0	1	7.5	0.64		26.4	31.0	45
ME060	J.	208/230-1-60	187/252	34.8	22.3	149.0	1	7.5	0.64		30.4	36.0	50
ME072	J.	208/230-1-60	187/252	43.7	28.0	166.0	1	7.5	0.64		36.1	43.1	70

Models:
ME
024-072

Electrical Data: CV EC Blower Motor

Units with Internal Flow Controller and HWG with Pump - High Head Variable Pump

Model	Voltage Code	Rated Voltage	Voltage Min/Max	Compressor				Fan Motor FLA	Pump		Total Unit FLA	Min Circ Amp	Fuse HACR
				MCC	RLA	LRA	Qty		Motor FLA	HWG FLA			
ME024	G.J.	208/230-1-60	187/252	16.0	10.3	62.0	1	4.2	1.44	0.28	16.2	18.8	25
ME036	G.J.	208/230-1-60	187/252	22.7	14.6	76.0	1	4.2	1.44	0.28	20.5	24.2	35
ME048	G.J.	208/230-1-60	187/252	28.6	18.3	138.0	1	7.5	1.44	0.28	27.5	32.1	50
ME060	J.	208/230-1-60	187/252	34.8	22.3	149.0	1	7.5	1.44	0.28	31.5	37.1	50
ME072	J.	208/230-1-60	187/252	43.7	28.0	166.0	1	7.5	1.44	0.28	37.2	44.2	70

Units with Internal Flow Controller with Pump - High Head Variable Pump

Model	Voltage Code	Rated Voltage	Voltage Min/Max	Compressor				Fan Motor FLA	Pump	Total Unit FLA	Min Circ Amp	Fuse HACR
				MCC	RLA	LRA	Qty		Motor FLA			
ME024	G.J.	208/230-1-60	187/252	16.0	10.3	62.0	1	4.2	1.44	15.9	18.5	25
ME036	G.J.	208/230-1-60	187/252	22.7	14.6	76.0	1	4.2	1.44	20.2	23.9	35
ME048	G.J.	208/230-1-60	187/252	28.6	18.3	138.0	1	7.5	1.44	27.2	31.8	50
ME060	J.	208/230-1-60	187/252	34.8	22.3	149.0	1	7.5	1.44	31.2	36.8	50
ME072	J.	208/230-1-60	187/252	43.7	28.0	166.0	1	7.5	1.44	36.9	43.9	70

Electrical Power Wiring

Models:
ME
024-072

⚠ WARNING

To avoid possible injury or death due to electrical shock, open the power supply disconnect switch and secure it in an open position during installation.

⚠ WARNING

Disconnect electrical power source to prevent injury or death from electrical shock.

⚠ CAUTION

Use only copper conductors for field installed electrical wiring. Unit terminals are not designed to accept other types of conductors.

ELECTRICAL

Line Voltage - All field installed wiring, including electrical ground, must comply with NFPA 70: National Electrical Code (NEC), CSA C22.1: Canadian Electrical Code (CE Code), as well as applicable local codes. Refer to the unit electrical data for fuse sizes. Consult wiring diagram for field connections that must be made by the installing (or electrical) contractor. All final electrical connections must be made with a length of flexible conduit to minimize vibration and sound transmission to the building.

Disconnects - Units with a factory-installed disconnect switch will provide full separation of **all poles** and disconnection from main line voltage. For units where factory disconnect is not selected as an option, the installer must incorporate the means to fully disconnect the line voltage in the fixed wiring in accordance with wiring rules and local electrical codes.


POWER CONNECTION

The line voltage connection is made by connecting the incoming line voltage wires to the “L” side of the contactor. See the electrical data tables for maximum fuse sizes.

GENERAL LINE VOLTAGE WIRING

Ensure the available power is the same voltage and phase shown on the unit serial plate. Line- and low-voltage wiring must be in accordance with local codes or the National Electric Code, whichever is applicable.

Figure 33: Single Phase Line Voltage Field Wiring

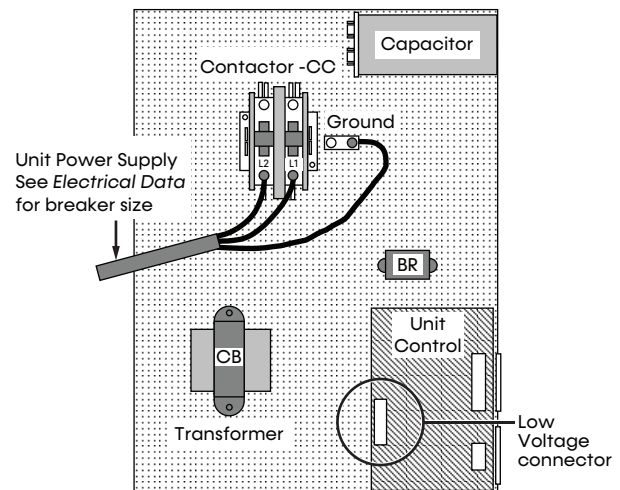

NOTE

460V units with a CV EC motor or Internal Secondary Pump require a neutral wire. Three-phase wiring is similar except that all three power wires are directly connected to the contactor.

TRANSFORMER


All 208/230V units are factory wired for 240V. If supply voltage is 208V, the installer must rewire the transformer. See the example wiring diagram for specific instructions.

Models:
ME
024-072

Electrical Example Wiring Diagram

NOTE: See the DXM2.6 AOM (part #97B0003N13) at www.heatcontroller.com

Figure 35: Example Wiring Diagram for ME

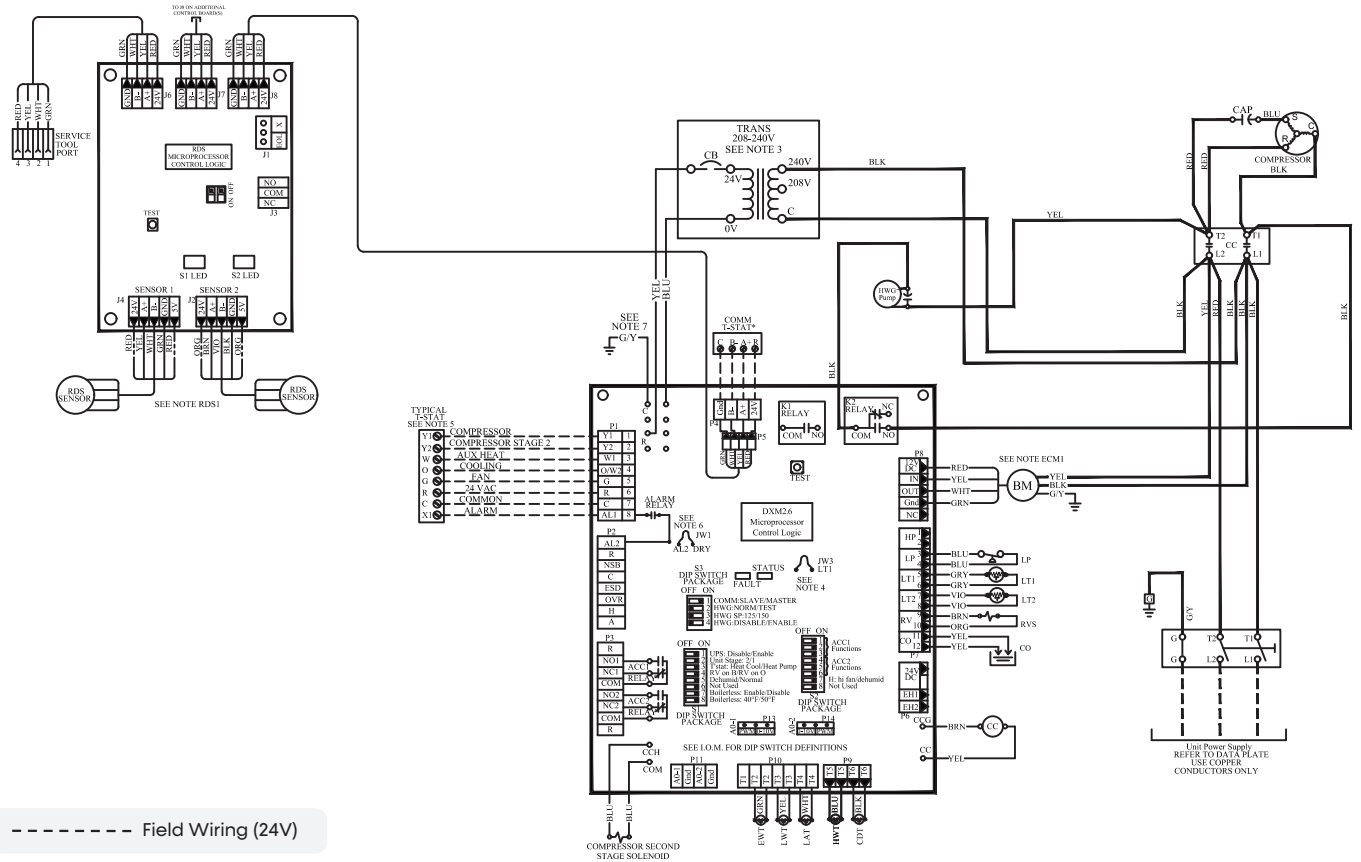

Electrical Low-Voltage Wiring

Models:
ME
024-072

THERMOSTAT CONNECTIONS

Wire the thermostat directly to the unit control. See the *Electrical Thermostat Wiring* section for specific terminal connections. Review the appropriate AOM (Application, Operation and Maintenance) manual for units with DDC controls.


LOW WATER TEMPERATURE CUTOUT SELECTION

The unit control allows the field selection of low water (or water-antifreeze solution) temperature limit by clipping jumper JW3 (see the **LT1 Limit Setting** figure), which changes the sensing temperature associated with thermistor LT1. Note that the LT1 thermistor is located on the refrigerant line between the coaxial heat exchanger and expansion device (TXV).

Therefore, LT1 is sensing refrigerant temperature, not water temperature, which is a better indication of how water flow rate/temperature is affecting the refrigeration circuit.

The factory setting for LT1 is for systems using water (30°F [-1.1°C] refrigerant temperature). In low water temperature (extended range) applications with antifreeze (most ground loops), clip jumper JW3 as shown in the **LT1 Limit Setting** figure, to change the setting to 10°F (-12.2°C) refrigerant temperature, which is a more suitable temperature when using an antifreeze solution. All units operating with entering water temperatures below 60°F (15.6°C) must include the optional water/refrigerant circuit insulation package to prevent internal condensation.

Figure 36: LT1 Limit Setting

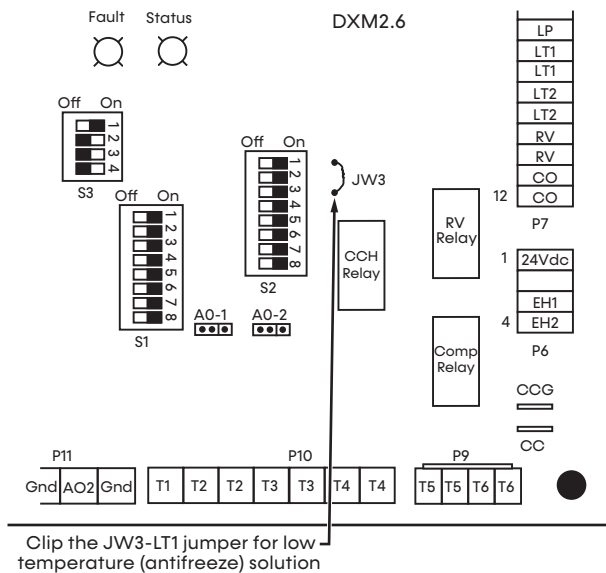

Models:
ME
024-072

Electrical Low-Voltage Wiring

ACCESSORY CONNECTIONS

A terminal paralleling the compressor contactor coil is provided on the DXM2.6. Terminal “A” is designed to control accessory devices. **NOTE: Use this terminal only with 24V signals and not line voltage. Terminal “A” is energized with the compressor contactor.**

The DXM2.6 includes two accessory relays ACC1 and ACC2. Each relay includes a normally open (NO) and a normally closed (NC) contact. Accessory relays may be configured to operate as shown in the table below.

Accessory Relay 1 Connection

DIP 2.1	DIP 2.2	DIP 2.3	ACC1 Relay Option
ON	ON	ON	Cycle with fan
OFF	ON	ON	N/A for Residential Applications
ON	OFF	ON	Water valve – Slow opening
ON	ON	OFF	Outside air damper
OFF	OFF	ON	N/A for Residential Applications
ON	OFF	OFF	N/A for Residential Applications


• All other DIP combinations are invalid

Accessory Relay 2 Connection

DIP 2.4	DIP 2.5	DIP 2.6	ACC2 Relay Option
ON	ON	ON	Cycle with compressor
OFF	ON	ON	N/A for Residential Applications
ON	OFF	ON	Water valve – Slow opening
OFF	OFF	ON	Humidifier
ON	ON	OFF	Outside air damper

• All other DIP combinations are invalid

Figure 37: Accessory Wiring

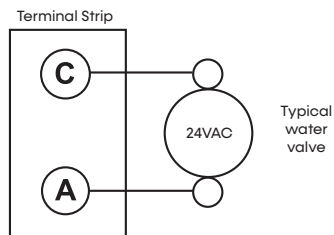

WATER SOLENOID VALVES

Use external solenoid valve(s) with ground water installations to shut off flow to the unit when the compressor is not operating. A slow-closing valve may be required to help reduce water hammer. The **Accessory Wiring** figure shows typical wiring for a 24VAC external solenoid valve. **Accessory Motorized Water Valve – Typical Wiring Example #1** and **Example #2** illustrate a slow-closing water control valve wiring for two styles of typical accessory water valves. Slow-closing valves take approximately 60 seconds to open (very little water flows before 45 seconds). Once fully open, an end switch allows the compressor to be energized. Only use relay or triac-based electronic thermostats with slow-closing valves. When wired as shown, the slow-closing valve operates properly with the following notations:

1. The valve remains open during a unit lockout.
2. The valve draws approximately 25-35VA through the “Y” signal of the thermostat.

NOTE: This valve can overheat the anticipator of an electromechanical thermostat. Therefore, only use relay or triac-based thermostats.

TWO-STAGE UNITS

Design ME two-stage units with two parallel valves for ground water applications to limit water use during first stage operation. For example, at 1.5 GPM/ton (2.0 l/m per kW), a MEO48 unit requires 6 GPM (23 l/m) for full load (2nd stage) operation, but only 4 GPM (15 l/m) during 1st stage operation. Since the unit operates on first stage 80-90% of the time, significant water savings can be realized by using two parallel solenoid valves with two flow regulators. In the example above, a stage-one solenoid is installed with a 4 GPM (15 l/m) flow regulator on the outlet, while stage two utilizes a 2 GPM (8 l/m) flow regulator. When stage one is operating, the second solenoid valve is closed. When stage two is operating, both valves are open, allowing full load flow rate.

The **Two-Stage Piping** figure illustrates piping for two-stage solenoid valves. Review the figures in *Thermostat Installation* for stage-one valve wiring. Wire the stage-two valve between terminal “Y2” and terminal “C.” **NOTE: When EWT is below 50°F (10°C), a minimum 2 GPM per ton (2.6 l/m per kW) is required.**

Electrical Low-Voltage Wiring

Models:
ME
024-072

Figure 38: Accessory Motorized Water Valve – Typical Wiring Example #1

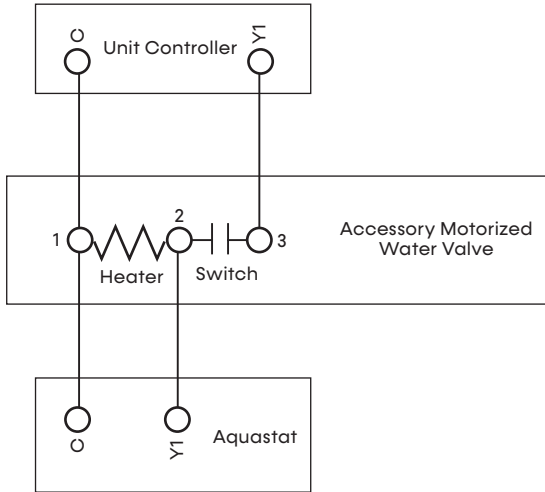


Figure 39: Accessory Motorized Water Valve - Typical Wiring Example #2


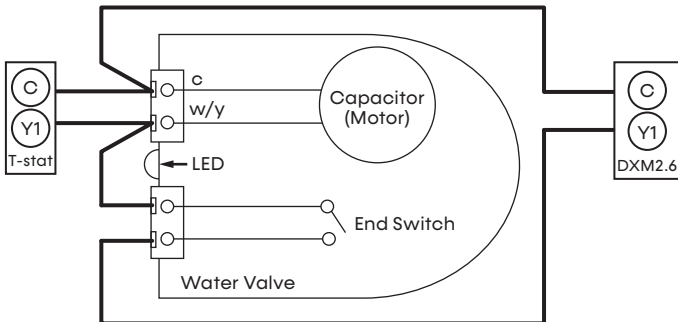


Figure 40: Two-Stage Piping

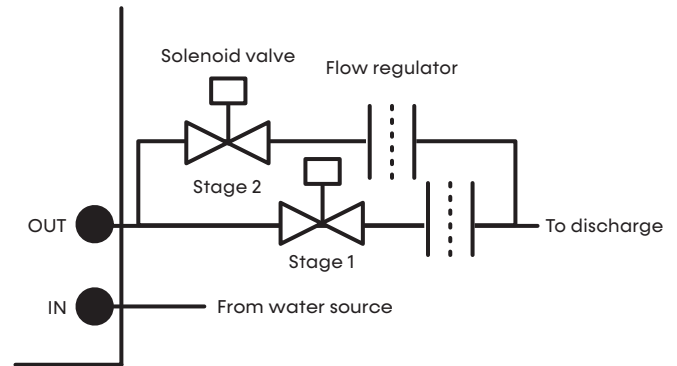

NOTES

Shutoff valves, strainers, and other required components not shown.

Models:
ME
024-072

Electrical Refrigerant Detection System

REFRIGERANT DETECTION SYSTEM (RDS)

The function, operation, and required servicing measures for the RDS include the following:

- The RDS monitors the status of the refrigerant sensor(s) in the unit. If refrigerant is detected above the maximum threshold, the control enables the unit blower, disables the compressor(s), and enables the pilot relay on the RDS control board. You can use this relay to open external zoning dampers and/or activate external mechanical ventilation. The relay is normally closed (NC) and can control a signal with a maximum of 28VA @ 24VAC.
- A fault is enabled if the RDS control board loses communication with a refrigerant sensor, or if the main control board loses communication with the RDS board. See the *Troubleshooting* section for steps to troubleshoot the RDS.
- The End of Line (EoL) termination is used to prevent signal reflection issues in the communication network. When the EoL termination is enabled, it places a resistor at the end of the communication line, ensuring proper signal integrity and reducing potential communication errors. Add the EoL termination resistor when the RDS board is the end of a daisy-chain, and the total length of the wire is greater than 50 feet.

Figure 41: RDS Board

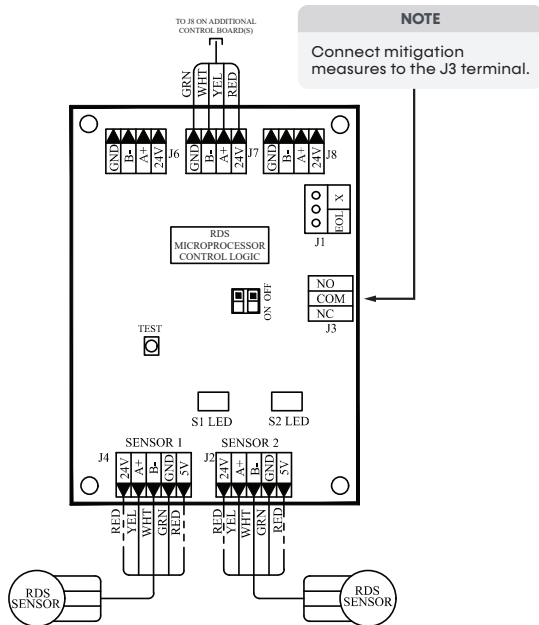


Figure 42: Board Location


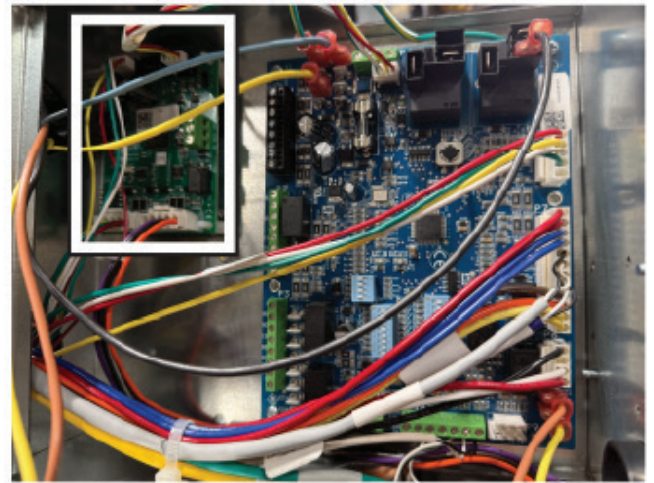


Figure 43: Vertical Control Box Sensor

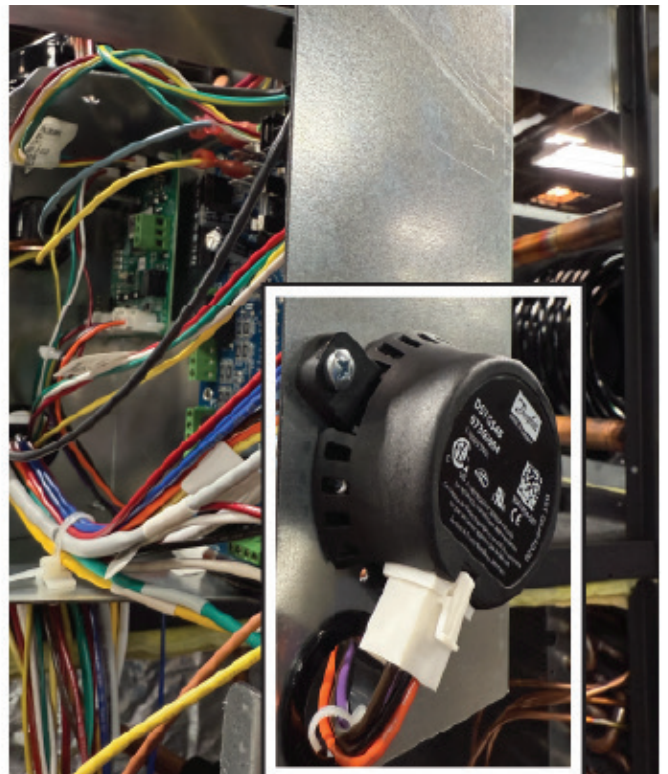

Electrical Refrigerant Detection System

Models:
ME
024-072

Figure 44: Vertical Blower Compartment Sensor



Models:
ME
024-072

Electrical Thermostat Wiring

THERMOSTAT INSTALLATION


Install the thermostat on an interior wall in a larger room away from supply duct drafts. DO NOT locate the thermostat in areas subject to sunlight, drafts or on external walls. The wire access hole behind the thermostat may need to be sealed to prevent erroneous temperature measurement.

Position the thermostat back plate against the wall so that it appears level and so the thermostat wires protrude through the middle of the back plate. Mark the position of the back plate mounting holes and drill holes with a 3/16-inch (5 mm) bit. Install supplied anchors and secure plate to the wall. Thermostat wire must be 18 AWG wire.


Use the **Thermostat Wiring** figure for reference, however, use the thermostat IOM and or unit wiring diagram for actual wiring connections. Most heat pump thermostats are compatible provided they have the correct number of heating and cooling stages.

Thermostat Wiring

CONVENTIONAL SINGLE-STAGE THERMOSTAT CONNECTION TO DXM2.6

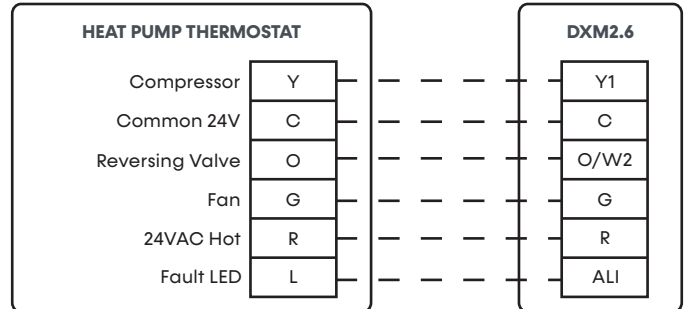

CONVENTIONAL 3 HEAT/2 COOL THERMOSTAT CONNECTION TO DXM2.6

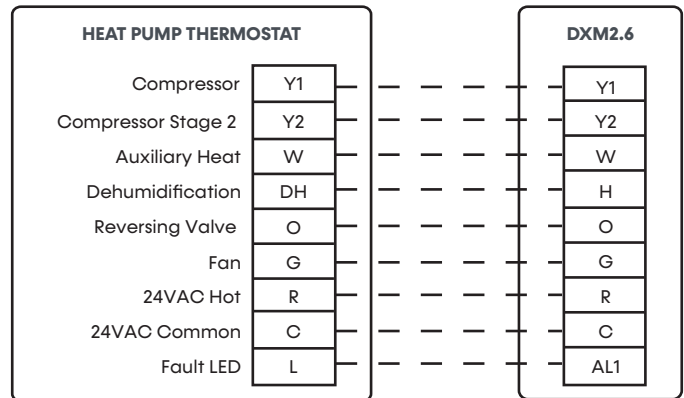

Electrical

DXM2.6 and Wireless Service Tool

Models:
ME
024-072



DXM2.6 Advanced Communicating Controls

For detailed controller information, see the DXM2.6 Application, Operation, and Maintenance (AOM) manual (part # 97B0142N01). To confirm the controller type of your particular unit, refer to digit 9 on the unit model number and the unit nomenclature diagram found on page 3 of this manual.



Refrigerant Detection System

For detailed controller information, see the Refrigerant Detection System Application, Operation, and Maintenance (AOM) manual (part # 97B0152N01).



Wireless Service Tool

For detailed controller information, see the Wireless Service Tool Application, Operation, and Maintenance (AOM) manual (part # 97B0169N01). The Wireless Service Tool port is located on the corner post of most models.

EC Blower Motor Control

The EC blower motor is controlled directly by the DXM2.6, which converts thermostat inputs and CFM settings to signals used by the EC blower motor controller.

The DXM2.6 maintains a selectable operating airflow (CFM) for each heat pump operating mode. For each operating mode there are maximum and minimum airflow limits. See the **CV EC Motor Limits** tables for the maximum, minimum, and default operating airflows.

Airflow levels are selected using the configuration menus of the Wireless Service Tool. The configuration menus allow the installer to independently select and adjust the operating airflow for each of the operating modes. Air flow can be selected in 25 CFM increments within the minimum and maximum limits shown in the **CV EC Motor Limits** table. The blower operating modes include:

- First Stage Cooling (Y1 and O)
- Second Stage Cooling (Y1, Y2, and O)
- First Stage Cooling in Dehumidification Mode (Y1, O, and Dehumid)
- Second Stage Cooling in Dehumidification Mode (Y1, Y2, O, and Dehumid)
- First Stage Heating (Y1)
- Second Stage Heating (Y1 and Y2)
- Third Stage (Auxiliary) Heating (Y1, Y2, and W)
- Emergency Heating (W with no Y1 or Y2)
- Fan (G with no Y1, Y2, or W)

It is highly recommended that the Wireless Service Tool be used to set dehumidification mode electronically. Dehumidification can NOT be selected when using a non-communicating thermostat with a Variable Water Flow unit with internal flow controller (pump). For dehumidification settings on other units using the non-communicating stat, refer to DXM2.6 AOM (part #97B0142N01).

The EC blower motor includes soft start and ramp down features. The soft start feature is a gentle increase of motor rpm at blower startup. This creates a much quieter blower start cycle.

The ramp down feature allows the blower to slowly decrease rpm to a full stop at the end of each blower cycle. This creates a quieter end to each blower cycle and adds overall unit efficiency.

The ramp down feature is eliminated during an ESD (Emergency Shut Down) situation. When the DXM2.6 ESD input is activated, the blower and all other control outputs are immediately deactivated.

The ramp down feature (also known as the heating or cooling “Off Delay”) is field-selectable by the installer. The allowable range is 0 to 255 seconds.

Blower Performance Data

Models:
ME
024-072

CV EC MOTOR ADVANTAGE

A major benefit of the CV EC motor over other blower motor types is its ability to adjust airflow directly at the unit with the Wireless Service Tool. Airflow levels can be adjusted in increments of 25 CFM from the unit's minimum and maximum CFM range (see the **CV EC motor configuration** table for details).

Blower Performance: CV EC Blower Motor Standard Unit

Model	Max ESP (in wg)	Range	Cooling Mode		Dehumid Mode		Heating Mode		Fan Only Mode	Aux Emergency Mode
			Stage 2	Stage 1	Stage 2	Stage 1	Stage 2	Stage 1		
ME024	1.0	Minimum	600	450	600	350	600	450	300	700
		Default	800	700	650	550	800	700	350	850
		Maximum	1,000	800	1,000	650	1,000	800	850	1,000
ME036	0.9	Minimum	900	600	900	475	900	600	450	1,350
		Default	1,200	1,000	975	800	1,200	1000	525	1,350
		Maximum	1,500	1,200	1,500	975	1,500	1200	1,250	1,500
ME048	1.0	Minimum	1,200	900	1,200	725	1,200	900	600	1,350
		Default	1,600	1,500	1,275	1,200	1,600	1,500	700	1,500
		Maximum	2,000	1,700	2,000	1,350	2,000	1,700	1,700	2,000
ME060	0.7	Minimum	1,500	1,200	1,500	950	1,500	1,200	750	1,500
		Default	1,900	1,700	1,525	1,350	1,900	1,700	875	1,875
		Maximum	2,100	1,900	2,100	1,525	2,500	1,900	2,100	2,300
ME072	0.7	Minimum	1,800	1,200	1,500	950	1,800	1,200	750	1,800
		Default	1,900	1,700	1,525	1,350	1,900	1,700	875	2,000
		Maximum	2,100	1,900	2,100	1,525	2,100	1,900	2,100	2,300

- Blower performance data is based on the lowest nameplate voltage setting.
- Blower performance is based on a wet coil with clean 1-inch filter.
- Blower performance is based on operating conditions of 80°F DB and 67°F WB.
- Airflow is controller within ±5% up to max ESP shown with wet coil and standard 1" fiberglass air filter.
- Cells in grey - option not available

Models:
ME
024-072

Operating and Commissioning Limits

OPERATING LIMITS

Environment – Units are designed for indoor installation only. Never install units in areas subject to freezing or where humidity levels could cause cabinet condensation (such as unconditioned spaces subject to 100% outside air).

Power Supply – Voltage utilization shall comply with AHRI Standard 110 or values provided in the *Electrical Data* section.

Three factors determine the operating limits of water-source heat pumps: return air temperature, water temperature, and ambient temperature. When any one of these factors is at minimum or maximum levels, the other two factors should be at normal levels to ensure proper unit operation. Extreme variations in temperature and humidity and/or corrosive water or air adversely affects unit performance, reliability, and service life.

Table 7: Operating Limits

Operating Limits	Cooling	Heating
Air Limits		
Min. ambient air, DB	10°F [-12°C] ¹	10°F [-12°C] ¹
Max. ambient air, DB	130°F [54.4°C]	130°F [54.4°C]
Min. entering air, DB/WB	65/45°F [18/7°C]	50°F [10°C]
Max. entering air, DB/WB	90/72°F [32/22°C]	80°F [27°C]
Min/Max Airflow (CFM/Ton)	300 to 500 CFM/Ton ²	
Water Limits		
Min. entering water	30°F [-1°C] ³	20°F [-6.7°C]
Max. entering water	120°F [49°C]	90°F [32°C]
Water Flow Range	1.5 to 3.0 gpm/ton [1.6 to 3.2 l/m per kW] ⁴	

Notes:

- To prevent unit damage, the water loop should contain antifreeze to prevent freezing when not in operation.
- Refer to specific blower tables for each model size
- With unit flow-control automation.
- Unless specified different on performance table for any model size

Unit Maximum Water Working Pressure

Options	Max Pressure PSIG [kPa]
Base Unit	300 [2,068]
Internal Modulating Valve	300 [2,068]
Internal Variable-Speed Pump	145 [1,000]

COMMISSIONING CONDITIONS

Starting conditions vary depending upon model and are based upon the following notes:

NOTES:

- Commissioning Conditions are not normal or continuous operating conditions. Minimum/maximum limits are startup conditions to bring the building space up to occupancy temperatures. Units are not designed to operate under these conditions on a regular basis.
- Voltage utilization range complies with AHRI Standard 110.

Table 8: Commissioning Conditions

Commissioning Conditions	Cooling	Heating
Air Limits		
Min. ambient air, DB	10°F [-12°C] ¹	10°F [-12°C] ¹
Max. ambient air, DB	130°F [54.4°C]	130°F [54.4°C]
Min. entering air, DB/WB	65/45°F [18/7°C]	40°F [4.4°C] ⁶
Max. entering air, DB/WB	100/75°F [38/24°C] ⁵	80°F [27°C]
Min/Max Airflow (CFM/Ton)	300 to 500 CFM/Ton ²	
Water Limits		
Min. entering water	20°F [-6.7°C] ³	20°F [-6.7°C]
Max. entering water	120°F [49°C]	90°F [32°C]
Water Flow Range	1.5 to 3.0 gpm/ton [1.6 to 3.2 l/m per kW] ⁴	

Notes:

- To prevent unit damage, the water loop should contain antifreeze to prevent freezing when not in operation.
- Refer to specific blower tables for each model size
- With unit flow-control automation.
- Unless specified different on performance table for any model size
- Commission units for cooling at entering air temperatures of 100/75°F (38/24°C) only at rated water flow or 3 gpm/ton.
- Commission units for heating at entering air temperature of 40°F (4.4°C) only at rated water flow or 3 gpm/ton.

Unit System Checkout

WARNING

Polyolester Oil, commonly known as POE oil, is a synthetic oil used in many refrigeration systems including those with R-454B refrigerant. POE oil, if it ever comes in contact with PVC or CPVC piping, may cause failure of the PVC/CPVC. PVC/CPVC piping should never be used as supply or return water piping with water-source heat pump products containing R-454B as system failures and property damage may result.

CAUTION

Verify ALL water controls are open and allow water flow prior to engaging the compressor. Freezing of the brazed plate or water lines can permanently damage the heat pump.

CAUTION

To avoid equipment damage, DO NOT leave system filled in a building without heat during the winter unless antifreeze is added to system water. Condenser coils never fully drain by themselves and will freeze unless winterized with antifreeze.

NOTE: The manufacturer strongly recommends pressure testing all piping connections, both internal and external to the unit, using an appropriate method before finishing the interior space or before limiting access to all connections. Test pressure may not exceed the maximum allowable pressure for the unit and all components within the water system. The manufacturer is not responsible or liable for damages from water leaks due to inadequate or lack of a pressurized leak test, or damages caused by exceeding the maximum pressure rating during installation.

BEFORE POWERING THE SYSTEM, check the following:

UNIT CHECKOUT

- Balancing/shutoff valves:** Ensure that all isolation valves are open and water control valves are wired.
- Line voltage and wiring:** Verify that voltage is within an acceptable range for the unit and wiring and fuses/breakers are properly sized. Verify that low voltage wiring is complete.
- Unit Control Transformer:** Ensure transformer has properly selected control voltage tap. 208-230V units are factory wired for 240V operation unless specified otherwise.
- Entering water and air:** Ensure that entering water and air temperatures are within operating limits of the **Operating Limits** and **Commissioning Conditions** tables.
- Low water temperature cutout:** Verify that low water temperature cut-out on the DXM2.6 is properly set.
- Unit fan:** Manually rotate fan to verify free rotation and ensure that blower wheel is secured to the motor shaft. Be sure to remove any shipping supports if needed. DO NOT oil motors upon startup. Fan motors are pre-oiled at the factory. Check unit fan speed selection and compare to design requirements.
- Condensate line:** Verify that condensate line is open and properly pitched toward drain.
- Water flow balancing:** Record inlet and outlet water temperatures for each heat pump upon startup. This check can eliminate nuisance trip outs and high velocity water flow that could erode heat exchangers.
- Unit air coil and filters:** Ensure that filter is clean and accessible. Clean air coil of all manufacturing oils.
- Unit controls:** Verify that DXM2.6 field-selection options are properly set.

SYSTEM CHECKOUT

- System water temperature:** Check water temperature for proper range and also verify heating and cooling set points for proper operation.
- System pH:** Check and adjust water pH if necessary to maintain a level between 6.0 and 8.5. Proper pH promotes longevity of hoses and fittings. Verify these requirements using the **Water Quality Requirements** table.
- System flushing:** Verify that all hoses are connected end to end when flushing to ensure that debris bypasses the unit heat exchanger, water valves and other components. Water used in the system must be potable quality initially and clean of dirt, piping slag, and strong chemical cleaning agents. Verify that all air is purged from the system. Air in the system can cause poor operation or system corrosion.
- Low water temperature cutout:** Verify that low water temperature cut-out controls are provided for the outdoor portion of the loop. Otherwise, operating problems may occur.
- System control center:** Verify that the control center and alarm panel have appropriate setpoints and are operating as designed.
- Miscellaneous:** Note any questionable aspects of the installation.

Unit Startup Procedure

UNIT STARTUP PROCEDURE

1. After checkouts are complete, turn on power to the unit. It is recommended (but not necessary for startup) to plug in the Wireless Service Tool to the port on the corner post. You can check unit configuration and monitor operation during startup. Turn the thermostat fan position to "ON". The blower should start.
2. Balance air flow at diffusers.
3. Adjust all valves to their full open positions. Turn on the line power to all heat pumps.
4. Room temperature should be within the minimum-maximum ranges of the **Operating Limits** table. During startup checks, loop water temperature entering the heat pump should be within the minimum-maximum limits of the table above.
5. Two factors determine the operating limits of water-source heat pumps, (a) return air temperature, and (b) water temperature. When any one of these factors is at a minimum or maximum level, the other factor must be at normal level to ensure proper unit operation.
 - a. Adjust the unit thermostat to the warmest setting. Place the thermostat mode switch in the "COOL" position. Slowly reduce thermostat setting until the compressor activates.
 - b. Check for cool air delivery at the unit grille within a few minutes after the unit begins to operate.

NOTE: Bypass the unit's 5-minute time delay in the control circuit on the unit control as shown in the Test Mode Button figure. See the control AOM for specific details.
 - c. Run the unit for 15 minutes before recording performance data in the Startup Log Sheet.
 - d. Verify that the compressor is on and that the water flow rate is correct by measuring pressure drop through the heat exchanger using the P/T plugs and comparing to the **Coax Water Pressure Drop** table.
 - e. Check the elevation and cleanliness of the condensate lines. Dripping may be a sign of a blocked line. Check that the condensate trap is filled to provide a water seal.
 - f. Refer to the **Typical Unit Operating Pressures and Temperatures** tables. Check the temperature of both entering and leaving water. If temperature is within range, proceed with the test. Heat of rejection (HR) can be calculated and compared to submittal data capacity pages. The formula for HR for systems with water is as follows:

$$\text{HR (Btuh)} = \text{TD} \times \text{GPM} \times 500$$
 where TD is the temperature difference between the entering and leaving water, and GPM is the flow rate in U.S. GPM, determined by comparing the pressure drop across the heat exchanger to the **Coax Water Pressure Drop** table. In S-I units, the formula is as follows:

$$\text{HR (kW)} = \text{TD} \times \text{l/s} \times 4.18.$$
 - g. Check air temperature drop across the air coil when compressor is operating. Air temperature drop should be between 15°F and 25°F (8°C and 14°C).
 - h. Turn thermostat to "OFF" position. A hissing noise indicates proper functioning of the reversing valve.
6. Allow five (5) minutes between tests for pressure to equalize before beginning heating test.
 - a. Adjust the thermostat to the lowest setting. Place the thermostat mode switch in the "HEAT" position.
 - b. Slowly raise the thermostat to a higher temperature until the compressor activates.
 - c. Check for warm air delivery within a few minutes after the unit begins to operate.
 - d. Run the unit for 15 minutes before recording performance data in the Startup Log Sheet.

Unit Startup Procedure

- e. Refer to the **Typical Unit Operating Pressures and Temperatures** tables. Check the temperature of both entering and leaving water. If temperature is within range, proceed with the test. If temperature is outside of the operating range, check refrigerant pressures. Heat of extraction (HE) can be calculated and compared to submittal data capacity pages. The formula for HE for systems with water is as follows:

$$HE (kW) = TD \times GPM \times 500$$


where TD is the temperature difference between the entering and leaving water, and l/s is the flow rate in U.S. GPM, determined by comparing the pressure drop across the heat exchanger to the **Coax Water Pressure Drop** table. In S-I units, the formula is as follows:

$$HE (kW) = TD \times l/s \times 4.18$$

- f. Check air temperature rise across the air coil when compressor is operating. Air temperature rise should be between 20°F and 30°F (11°C and 17°C).
- g. Check for vibration, noise, and water leaks.
7. If the unit fails to operate, perform troubleshooting analysis (see Functional Troubleshooting). If the check procedure described fails to reveal the problem, and the unit still does not operate, contact a trained service technician to ensure proper diagnosis and repair of the equipment.
8. When testing is complete, set the system to maintain the desired comfort level.

NOTE: If performance during any mode appears abnormal, refer to the Troubleshooting section or the control AOM. To obtain maximum performance, clean the air coil before startup. Use a 10% solution of dishwasher detergent and water to clean the air coil.

Test Mode Button

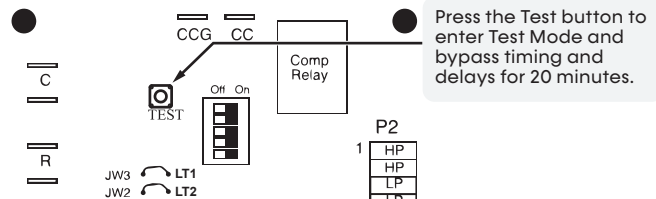

WARNING

When the disconnect switch is closed, high voltage is present in some areas of the electrical panel. Exercise caution when working with energized equipment.

CAUTION

Verify that ALL water control valves are open and allow water flow prior to engaging the compressor. Freezing of the coax or water lines can permanently damage the heat pump.

CAUTION

Many units are installed with a factory or field supplied manual or electric shutoff valve. **DAMAGE WILL OCCUR** if shutoff valve is closed during unit operation. A high pressure switch must be installed on the heat pump side of any field provided shutoff valves and connected to the heat pump controls in series with the built-in refrigerant circuit high pressure switch to disable compressor operation if water pressure exceeds pressure switch setting. The field installed high pressure switch shall have a cut-out pressure of 300 psig and a cut-in pressure of 250 psig.

Models:
ME
024-072

Unit Startup Procedure

⚠ WARNING

When the disconnect switch is closed, high voltage is present in some areas of the electrical panel. Exercise caution when working with energized equipment.

⚠ CAUTION

Verify that ALL water control valves are open and allow water flow prior to engaging the compressor. Freezing of the coax or water lines can permanently damage the heat pump.

⚠ CAUTION

Many units are installed with a factory or field supplied manual or electric shutoff valve. **DAMAGE WILL OCCUR** if shutoff valve is closed during unit operation. A high pressure switch must be installed on the heat pump side of any field provided shutoff valves and connected to the heat pump controls in series with the built-in refrigerant circuit high pressure switch to disable compressor operation if water pressure exceeds pressure switch setting. The field installed high pressure switch shall have a cut-out pressure of 300 psig and a cut-in pressure of 250 psig.

Table 9: Coax Water Pressure Drop

Model	U.S. GPM	Pressure Drop, psi [kPa]				
		30°F ¹ [-1°C]	50°F [10°C]	70°F [21°C]	90°F [32°C]	110°F [43°F]
ME024	3.00	1.3	0.8	0.6	0.6	0.5
	4.50	2.4	1.6	1.3	1.2	1.1
	6.00	3.5	2.5	2.1	2.0	1.8
ME036	4.50	1.6	1.1	1.0	0.9	0.9
	6.80	3.0	2.0	1.7	1.7	1.6
	9.00	4.4	3.3	2.8	2.7	2.6
ME048	6.00	1.4	1.2	1.1	1.0	1.0
	9.00	3.0	2.6	2.3	2.1	2.0
	12.00	4.9	4.4	4.0	3.6	3.3
ME060	7.50	2.6	2.3	2.0	1.9	1.7
	11.25	5.1	4.4	4.0	3.7	3.4
	15.00	8.2	7.2	6.5	6.1	5.6
ME072	7.50	2.6	2.3	2.0	1.9	1.7
	11.25	5.1	4.4	4.0	3.7	3.4
	15.00	8.2	7.2	6.5	6.1	5.6

1. Based on 20% methanol antifreeze solution.

Unit Operating Conditions

Table 10: Typical Unit Operating Pressures and Temperatures

Operating Pressure/Temperature tables include the following notes:

- Airflow is at nominal (rated) conditions
- Entering air is based upon 70°F (21°C) DB in heating and 80/67°F (27/19°C) in cooling
- Subcooling is based upon head pressure at compressor service port
- Cooling air and water values can vary greatly with changes in humidity level

ME024		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Drop °F	Air Temp Rise °F
30 ¹	6.0							260-280	66-76	8-12	15-19	4-6	17-23
	4.5							260-280	64-74	8-12	15-19	5-7	17-23
	3.0							260-280	60-70	8-12	15-19	7-9	16-22
50	6.0	193-213	117-127	21-25	12-16	10-12	19-25	290-310	95-105	9-13	9-13	5-7	23-29
	4.5	202-222	119-129	18-22	14-18	13-15	19-25	280-300	92-102	9-13	9-13	7-9	23-29
	3.0	221-241	120-130	18-22	16-20	20-22	19-25	280-300	87-97	8-12	9-13	10-12	22-28
70	6.0	258-278	123-133	16-20	13-17	9-11	18-24	320-340	129-139	10-14	8-12	7-9	30-36
	4.5	271-291	124-134	15-19	16-20	13-15	18-24	310-330	124-134	10-14	8-12	10-12	29-35
	3.0	296-316	125-135	14-18	19-23	19-21	18-24	310-330	117-127	9-13	8-12	14-16	28-34
90	6.0	315-335	129-139	10-14	14-18	9-11	18-24	350-370	155-165	15-19	12-16	9-11	37-43
	4.5	326-346	129-139	9-13	15-19	12-14	17-23	340-360	150-160	15-19	12-16	12-14	35-41
	3.0	341-361	130-140	9-13	15-19	19-21	17-23	330-380	140-150	15-19	12-16	17-19	34-40
120	6.0	480-500	136-146	6-10	12-16	8-10	15-21						
	4.5	490-510	137-147	5-9	12-16	11-13	15-21						
	3.0	515-535	138-148	4-8	13-17	18-20	15-21						

1. Based on 20% methanol antifreeze solution

ME036		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Drop °F	Air Temp Rise °F
30 ¹	9.00							270-290	64-74	5-9	10-14	4-6	20-26
	6.75							265-285	62-72	5-9	10-14	5-7	19-25
	4.50							260-280	58-68	5-9	10-14	8-10	18-24
50	9.00	187-207	114-124	20-24	6-10	9-11	18-24	300-320	94-104	9-13	10-14	5-7	26-32
	6.75	190-210	114-124	17-21	7-11	13-15	18-24	290-310	91-101	9-13	10-14	7-9	25-31
	4.50	210-230	114-124	15-19	12-16	20-22	18-24	290-310	85-95	8-12	10-14	11-13	24-30
70	9.00	244-264	117-127	10-14	7-11	9-11	18-24	340-360	129-139	9-13	10-14	7-9	33-39
	6.75	250-270	118-128	10-14	9-13	12-14	18-24	330-350	124-134	9-13	10-14	10-12	32-38
	4.50	265-285	119-129	8-12	11-15	19-21	18-24	315-335	116-126	8-12	10-14	14-16	30-36
90	9.00	300-320	122-132	5-9	7-11	9-11	17-23	375-395	160-170	15-19	9-13	9-11	40-46
	6.75	310-330	123-133	4-8	8-12	12-14	17-23	370-390	150-160	14-18	10-14	12-14	39-45
	4.50	325-345	124-134	4-8	11-15	18-20	17-23	360-380	140-150	13-17	11-15	18-20	37-43
120	9.00	460-480	131-141	3-7	7-11	8-10	15-21						
	6.75	470-490	131-141	3-7	9-13	11-13	15-21						
	4.50	490-510	133-143	3-7	10-14	18-20	16-22						

1. Based on 20% methanol antifreeze solution

Models:
ME
024-072

Unit Operating Conditions

ME048		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Drop °F	Air Temp Rise °F
30'	12							280-300	61-71	4-8	12-16	4-6	18-24
	9							275-395	59-69	4-8	13-17	5-7	18-24
	6							270-390	55-65	4-8	15-19	8-10	15-9
50	12	190-210	115-125	18-22	9-13	10-12	19-25	290-310	80-90	4-8	14-18	5-7	25-31
	9	200-220	120-130	16-20	12-16	13-15	19-25	300-320	90-100	5-9	14-18	7-9	24-30
	6	215-235	120-130	14-18	13-17	20-22	19-25	300-320	90-100	6-10	14-18	11-13	30-24
70	12	250-270	125-135	10-14	8-12	9-11	18-24	350-370	124-134	9-13	12-16	7-9	31-37
	9	260-280	125-135	9-13	9-13	13-15	19-25	340-360	119-129	8-12	13-17	10-12	30-36
	6	280-300	125-135	9-13	12-16	20-22	19-25	330-350	110-120	7-11	14-18	14-16	47-41
90	12	300-320	125-135	8-12	8-12	9-11	18-24	385-405	164-174	12-16	5-9	9-11	38-44
	9	315-335	125-135	8-12	8-12	13-15	18-24	380-400	157-167	12-16	5-9	12-14	37-43
	6	330-350	125-135	8-12	10-14	19-21	18-24	375-395	152-162	12-16	6-10	15-17	35-41
120	12	455-465	127-137	7-11	8-12	9-11	16-22						
	9	470-490	128-138	7-11	8-12	12-14	16-22						
	6	495-510	131-141	7-11	9-13	18-20	16-22						

1. Based on 20% methanol antifreeze solution

ME060		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Drop °F	Air Temp Rise °F
30'	15.00							265-285	61-71	13-17	5-9	5-7	11-17
	11.25							260-280	64-74	13-17	5-9	3-5	20-26
	7.50							260-280	57-67	13-17	5-9	7-9	18-24
50	15.00	190-210	125-135	20-24	14-18	9-11	19-25	300-320	89-99	11-15	5-9	7-9	12-18
	11.25	200-220	125-135	20-24	14-18	13-15	19-25	300-320	93-103	11-15	5-9	5-7	26-32
	7.50	200-220	130-140	20-24	14-18	20-22	19-25	290-310	84-94	11-15	5-9	10-12	24-30
70	15.00	253-273	130-140	15-19	10-14	9-11	18-24	330-350	120-130	11-15	3-7	9-11	13-19
	11.25	265-285	130-140	14-18	12-16	13-15	18-24	320-340	120-130	11-15	3-7	7-9	32-38
	7.50	289-309	130-140	14-18	13-17	19-21	18-24	320-340	114-124	11-15	4-8	13-15	30-36
90	15.00	370-390	135-145	11-15	9-13	9-11	17-23	360-380	157-167	15-19	4-8	11-13	13-19
	11.25	390-410	135-145	11-15	10-14	13-15	18-24	350-370	163-173	14-18	4-8	8-10	39-45
	7.50	410-430	135-145	10-14	11-15	19-21	18-24	350-370	148-158	14-18	4-8	16-18	36-42
120	15.00	470-490	140-150	11-15	8-12	8-10	15-21						
	11.25	506-526	140-150	11-15	11-15	12-14	16-22						
	7.50	510-530	140-150	11-15	11-15	18-20	16-22						

1. Based on 20% methanol antifreeze solution

Models:
ME
024-072

Unit Operating Conditions

ME072		Full Load Cooling - without HWG active						Full Load Heating - without HWG active					
Entering Water Temp °F	Water Flow GPM	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Rise °F	Air Temp Drop °F DB	Discharge Pressure PSIG	Suction Pressure PSIG	Superheat °F	Subcooling °F	Water Temp Drop °F	Air Temp Rise °F
30 ¹	15.00							283-303	61-71	14-18	7-11	5-7	11-17
	11.25							286-306	64-74	14-18	6-10	3-5	20-26
	7.50							279-299	57-67	14-18	6-10	7-9	18-24
50	15.00	188-208	113-123	16-20	12-16	9-11	19-25	280-300	60-70	14-18	5-9	7-9	12-18
	11.25	198-218	114-124	13-17	14-18	13-15	19-25	275-295	55-65	14-18	5-9	5-7	26-32
	7.50	217-237	115-125	11-15	18-22	20-22	19-25	275-295	55-65	14-18	5-9	10-12	24-30
70	15.00	253-273	120-130	9-13	13-17	9-11	18-24	365-385	115-125	16-20	3-7	9-11	13-19
	11.25	265-285	120-130	9-13	15-19	13-15	18-24	353-373	110-120	16-20	3-7	7-9	32-38
	7.50	289-309	121-131	7-11	20-24	19-21	18-24	341-361	105-115	16-20	13-17	13-15	30-36
90	15.00	335-355	126-136	6-10	14-18	9-11	17-23	400-420	150-160	19-23	3-7	11-13	13-19
	11.25	348-368	126-136	6-10	16-20	13-15	18-24	391-411	145-155	16-20	4-8	8-10	39-45
	7.50	376-396	127-137	5-9	21-25	19-21	18-24	390-410	140-150	15-19	11-15	16-18	36-42
120	15.00	490-510	132-142	6-10	15-19	8-10	15-21						
	11.25	506-526	132-142	6-10	18-22	12-14	16-22						
	7.50	535-555	133-143	6-10	21-25	18-20	16-22						

1. Based on 20% methanol antifreeze solution

Models:
ME
024-072

Performance Data ME024 EC Blower Motor (Full Load)

800 CFM Rated Airflow

EWT °F	WPD			COOLING - EAT 80/67 °F							WPD			HEATING - EAT 70°F						
	FLOW GPM	PSI	FT	TC	SC	kW	HR	EER	LWT	HWG Cap	FLOW GPM	PSI	FT	HC	kW	HE	COP	LWT	HWG Cap	
20	4.5	Operation Not Recommended																		
	6.0	6.0	1.2	2.7	16.2	1.5	11.1	3.2	16.3	1.9										
30	3.0	0.1	0.3	27.3	17.7	1.0	30.5	28.3	50.4	1.6	3.0	0.1	0.3	17.9	1.5	12.8	3.5	21.5	2.0	
	4.5	0.5	1.2	26.4	16.7	0.9	29.4	29.6	43.1	1.4	4.5	0.5	1.2	18.7	1.5	13.6	3.7	24.0	2.2	
	6.0	1.0	2.3	25.8	16.1	0.9	28.8	30.0	39.6	1.3	6.0	1.0	2.3	19.2	1.5	14.0	3.7	25.3	2.5	
40	3.0	0.1	0.3	27.9	18.6	1.1	31.6	25.8	61.0	1.5	3.0	0.1	0.3	20.6	1.5	15.4	4.0	29.7	2.2	
	4.5	0.4	1.0	27.5	18.0	1.0	30.9	27.5	53.8	1.4	4.5	0.4	1.0	21.6	1.5	16.3	4.1	32.7	2.5	
	6.0	0.9	2.1	27.2	17.7	1.0	30.5	28.3	50.2	1.3	6.0	0.9	2.1	22.1	1.5	16.8	4.2	34.4	2.7	
50	3.0	0.1	0.3	27.8	18.9	1.2	32.0	23.0	71.3	1.7	3.0	0.1	0.3	23.2	1.5	18.0	4.4	38.0	2.5	
	4.5	0.4	0.8	27.9	18.7	1.1	31.7	25.0	64.1	1.5	4.5	0.4	0.8	24.3	1.6	19.0	4.6	41.6	2.7	
	6.0	0.8	1.9	27.9	18.6	1.1	31.5	25.9	60.5	1.4	6.0	0.8	1.9	24.9	1.6	19.6	4.6	43.5	3.0	
60	3.0	0.1	0.3	27.3	18.8	1.4	31.9	20.2	81.3	2.1	3.0	0.1	0.3	25.8	1.6	20.4	4.8	46.4	2.8	
	4.5	0.3	0.7	27.7	18.9	1.2	32.0	22.2	74.2	1.9	4.5	0.3	0.7	27.1	1.6	21.6	4.9	50.4	3.1	
	6.0	0.8	1.7	27.9	18.9	1.2	31.9	23.2	70.6	1.8	6.0	0.8	1.7	27.8	1.6	22.2	5.0	52.6	3.3	
70	3.0	0.1	0.3	26.3	18.4	1.5	31.5	17.4	91.0	2.7	3.0	0.1	0.3	28.4	1.6	22.9	5.1	54.8	3.1	
	4.5	0.3	0.6	27.0	18.7	1.4	31.8	19.4	84.1	2.4	4.5	0.3	0.6	29.8	1.7	24.2	5.3	59.3	3.5	
	6.0	0.7	1.6	27.3	18.8	1.3	31.9	20.4	80.6	2.2	6.0	0.7	1.6	30.6	1.7	24.9	5.4	61.7	3.8	
80	3.0	0.1	0.3	25.1	17.9	1.7	30.9	14.8	100.6	3.4	3.0	0.1	0.3	31.0	1.7	25.3	5.4	63.2	3.5	
	4.5	0.2	0.5	26.0	18.3	1.6	31.4	16.6	93.9	3.1	4.5	0.2	0.5	32.5	1.7	26.7	5.6	68.1	3.9	
	6.0	0.7	1.6	26.4	18.5	1.5	31.5	17.5	90.5	2.8	6.0	0.7	1.6	33.4	1.7	27.5	5.7	70.8	4.3	
85	3.0	0.1	0.3	24.4	17.6	1.8	30.6	13.6	105.4	3.5	3.0	0.1	0.3	32.3	1.7	26.5	5.6	67.4	3.7	
	4.5	0.2	0.5	25.4	18.0	1.7	31.0	15.3	98.8	3.3	4.5	0.2	0.5	33.9	1.7	28.0	5.7	72.6	4.1	
	6.0	0.7	1.5	25.8	18.2	1.6	31.3	16.2	95.4	3.2	6.0	0.7	1.5	34.8	1.8	28.8	5.8	75.4	4.4	
90	3.0	0.1	0.3	23.7	17.2	1.9	30.2	12.4	110.1	4.4	3.0	0.1	0.3	33.6	1.7	27.7	5.7	71.5	4.0	
	4.5	0.2	0.5	24.7	17.7	1.8	30.7	14.0	103.6	4.0	4.5	0.2	0.5	35.3	1.8	29.3	5.9	77.0	4.4	
	6.0	0.6	1.5	25.2	17.9	1.7	30.9	14.9	100.3	3.6	6.0	0.6	1.5	36.2	1.8	30.1	5.9	80.0	4.8	
100	3.0	0.1	0.3	22.1	16.6	2.2	29.5	10.3	119.6	5.4	Operation Not Recommended									
	4.5	0.2	0.4	23.2	17.0	2.0	30.0	11.7	113.3	5.0										
	6.0	0.6	1.4	23.7	17.2	1.9	30.2	12.4	110.1	4.1										
110	3.0	0.1	0.3	20.5	15.9	2.4	28.8	8.4	129.2	6.7										
	4.5	0.2	0.4	21.6	16.3	2.2	29.2	9.6	123.0	6.2										
	6.0	0.6	1.3	22.1	16.6	2.2	29.5	10.2	119.8	5.1										
120	3.0	0.1	0.3	18.9	15.4	2.8	28.3	6.9	138.8	8.2										
	4.5	0.1	0.3	19.9	15.7	2.5	28.6	7.8	132.7	7.5										
	6.0	0.5	1.1	20.4	15.9	2.4	28.8	8.4	129.6	6.2										

- Interpolation is permissible; extrapolation is not.
- All entering air conditions are 80°F (26.6°C) DB and 67°F (19.4°C) WB in cooling, and 70°F (21°C) DB in heating.
- AHRI/ISO certified conditions are 80.6°F (27°C) DB and 66.2°F (19°C) WB in cooling and 68°F (20°C) DB in heating.
- Table does not reflect fan or pump power corrections for AHRI/ISO conditions.
- All performance is based upon the lower voltage of dual voltage rated units.
- Performance stated is at the rated power supply; performance may vary as the power supply varies from the rated.
- Operation below 40°F (10.0°C) EWT is based upon 20% methanol antifreeze solution.
- Operation below 60°F (15.5°C) EWT requires optional insulated water/refrigerant circuit.
- See performance correction tables for operating conditions other than those listed above.
- See Performance Data Selection Notes for operation in the shaded areas.
- Regular Cooling operation with an EWT of less than 50°F (10.0°C) is not recommended unless variable water flow is available.
- Regular Heating operation with an EWT of more than 90°F (32°C) is not recommended unless variable water flow is available.
- For quiet operation and long term reliability, it is recommended that systems be designed to avoid continuous operation in the outlined areas.
- Performance capacities shown in thousands of Btuh
- Hot Water Generator Capacity is based on 90°F entering water and 0.5 GPM/Ton.

ME024 EC Blower Motor Modulating Flow (Full Load)

Models:
ME
024-072

800 CFM Rated Airflow

EWT °F	WPD			COOLING - EAT 80/67 °F							WPD			HEATING - EAT 70°F					
	FLOW GPM	PSI	FT	TC	SC	kW	HR	EER	LWT	HWG Cap	FLOW GPM	PSI	FT	HC	kW	HE	COP	LWT	HWG Cap
20	4.5	Operation Not Recommended																	
	6.0										6.0	1.2	2.7	16.2	1.5	11.1	3.2	16.3	1.9
30	2.1	0.1	0.2	28.5	19.1	1.1	32.1	27.0	60.0	1.4	3.0	0.1	0.3	17.9	1.5	12.8	3.5	21.5	2.0
	2.1	0.1	0.2	28.5	19.1	1.1	32.1	27.0	60.0	1.4	4.5	0.5	1.2	18.7	1.5	13.6	3.7	24.0	2.2
	2.1	0.1	0.2	28.5	19.1	1.1	32.1	27.0	60.0	1.4	6.0	1.0	2.3	19.2	1.5	14.0	3.7	25.3	2.5
40	3.1	0.1	0.3	27.8	18.5	1.1	31.5	26.0	60.0	1.4	3.0	0.1	0.3	20.6	1.5	15.4	4.0	29.7	2.2
	3.1	0.1	0.3	27.8	18.5	1.1	31.5	26.0	60.0	1.4	4.5	0.4	1.0	21.6	1.5	16.3	4.1	32.7	2.5
	3.1	0.1	0.3	27.8	18.5	1.1	31.5	26.0	60.0	1.4	6.0	0.9	2.1	22.1	1.5	16.8	4.2	34.4	2.7
50	3.0	0.1	0.3	27.8	18.9	1.2	32.0	23.0	71.3	1.7	3.0	0.1	0.3	23.2	1.5	18.0	4.4	38.0	2.5
	4.5	0.4	0.8	27.9	18.7	1.1	31.7	25.0	64.1	1.6	4.5	0.4	0.8	24.3	1.6	19.0	4.6	41.6	2.7
	6.0	0.8	1.9	27.9	18.6	1.1	31.5	25.9	60.5	1.4	6.0	0.8	1.9	24.9	1.6	19.6	4.6	43.5	3.0
60	3.0	0.1	0.3	27.3	18.8	1.4	31.9	20.2	81.3	2.1	3.0	0.1	0.3	25.8	1.6	20.4	4.8	46.4	2.8
	4.5	0.3	0.7	27.7	18.9	1.2	32.0	22.2	74.2	1.9	4.5	0.3	0.7	27.1	1.6	21.6	4.9	50.4	3.1
	6.0	0.8	1.7	27.9	18.9	1.2	31.9	23.2	70.6	1.8	6.0	0.8	1.7	27.8	1.6	22.2	5.0	52.6	3.3
70	3.0	0.1	0.3	26.3	18.4	1.5	31.5	17.4	91.0	2.7	3.0	0.1	0.3	28.4	1.6	22.9	5.1	54.8	3.1
	4.5	0.3	0.6	27.0	18.7	1.4	31.8	19.4	84.1	2.4	4.5	0.3	0.6	29.8	1.7	24.2	5.3	59.3	3.5
	6.0	0.7	1.6	27.3	18.8	1.3	31.9	20.4	80.6	2.2	6.0	0.7	1.6	30.6	1.7	24.9	5.4	61.7	3.8
80	3.0	0.1	0.3	25.1	17.9	1.7	30.9	14.8	100.6	3.4	3.0	0.1	0.3	31.0	1.7	25.3	5.4	63.2	3.5
	4.5	0.2	0.5	26.0	18.3	1.6	31.4	16.6	93.9	3.1	4.5	0.2	0.5	32.5	1.7	26.7	5.6	68.1	3.9
	6.0	0.7	1.6	26.4	18.5	1.5	31.5	17.5	90.5	2.8	6.0	0.7	1.6	33.4	1.7	27.5	5.7	70.8	4.3
85	3.0	0.1	0.3	24.4	17.6	1.8	30.6	13.6	105.4	3.5	3.0	0.1	0.3	32.3	1.7	26.5	5.6	67.4	3.7
	4.5	0.2	0.5	25.4	18.0	1.7	31.0	15.3	98.8	3.3	4.5	0.2	0.5	33.9	1.7	28.0	5.7	72.6	4.1
	6.0	0.7	1.5	25.8	18.2	1.6	31.3	16.2	95.4	3.2	6.0	0.7	1.5	34.8	1.8	28.8	5.8	75.4	4.4
90	3.0	0.1	0.3	23.7	17.2	1.9	30.2	12.4	110.1	4.4	2.7	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
	4.5	0.2	0.5	24.7	17.7	1.8	30.7	14.0	103.6	4.0	2.7	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
	6.0	0.6	1.5	25.2	17.9	1.7	30.9	14.9	100.3	3.6	2.7	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
100	3.0	0.1	0.3	22.1	16.6	2.2	29.5	10.3	119.6	5.4	1.8	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
	4.5	0.2	0.4	23.2	17.0	2.0	30.0	11.7	113.3	5.0	1.8	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
	6.0	0.6	1.4	23.7	17.2	1.9	30.2	12.4	110.1	4.1	1.8	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
110	3.0	0.1	0.3	20.5	15.9	2.4	28.8	8.4	129.2	6.7	1.4	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
	4.5	0.2	0.4	21.6	16.3	2.2	29.2	9.6	123.0	6.2	1.4	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
	6.0	0.6	1.3	22.1	16.6	2.2	29.5	10.2	119.8	5.1	1.4	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
120	3.0	0.1	0.3	18.9	15.4	2.8	28.3	6.9	138.8	8.2	1.1	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
	4.5	0.1	0.3	19.9	15.7	2.5	28.6	7.8	132.7	7.5	1.1	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4
	6.0	0.5	1.1	20.4	15.9	2.4	28.8	8.4	129.6	6.2	1.1	0.1	0.2	33.1	1.7	27.2	5.6	70.0	4.4

- Interpolation is permissible; extrapolation is not.
- All entering air conditions are 80°F (26.6°C) DB and 67°F (19.4°C) WB in cooling, and 70°F (21°C) DB in heating.
- AHRI/ISO certified conditions are 80.6°F (27°C) DB and 66.2°F (19°C) WB in cooling and 68°F (20°C) DB in heating.
- Table does not reflect fan or pump power corrections for AHRI/ISO conditions.
- All performance is based upon the lower voltage of dual voltage rated units.
- Performance stated is at the rated power supply; performance may vary as the power supply varies from the rated.
- Operation below 40°F (10.0°C) EWT is based upon 20% methanol antifreeze solution.
- Operation below 60°F (15.5°C) EWT requires optional insulated water/refrigerant circuit.
- See performance correction tables for operating conditions other than those listed above.
- See Performance Data Selection Notes for operation in the shaded areas.
- Regular Cooling operation with an EWT of less than 50°F (10.0°C) is not recommended unless variable water flow is available.
- Regular Heating operation with an EWT of more than 90°F (32°C) is not recommended unless variable water flow is available.
- For quiet operation and long term reliability, it is recommended that systems be designed to avoid continuous operation in the outlined areas.
- Performance capacities shown in thousands of Btu/h
- Hot Water Generator Capacity is based on 90°F entering water and 0.5 GPM/Ton.

Models:
ME
024-072

Performance Data ME036 EC Blower Motor (Full Load)

1,200 CFM Rated Airflow

EWT °F	WPD			Cooling - EAT 80/67°F							WPD			Heating - EAT 70°F						
	FLOW GPM	PSI	FT	TC	SC	kW	HR	EER	LWT	HWG Cap	FLOW GPM	PSI	FT	HC	kW	HE	COP	LWT	HWG Cap	
20	6.8	Operation Not Recommended										9.0	3.7	8.5	23.9	1.9	17.3	3.6	16.2	2.0
	9.0																			
30	4.5	1.0	2.3	40.1	24.7	1.4	45.0	28.3	50.0	1.1	4.5	1.0	2.3	26.7	2.0	19.9	3.9	21.2	2.5	
	6.8	2.0	4.7	37.3	22.5	1.3	41.8	28.2	42.4	1.0	6.8	2.0	4.7	28.1	2.0	21.2	4.1	23.7	2.7	
	9.0	3.2	7.5	35.6	21.3	1.3	39.9	27.9	38.9	0.9	9.0	3.2	7.5	28.8	2.0	21.9	4.1	25.1	3.0	
40	4.5	0.9	2.1	42.3	26.7	1.6	47.7	26.8	61.2	1.3	4.5	0.9	2.1	31.1	2.1	24.0	4.4	29.4	3.0	
	6.8	1.8	4.2	41.1	25.5	1.5	46.1	27.9	53.7	1.1	6.8	1.8	4.2	32.7	2.1	25.5	4.5	32.5	3.3	
	9.0	2.9	6.8	40.1	24.7	1.4	45.0	28.3	50.0	1.0	9.0	2.9	6.8	33.5	2.1	26.3	4.6	34.2	3.6	
50	4.5	0.8	1.9	42.5	27.3	1.7	48.5	24.4	71.6	1.6	4.5	0.8	1.9	35.3	2.2	27.9	4.8	37.6	3.5	
	6.8	1.6	3.8	42.5	27.0	1.6	48.1	26.1	64.2	1.5	6.8	1.6	3.8	37.1	2.2	29.6	4.9	41.2	3.8	
	9.0	2.7	6.2	42.2	26.6	1.6	47.6	26.9	60.6	1.4	9.0	2.7	6.2	38.1	2.2	30.5	5.0	43.2	4.2	
60	4.5	0.8	1.8	41.6	27.2	1.9	48.2	21.6	81.4	2.2	4.5	0.8	1.8	39.4	2.3	31.7	5.1	45.9	4.0	
	6.8	1.5	3.5	42.4	27.4	1.8	48.5	23.6	74.4	2.0	6.8	1.5	3.5	41.4	2.3	33.5	5.2	50.1	4.4	
	9.0	2.5	5.9	42.6	27.3	1.7	48.5	24.6	70.8	1.8	9.0	2.5	5.9	42.5	2.3	34.5	5.3	52.3	4.8	
70	4.5	0.7	1.7	39.9	26.5	2.1	47.1	18.8	90.9	3.0	4.5	0.7	1.7	43.5	2.4	35.4	5.4	54.3	4.5	
	6.8	1.5	3.4	41.2	27.0	2.0	47.9	20.8	84.2	2.7	6.8	1.5	3.4	45.7	2.4	37.4	5.5	58.9	5.0	
	9.0	2.4	5.6	41.7	27.2	1.9	48.2	21.8	80.7	2.5	9.0	2.4	5.6	46.8	2.5	38.4	5.6	61.5	5.4	
80	4.5	0.7	1.7	37.7	25.5	2.3	45.7	16.1	100.3	3.9	4.5	0.7	1.7	47.4	2.5	38.9	5.6	62.7	5.0	
	6.8	1.4	3.3	39.2	26.2	2.2	46.7	17.9	93.8	3.6	6.8	1.4	3.3	49.8	2.6	41.1	5.7	67.8	5.5	
	9.0	2.4	5.5	40.0	26.6	2.1	47.2	18.9	90.5	3.3	9.0	2.4	5.5	51.1	2.6	42.2	5.8	70.6	6.0	
85	4.5	0.7	1.7	36.5	24.9	2.5	44.9	14.9	105.0	4.4	4.5	0.7	1.7	49.4	2.5	40.7	5.7	66.9	5.3	
	6.8	1.4	3.3	38.1	25.7	2.3	46.0	16.6	98.6	4.1	6.8	1.4	3.3	51.9	2.6	42.9	5.8	72.3	5.8	
	9.0	2.4	5.4	38.9	26.1	2.2	46.5	17.5	95.3	3.8	9.0	2.4	5.4	53.2	2.7	44.1	5.9	75.2	6.3	
90	4.5	0.7	1.7	35.4	24.3	2.6	44.2	13.7	109.6	5.1	4.5	0.7	1.7	51.3	2.6	42.5	5.8	71.1	5.6	
	6.8	1.4	3.3	36.9	25.1	2.4	45.2	15.3	103.4	4.6	6.8	1.4	3.3	53.9	2.7	44.8	5.9	76.7	6.1	
	9.0	2.3	5.4	37.8	25.5	2.3	45.7	16.2	100.2	4.2	9.0	2.3	5.4	55.3	2.7	46.0	5.9	79.8	6.7	
100	4.5	0.7	1.6	33.1	23.2	2.9	42.9	11.5	119.1	6.4	Operation Not Recommended									
	6.8	1.4	3.2	34.5	23.9	2.7	43.7	12.9	112.9	5.9										
	9.0	2.3	5.3	35.3	24.3	2.6	44.2	13.6	109.8	5.3										
110	4.5	0.7	1.6	31.2	22.3	3.2	42.0	9.8	128.7	7.9										
	6.8	1.4	3.2	32.3	22.8	3.0	42.5	10.8	122.6	7.3										
	9.0	2.2	5.1	33.0	23.1	2.9	42.8	11.4	119.5	6.6										
120	4.5	0.7	1.5	29.9	22.0	3.6	42.1	8.4	138.7	9.7										
	6.8	1.3	3.0	30.6	22.1	3.3	41.9	9.2	132.4	8.9										
	9.0	2.1	4.9	31.1	22.3	3.2	42.0	9.7	129.3	8.1										

- Interpolation is permissible; extrapolation is not.
- All entering air conditions are 80°F (26.6°C) DB and 67°F (19.4°C) WB in cooling, and 70°F (21°C) DB in heating.
- AHRI/ISO certified conditions are 80.6°F (27°C) DB and 66.2°F (19°C) WB in cooling and 68°F (20°C) DB in heating.
- Table does not reflect fan or pump power corrections for AHRI/ISO conditions.
- All performance is based upon the lower voltage of dual voltage rated units.
- Performance stated is at the rated power supply; performance may vary as the power supply varies from the rated.
- Operation below 40°F (10.0°C) EWT is based upon 20% methanol antifreeze solution.
- Operation below 60°F (15.5°C) EWT requires optional insulated water/refrigerant circuit.
- See performance correction tables for operating conditions other than those listed above.
- See Performance Data Selection Notes for operation in the shaded areas.
- Regular Cooling operation with an EWT of less than 50°F (10.0°C) is not recommended unless variable water flow is available.
- Regular Heating operation with an EWT of more than 90°F (32°C) is not recommended unless variable water flow is available.
- For quiet operation and long term reliability, it is recommended that systems be designed to avoid continuous operation in the outlined areas.
- Performance capacities shown in thousands of Btuh
- Hot Water Generator Capacity is based on 90°F entering water and 0.5 GPM/Ton.

ME036 EC Blower Motor Modulating Flow (Full Load)

Models:
ME
024-072

1200 CFM Rated Airflow

EWT °F	WPD			COOLING - EAT 80/67 °F							WPD			HEATING - EAT 70°F					
	FLOW GPM	PSI	FT	TC	SC	kW	HR	EER	LWT	HWG Cap	FLOW GPM	PSI	FT	HC	kW	HE	COP	LWT	HWG Cap
20	6.8	Operation Not Recommended																	
	9.0										9.0	3.7	8.5	23.9	1.9	17.3	3.6	16.2	2.0
30	3.3	0.4	0.9	44.2	27.8	1.5	49.5	28.5	60.0	1.1	4.5	1.0	2.3	26.7	2.0	19.9	3.9	21.2	2.5
	3.3	0.4	0.9	44.2	27.8	1.5	49.5	28.5	60.0	1.1	6.8	2.0	4.7	28.1	2.0	21.2	4.1	23.7	2.7
	3.3	0.4	0.9	44.2	27.8	1.5	49.5	28.5	60.0	1.1	9.0	3.2	7.5	28.8	2.0	21.9	4.1	25.1	3.0
40	4.7	1.0	2.2	42.1	26.5	1.6	47.4	27.0	60.0	1.1	4.5	0.9	2.1	31.1	2.1	24.0	4.4	29.4	3.0
	4.7	1.0	2.2	42.1	26.5	1.6	47.4	27.0	60.0	1.1	6.8	1.8	4.2	32.7	2.1	25.5	4.5	32.5	3.3
	4.7	1.0	2.2	42.1	26.5	1.6	47.4	27.0	60.0	1.1	9.0	2.9	6.8	33.5	2.1	26.3	4.6	34.2	3.6
50	4.5	0.8	1.9	42.5	27.3	1.7	48.5	24.4	71.6	1.6	4.5	0.8	1.9	35.3	2.2	27.9	4.8	37.6	3.5
	6.8	1.6	3.8	42.5	27.0	1.6	48.1	26.1	64.2	1.5	6.8	1.6	3.8	37.1	2.2	29.6	4.9	41.2	3.8
	9.0	2.7	6.2	42.2	26.6	1.6	47.6	26.9	60.6	1.4	9.0	2.7	6.2	38.1	2.2	30.5	5.0	43.2	4.2
60	4.5	0.8	1.8	41.6	27.2	1.9	48.2	21.6	81.4	2.2	4.5	0.8	1.8	39.4	2.3	31.7	5.1	45.9	4.0
	6.8	1.5	3.5	42.4	27.4	1.8	48.5	23.6	74.4	2.0	6.8	1.5	3.5	41.4	2.3	33.5	5.2	50.1	4.4
	9.0	2.5	5.9	42.6	27.3	1.7	48.5	24.6	70.8	1.8	9.0	2.5	5.9	42.5	2.3	34.5	5.3	52.3	4.8
70	4.5	0.7	1.7	39.9	26.5	2.1	47.1	18.8	90.9	3.0	4.5	0.7	1.7	43.5	2.4	35.4	5.4	54.3	4.5
	6.8	1.5	3.4	41.2	27.0	2.0	47.9	20.8	84.2	2.7	6.8	1.5	3.4	45.7	2.4	37.4	5.5	58.9	5.0
	9.0	2.4	5.6	41.7	27.2	1.9	48.2	21.8	80.7	2.5	9.0	2.4	5.6	46.8	2.5	38.4	5.6	61.5	5.4
80	4.5	0.7	1.7	37.7	25.5	2.3	45.7	16.1	100.3	3.9	4.5	0.7	1.7	47.4	2.5	38.9	5.6	62.7	5.0
	6.8	1.4	3.3	39.2	26.2	2.2	46.7	17.9	93.8	3.6	6.8	1.4	3.3	49.8	2.6	41.1	5.7	67.8	5.5
	9.0	2.4	5.5	40.0	26.6	2.1	47.2	18.9	90.5	3.3	9.0	2.4	5.5	51.1	2.6	42.2	5.8	70.6	6.0
85	4.5	0.7	1.7	36.5	24.9	2.5	44.9	14.9	105.0	4.4	4.5	0.7	1.7	49.4	2.5	40.7	5.7	66.9	5.3
	6.8	1.4	3.3	38.1	25.7	2.3	46.0	16.6	98.6	4.1	6.8	1.4	3.3	51.9	2.6	42.9	5.8	72.3	5.8
	9.0	2.4	5.4	38.9	26.1	2.2	46.5	17.5	95.3	3.8	9.0	2.4	5.4	53.2	2.7	44.1	5.9	75.2	6.3
90	4.5	0.7	1.7	35.4	24.3	2.6	44.2	13.7	109.6	5.1	4.2	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
	6.8	1.4	3.3	36.9	25.1	2.4	45.2	15.3	103.4	4.6	4.2	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
	9.0	2.3	5.4	37.8	25.5	2.3	45.7	16.2	100.2	4.2	4.2	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
100	4.5	0.7	1.6	33.1	23.2	2.9	42.9	11.5	119.1	6.4	2.8	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
	6.8	1.4	3.2	34.5	23.9	2.7	43.7	12.9	112.9	5.9	2.8	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
	9.0	2.3	5.3	35.3	24.3	2.6	44.2	13.6	109.8	5.3	2.8	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
110	4.5	0.7	1.6	31.2	22.3	3.2	42.0	9.8	128.7	7.9	2.1	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
	6.8	1.4	3.2	32.3	22.8	3.0	42.5	10.8	122.6	7.3	2.1	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
	9.0	2.2	5.1	33.0	23.1	2.9	42.8	11.4	119.5	6.6	2.1	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
120	4.5	0.7	1.5	29.9	22.0	3.6	42.1	8.4	138.7	9.7	1.7	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
	6.8	1.3	3.0	30.6	22.1	3.3	41.9	9.2	132.4	8.9	1.7	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3
	9.0	2.1	4.9	31.1	22.3	3.2	42.0	9.7	129.3	8.1	1.7	0.1	0.2	50.8	2.6	42.0	5.8	70.0	6.3

- Interpolation is permissible; extrapolation is not.
- All entering air conditions are 80°F (26.6°C) DB and 67°F (19.4°C) WB in cooling, and 70°F (21°C) DB in heating.
- AHRI/ISO certified conditions are 80.6°F (27°C) DB and 66.2°F (19°C) WB in cooling and 68°F (20°C) DB in heating.
- Table does not reflect fan or pump power corrections for AHRI/ISO conditions.
- All performance is based upon the lower voltage of dual voltage rated units.
- Performance stated is at the rated power supply; performance may vary as the power supply varies from the rated.
- Operation below 40°F (10.0°C) EWT is based upon 20% methanol antifreeze solution.
- Operation below 60°F (15.5°C) EWT requires optional insulated water/refrigerant circuit.
- See performance correction tables for operating conditions other than those listed above.
- See Performance Data Selection Notes for operation in the shaded areas.
- Regular Cooling operation with an EWT of less than 50°F (10.0°C) is not recommended unless variable water flow is available.
- Regular Heating operation with an EWT of more than 90°F (32°C) is not recommended unless variable water flow is available.
- For quiet operation and long term reliability, it is recommended that systems be designed to avoid continuous operation in the outlined areas.
- Performance capacities shown in thousands of Btu/h
- Hot Water Generator Capacity is based on 90°F entering water and 0.5 GPM/Ton.

Models:
ME
024-072

Performance Data ME048 EC Blower Motor (Full Load)

1,600 CFM Rated Airflow

EWT °F	WPD			Cooling - EAT 80/67°F							WPD			Heating - EAT 70°F						
	FLOW GPM	PSI	FT	TC	SC	kW	HR	EER	LWT	HWG Cap	FLOW GPM	PSI	FT	HC	kW	HE	COP	LWT	HWG Cap	
20	9.0																			
	12.0										12.0	3.4	7.8	34.0	3.0	23.9	3.4	16.0	3.2	
30	6.0	1.0	2.4	53.7	34.0	2.0	60.6	26.4	50.2	1.2	6.0	1.0	2.4	36.5	3.0	26.3	3.6	21.2	3.6	
	9.0	1.9	4.5	51.0	31.5	1.9	57.5	26.8	42.8	1.1	9.0	1.9	4.5	37.9	3.0	27.6	3.7	23.9	3.9	
	12.0	3.1	7.2	49.3	30.1	1.8	55.6	26.8	39.3	1.0	12.0	3.1	7.2	38.7	3.0	28.4	3.8	25.3	4.3	
40	6.0	0.9	2.2	55.7	36.4	2.2	63.3	24.8	61.1	1.7	6.0	0.9	2.2	41.3	3.1	30.9	4.0	29.7	4.0	
	9.0	1.8	4.2	54.6	34.9	2.1	61.7	26.0	53.7	1.5	9.0	1.8	4.2	43.2	3.1	32.6	4.1	32.7	4.3	
	12.0	2.9	6.7	53.7	34.0	2.0	60.6	26.4	50.1	1.4	12.0	2.9	6.7	44.2	3.1	33.6	4.2	34.4	4.5	
50	6.0	0.9	2.1	55.7	37.2	2.5	64.2	22.6	71.4	2.3	6.0	0.9	2.1	46.6	3.2	35.9	4.3	38.0	4.4	
	9.0	1.7	3.9	55.9	36.7	2.3	63.7	24.2	64.2	2.1	9.0	1.7	3.9	49.0	3.2	38.1	4.5	41.5	4.8	
	12.0	2.8	6.4	55.6	36.3	2.2	63.3	24.9	60.5	1.9	12.0	2.8	6.4	50.3	3.2	39.3	4.6	43.5	5.0	
60	6.0	0.9	2.0	54.5	37.1	2.7	63.7	20.1	81.2	3.1	6.0	0.9	2.0	52.3	3.3	41.1	4.7	46.3	4.8	
	9.0	1.6	3.8	55.5	37.3	2.5	64.1	21.9	74.3	2.8	9.0	1.6	3.8	55.1	3.3	43.7	4.8	50.3	5.3	
	12.0	2.7	6.2	55.8	37.2	2.4	64.1	22.8	70.7	2.6	12.0	2.7	6.2	56.6	3.4	45.1	4.9	52.5	5.7	
70	6.0	0.9	2.0	52.3	36.2	3.0	62.4	17.6	90.8	4.0	6.0	0.9	2.0	58.1	3.4	46.4	5.0	54.5	5.3	
	9.0	1.6	3.7	53.9	36.9	2.8	63.4	19.4	84.1	3.6	9.0	1.6	3.7	61.2	3.5	49.3	5.1	59.0	5.9	
	12.0	2.6	6.1	54.6	37.1	2.7	63.8	20.3	80.6	3.3	12.0	2.6	6.1	62.9	3.5	50.9	5.2	61.5	6.4	
80	6.0	0.8	2.0	49.4	34.8	3.3	60.6	15.1	100.2	5.0	6.0	0.8	2.0	63.8	3.5	51.6	5.3	62.8	5.9	
	9.0	1.6	3.7	51.4	35.8	3.1	61.9	16.8	93.8	4.6	9.0	1.6	3.7	67.1	3.6	54.7	5.4	67.8	6.5	
	12.0	2.6	6.0	52.4	36.3	3.0	62.5	17.7	90.4	4.2	12.0	2.6	6.0	68.8	3.7	56.3	5.5	70.6	7.1	
85	6.0	0.8	2.0	47.9	34.0	3.4	59.6	13.9	104.9	5.6	6.0	0.8	2.0	66.5	3.6	54.2	5.4	66.9	6.2	
	9.0	1.6	3.7	50.0	35.1	3.2	61.0	15.5	98.5	4.9	9.0	1.6	3.7	69.8	3.7	57.2	5.5	72.3	6.8	
	12.0	2.6	5.9	51.0	35.6	3.1	61.6	16.4	95.3	4.7	12.0	2.6	5.9	71.6	3.7	58.8	5.6	75.2	7.4	
90	6.0	0.8	2.0	46.3	33.2	3.6	58.6	12.8	109.5	6.2	6.0	0.8	2.0	69.1	3.7	56.6	5.5	71.1	6.5	
	9.0	1.6	3.7	48.4	34.3	3.4	60.0	14.3	103.3	5.7	9.0	1.6	3.7	72.4	3.8	59.6	5.6	76.8	7.1	
	12.0	2.6	5.9	49.5	34.9	3.3	60.6	15.1	100.1	5.1	12.0	2.6	5.9	74.1	3.8	61.1	5.7	79.8	7.8	
100	6.0	0.8	2.0	43.1	31.4	4.0	56.7	10.8	118.9	7.5	Operation Not Recommended									
	9.0	1.6	3.6	45.2	32.5	3.7	57.9	12.0	112.9	6.8										
	12.0	2.5	5.9	46.2	33.1	3.6	58.6	12.8	109.8	6.2										
110	6.0	0.8	1.9	40.0	29.7	4.4	55.2	9.0	128.4	8.9										
	9.0	1.6	3.6	41.9	30.7	4.2	56.1	10.1	122.5	8.2										
	12.0	2.5	5.8	42.9	31.3	4.0	56.6	10.7	119.4	7.4										
120	6.0	0.8	1.9	37.3	28.4	5.0	54.2	7.5	138.1	10.5										
	9.0	1.5	3.5	38.9	29.1	4.6	54.7	8.4	132.2	9.6										
	12.0	2.5	5.7	39.7	29.6	4.5	55.1	8.9	129.2	8.7										

- Interpolation is permissible; extrapolation is not.
- All entering air conditions are 80°F (26.6°C) DB and 67°F (19.4°C) WB in cooling, and 70°F (21°C) DB in heating.
- AHRI/ISO certified conditions are 80.6°F (27°C) DB and 66.2°F (19°C) WB in cooling and 68°F (20°C) DB in heating.
- Table does not reflect fan or pump power corrections for AHRI/ISO conditions.
- All performance is based upon the lower voltage of dual voltage rated units.
- Performance stated is at the rated power supply; performance may vary as the power supply varies from the rated.
- Operation below 40°F (10.0°C) EWT is based upon 20% methanol antifreeze solution.
- Operation below 60°F (15.5°C) EWT requires optional insulated water/refrigerant circuit.
- See performance correction tables for operating conditions other than those listed above.
- See Performance Data Selection Notes for operation in the shaded areas.
- Regular Cooling operation with an EWT of less than 50°F (10.0°C) is not recommended unless variable water flow is available.
- Regular Heating operation with an EWT of more than 90°F (32°C) is not recommended unless variable water flow is available.
- For quiet operation and long term reliability, it is recommended that systems be designed to avoid continuous operation in the outlined areas.
- Performance capacities shown in thousands of Btuh
- Hot Water Generator Capacity is based on 90°F entering water and 0.5 GPM/Ton.

ME048 EC Blower Motor Modulating Flow (Full Load)

Models:
ME
024-072

1600 CFM Rated Airflow

EWT °F	WPD			COOLING - EAT 80/67 °F							WPD			HEATING - EAT 70°F					
	FLOW GPM	PSI	FT	TC	SC	kW	HR	EER	LWT	HWG Cap	FLOW GPM	PSI	FT	HC	kW	HE	COP	LWT	HWG Cap
20	9.0	Operation Not Recommended																	
	12.0										12.0	3.4	7.8	34.0	3.0	23.9	3.4	16.0	3.2
30	4.3	0.4	0.9	57.7	37.5	2.2	65.2	26.1	60.0	1.2	6.0	1.0	2.4	36.5	3.0	26.3	3.6	21.2	3.6
	4.3	0.4	0.9	57.7	37.5	2.2	65.2	26.1	60.0	1.2	9.0	1.9	4.5	37.9	3.0	27.6	3.7	23.9	3.9
	4.3	0.4	0.9	57.7	37.5	2.2	65.2	26.1	60.0	1.2	12.0	3.1	7.2	38.7	3.0	28.4	3.8	25.3	4.3
40	6.3	1.0	2.3	55.5	36.2	2.2	63.1	25.0	60.0	1.2	6.0	0.9	2.2	41.3	3.1	30.9	4.0	29.7	4.0
	6.3	1.0	2.3	55.5	36.2	2.2	63.1	25.0	60.0	1.2	9.0	1.8	4.2	43.2	3.1	32.6	4.1	32.7	4.3
	6.3	1.0	2.3	55.5	36.2	2.2	63.1	25.0	60.0	1.2	12.0	2.9	6.7	44.2	3.1	33.6	4.2	34.4	4.5
50	6.0	0.9	2.1	55.7	37.2	2.5	64.2	22.6	71.4	2.3	6.0	0.9	2.1	46.6	3.2	35.9	4.3	38.0	4.4
	9.0	1.7	3.9	55.9	36.7	2.3	63.7	24.2	64.2	2.1	9.0	1.7	3.9	49.0	3.2	38.1	4.5	41.5	4.8
	12.0	2.8	6.4	55.6	36.3	2.2	63.3	24.9	60.5	1.9	12.0	2.8	6.4	50.3	3.2	39.3	4.6	43.5	5.0
60	6.0	0.9	2.0	54.5	37.1	2.7	63.7	20.1	81.2	3.1	6.0	0.9	2.0	52.3	3.3	41.1	4.7	46.3	4.8
	9.0	1.6	3.8	55.5	37.3	2.5	64.1	21.9	74.3	2.8	9.0	1.6	3.8	55.1	3.3	43.7	4.8	50.3	5.3
	12.0	2.7	6.2	55.8	37.2	2.4	64.1	22.8	70.7	2.6	12.0	2.7	6.2	56.6	3.4	45.1	4.9	52.5	5.7
70	6.0	0.9	2.0	52.3	36.2	3.0	62.4	17.6	90.8	4.0	6.0	0.9	2.0	58.1	3.4	46.4	5.0	54.5	5.3
	9.0	1.6	3.7	53.9	36.9	2.8	63.4	19.4	84.1	3.6	9.0	1.6	3.7	61.2	3.5	49.3	5.1	59.0	5.9
	12.0	2.6	6.1	54.6	37.1	2.7	63.8	20.3	80.6	3.3	12.0	2.6	6.1	62.9	3.5	50.9	5.2	61.5	6.4
80	6.0	0.8	2.0	49.4	34.8	3.3	60.6	15.1	100.2	5.0	6.0	0.8	2.0	63.8	3.5	51.6	5.3	62.8	5.9
	9.0	1.6	3.7	51.4	35.8	3.1	61.9	16.8	93.8	4.6	9.0	1.6	3.7	67.1	3.6	54.7	5.4	67.8	6.5
	12.0	2.6	6.0	52.4	36.3	3.0	62.5	17.7	90.4	4.2	12.0	2.6	6.0	68.8	3.7	56.3	5.5	70.6	7.1
85	6.0	0.8	2.0	47.9	34.0	3.4	59.6	13.9	104.9	5.6	6.0	0.8	2.0	66.5	3.6	54.2	5.4	66.9	6.2
	9.0	1.6	3.7	50.0	35.1	3.2	61.0	15.5	98.5	4.9	9.0	1.6	3.7	69.8	3.7	57.2	5.5	72.3	6.8
	12.0	2.6	5.9	51.0	35.6	3.1	61.6	16.4	95.3	4.7	12.0	2.6	5.9	71.6	3.7	58.8	5.6	75.2	7.4
90	6.0	0.8	2.0	46.3	33.2	3.6	58.6	12.8	109.5	6.2	5.6	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
	9.0	1.6	3.7	48.4	34.3	3.4	60.0	14.3	103.3	5.7	5.6	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
	12.0	2.6	5.9	49.5	34.9	3.3	60.6	15.1	100.1	5.1	5.6	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
100	6.0	0.8	2.0	43.1	31.4	4.0	56.7	10.8	118.9	7.5	3.7	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
	9.0	1.6	3.6	45.2	32.5	3.7	57.9	12.0	112.9	6.8	3.7	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
	12.0	2.5	5.9	46.2	33.1	3.6	58.6	12.8	109.8	6.2	3.7	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
110	6.0	0.8	1.9	40.0	29.7	4.4	55.2	9.0	128.4	8.9	2.8	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
	9.0	1.6	3.6	41.9	30.7	4.2	56.1	10.1	122.5	8.2	2.8	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
	12.0	2.5	5.8	42.9	31.3	4.0	56.6	10.7	119.4	7.4	2.8	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
120	6.0	0.8	1.9	37.3	28.4	5.0	54.2	7.5	138.1	10.5	2.2	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
	9.0	1.5	3.5	38.9	29.1	4.6	54.7	8.4	132.2	9.6	2.2	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4
	12.0	2.5	5.7	39.7	29.6	4.5	55.1	8.9	129.2	8.7	2.2	0.1	0.2	68.5	3.7	56.0	5.5	70.0	7.4

- Interpolation is permissible; extrapolation is not.
- All entering air conditions are 80°F (26.6°C) DB and 67°F (19.4°C) WB in cooling, and 70°F (21°C) DB in heating.
- AHRI/ISO certified conditions are 80.6°F (27°C) DB and 66.2°F (19°C) WB in cooling and 68°F (20°C) DB in heating.
- Table does not reflect fan or pump power corrections for AHRI/ISO conditions.
- All performance is based upon the lower voltage of dual voltage rated units.
- Performance stated is at the rated power supply; performance may vary as the power supply varies from the rated.
- Operation below 40°F (10.0°C) EWT is based upon 20% methanol antifreeze solution.
- Operation below 60°F (15.5°C) EWT requires optional insulated water/refrigerant circuit.
- See performance correction tables for operating conditions other than those listed above.
- See Performance Data Selection Notes for operation in the shaded areas.
- Regular Cooling operation with an EWT of less than 50°F (10.0°C) is not recommended unless variable water flow is available.
- Regular Heating operation with an EWT of more than 90°F (32°C) is not recommended unless variable water flow is available.
- For quiet operation and long term reliability, it is recommended that systems be designed to avoid continuous operation in the outlined areas.
- Performance capacities shown in thousands of Btu/h
- Hot Water Generator Capacity is based on 90°F entering water and 0.5 GPM/Ton.

Models:
ME
024-072

Performance Data ME060 EC Blower Motor (Full Load)

1,900 CFM Rated Airflow

EWT °F	WPD			Cooling - EAT 80/67°F							WPD			Heating - EAT 70°F						
	FLOW GPM	PSI	FT	TC	SC	kW	HR	EER	LWT	HWG Cap	FLOW GPM	PSI	FT	HC	kW	HE	COP	LWT	HWG Cap	
20	11.3	Operation Not Recommended										15.0	6.5	15.0	38.9	3.4	27.1	3.3	16.4	3.9
	15.0																			
30	7.5	2.0	4.6	62.5	43.9	2.4	70.7	26.0	48.8	2.4	7.5	2.0	4.6	42.4	3.5	30.4	3.5	21.9	4.2	
	11.3	3.8	8.8	56.8	39.9	2.2	64.2	26.0	41.4	2.4	11.3	3.8	8.8	44.0	3.5	31.9	3.6	24.3	4.3	
	15.0	5.6	13.0	53.5	37.8	2.1	60.6	25.7	38.1	2.3	15.0	5.6	13.0	44.8	3.5	32.7	3.7	25.6	4.3	
40	7.5	1.6	3.7	67.6	47.7	2.7	76.9	24.8	60.5	2.5	7.5	1.6	3.7	48.1	3.6	35.8	3.9	30.5	4.5	
	11.3	3.3	7.6	64.8	45.5	2.5	73.4	25.7	53.1	2.5	11.3	3.3	7.6	50.1	3.6	37.7	4.0	33.3	4.5	
	15.0	4.9	11.4	62.9	44.1	2.4	71.1	26.0	49.5	2.4	15.0	4.9	11.4	51.2	3.7	38.7	4.1	34.8	4.5	
50	7.5	1.3	3.1	68.9	49.2	3.0	79.3	22.8	71.1	2.6	7.5	1.3	3.1	54.1	3.7	41.5	4.3	38.9	4.9	
	11.3	2.9	6.6	68.4	48.3	2.8	78.0	24.2	63.9	2.6	11.3	2.9	6.6	56.5	3.8	43.7	4.4	42.2	5.0	
	15.0	4.4	10.2	67.6	47.6	2.7	76.8	24.8	60.2	2.7	15.0	4.4	10.2	57.8	3.8	44.9	4.5	44.0	5.1	
60	7.5	1.2	2.7	67.9	49.3	3.3	79.2	20.5	81.1	3.8	7.5	1.2	2.7	60.3	3.8	47.3	4.6	47.4	5.4	
	11.3	2.6	6.0	68.8	49.4	3.1	79.4	22.2	74.1	3.6	11.3	2.6	6.0	63.1	3.9	49.9	4.8	51.1	5.6	
	15.0	4.0	9.3	68.9	49.2	3.0	79.2	22.9	70.6	3.4	15.0	4.0	9.3	64.6	3.9	51.3	4.8	53.2	5.8	
70	7.5	1.1	2.5	65.4	48.5	3.6	77.7	18.0	90.7	4.6	7.5	1.1	2.5	66.6	4.0	53.2	4.9	55.8	5.9	
	11.3	2.4	5.6	67.3	49.1	3.4	78.9	19.8	84.0	4.5	11.3	2.4	5.6	69.8	4.0	56.1	5.1	60.0	6.4	
	15.0	3.7	8.6	68.0	49.3	3.3	79.3	20.6	80.6	4.2	15.0	3.7	8.6	71.5	4.1	57.7	5.2	62.3	6.8	
80	7.5	1.0	2.4	61.9	47.0	4.0	75.4	15.6	100.1	5.6	7.5	1.0	2.4	73.0	4.1	59.0	5.2	64.3	6.4	
	11.3	2.3	5.3	64.3	48.1	3.7	77.0	17.3	93.7	5.5	11.3	2.3	5.3	76.4	4.2	62.2	5.4	68.9	7.1	
	15.0	3.5	8.2	65.5	48.5	3.6	77.8	18.1	90.4	5.0	15.0	3.5	8.2	78.3	4.2	63.9	5.4	71.5	7.6	
85	7.5	1.0	2.4	60.0	46.1	4.2	74.2	14.4	104.8	6.3	7.5	1.0	2.4	76.1	4.2	61.9	5.4	68.5	6.8	
	11.3	2.3	5.2	62.5	47.3	3.9	75.9	16.0	98.5	6.0	11.3	2.3	5.2	79.7	4.3	65.2	5.5	73.4	7.4	
	15.0	3.5	8.0	63.8	47.8	3.8	76.7	16.9	95.2	5.5	15.0	3.5	8.0	81.6	4.3	66.9	5.6	76.1	8.0	
90	7.5	1.0	2.4	58.0	45.2	4.4	72.9	13.3	109.4	7.4	7.5	1.0	2.4	79.2	4.2	64.7	5.5	72.7	7.0	
	11.3	2.2	5.2	60.6	46.4	4.1	74.6	14.8	103.3	6.6	11.3	2.2	5.2	82.9	4.3	68.1	5.6	77.9	7.7	
	15.0	3.4	7.9	61.9	47.0	4.0	75.4	15.6	100.1	6.1	15.0	3.4	7.9	84.9	4.4	69.9	5.7	80.7	8.4	
100	7.5	1.0	2.4	54.1	43.4	4.8	70.6	11.2	118.8	8.9	Operation Not Recommended									
	11.3	2.2	5.1	56.6	44.5	4.5	72.0	12.5	112.8	8.2										
	15.0	3.3	7.7	57.9	45.2	4.4	72.8	13.2	109.7	7.4										
110	7.5	1.0	2.3	50.6	41.8	5.4	69.0	9.4	128.4	10.7										
	11.3	2.1	4.9	52.7	42.7	5.0	69.8	10.5	122.4	9.8										
	15.0	3.3	7.6	53.9	43.3	4.9	70.4	11.1	119.4	8.9										
120	7.5	0.9	2.1	48.1	41.0	6.1	68.8	7.9	138.3	12.4										
	11.3	2.1	4.8	49.5	41.4	5.6	68.7	8.8	132.2	11.2										
	15.0	3.2	7.5	50.4	41.7	5.4	68.9	9.3	129.2	10.6										

- Interpolation is permissible; extrapolation is not.
- All entering air conditions are 80°F (26.6°C) DB and 67°F (19.4°C) WB in cooling, and 70°F (21°C) DB in heating.
- AHRI/ISO certified conditions are 80.6°F (27°C) DB and 66.2°F (19°C) WB in cooling and 68°F (20°C) DB in heating.
- Table does not reflect fan or pump power corrections for AHRI/ISO conditions.
- All performance is based upon the lower voltage of dual voltage rated units.
- Performance stated is at the rated power supply; performance may vary as the power supply varies from the rated.
- Operation below 40°F (10.0°C) EWT is based upon 20% methanol antifreeze solution.
- Operation below 60°F (15.5°C) EWT requires optional insulated water/refrigerant circuit.
- See performance correction tables for operating conditions other than those listed above.
- See Performance Data Selection Notes for operation in the shaded areas.
- Regular Cooling operation with an EWT of less than 50°F (10.0°C) is not recommended unless variable water flow is available.
- Regular Heating operation with an EWT of more than 90°F (32°C) is not recommended unless variable water flow is available.
- For quiet operation and long term reliability, it is recommended that systems be designed to avoid continuous operation in the outlined areas.
- Performance capacities shown in thousands of Btuh
- Hot Water Generator Capacity is based on 90°F entering water and 0.5 GPM/Ton.

Performance Data ME060 EC Blower Motor Modulating Flow (Full Load)

Models:
ME
024-072

1900 CFM Rated Airflow

EWT °F	WPD			COOLING - EAT 80/67 °F							WPD			HEATING - EAT 70°F						
	FLOW GPM	PSI	FT	TC	SC	kW	HR	EER	LWT	HWG Cap	FLOW GPM	PSI	FT	HC	kW	HE	COP	LWT	HWG Cap	
20	11.3	Operation Not Recommended																		
	15.0	15.0	6.5	15.0	38.9	3.4	27.1	3.3	16.4	3.9										
30	5.4	1.0	2.3	71.7	50.2	2.7	81.1	26.2	60.0	2.4	7.5	2.0	4.6	42.4	3.5	30.4	3.5	21.9	4.2	
	5.4	1.0	2.3	71.7	50.2	2.7	81.1	26.2	60.0	2.4	11.3	3.8	8.8	44.0	3.5	31.9	3.6	24.3	4.3	
	5.4	1.0	2.3	71.7	50.2	2.7	81.1	26.2	60.0	2.4	15.0	5.6	13.0	44.8	3.5	32.7	3.7	25.6	4.3	
40	7.7	1.7	3.9	67.5	47.6	2.7	76.8	24.9	60.0	2.4	7.5	1.6	3.7	48.1	3.6	35.8	3.9	30.5	4.5	
	7.7	1.7	3.9	67.5	47.6	2.7	76.8	24.9	60.0	2.4	11.3	3.3	7.6	50.1	3.6	37.7	4.0	33.3	4.5	
	7.7	1.7	3.9	67.5	47.6	2.7	76.8	24.9	60.0	2.4	15.0	4.9	11.4	51.2	3.7	38.7	4.1	34.8	4.5	
50	7.5	1.3	3.1	68.9	49.2	3.0	79.3	22.8	71.1	3.6	7.5	1.3	3.1	54.1	3.7	41.5	4.3	38.9	4.9	
	11.3	2.9	6.6	68.4	48.3	2.8	78.0	24.2	63.9	3.3	11.3	2.9	6.6	56.5	3.8	43.7	4.4	42.2	5.0	
	15.0	4.4	10.2	67.6	47.6	2.7	76.8	24.8	60.2	3.0	15.0	4.4	10.2	57.8	3.8	44.9	4.5	44.0	5.1	
60	7.5	1.2	2.7	67.9	49.3	3.3	79.2	20.5	81.1	3.8	7.5	1.2	2.7	60.3	3.8	47.3	4.6	47.4	5.4	
	11.3	2.6	6.0	68.8	49.4	3.1	79.4	22.2	74.1	3.6	11.3	2.6	6.0	63.1	3.9	49.9	4.8	51.1	5.6	
	15.0	4.0	9.3	68.9	49.2	3.0	79.2	22.9	70.6	3.4	15.0	4.0	9.3	64.6	3.9	51.3	4.8	53.2	5.8	
70	7.5	1.1	2.5	65.4	48.5	3.6	77.7	18.0	90.7	4.6	7.5	1.1	2.5	66.6	4.0	53.2	4.9	55.8	5.9	
	11.3	2.4	5.6	67.3	49.1	3.4	78.9	19.8	84.0	4.5	11.3	2.4	5.6	69.8	4.0	56.1	5.1	60.0	6.4	
	15.0	3.7	8.6	68.0	49.3	3.3	79.3	20.6	80.6	4.2	15.0	3.7	8.6	71.5	4.1	57.7	5.2	62.3	6.8	
80	7.5	1.0	2.4	61.9	47.0	4.0	75.4	15.6	100.1	5.6	7.5	1.0	2.4	73.0	4.1	59.0	5.2	64.3	6.4	
	11.3	2.3	5.3	64.3	48.1	3.7	77.0	17.3	93.7	5.5	11.3	2.3	5.3	76.4	4.2	62.2	5.4	68.9	7.1	
	15.0	3.5	8.2	65.5	48.5	3.6	77.8	18.1	90.4	5.0	15.0	3.5	8.2	78.3	4.2	63.9	5.4	71.5	7.6	
85	7.5	1.0	2.4	60.0	46.1	4.2	74.2	14.4	104.8	6.3	7.5	1.0	2.4	76.1	4.2	61.9	5.4	68.5	6.8	
	11.3	2.3	5.2	62.5	47.3	3.9	75.9	16.0	98.5	6.0	11.3	2.3	5.2	79.7	4.3	65.2	5.5	73.4	7.4	
	15.0	3.5	8.0	63.8	47.8	3.8	76.7	16.9	95.2	5.5	15.0	3.5	8.0	81.6	4.3	66.9	5.6	76.1	8.0	
90	7.5	1.0	2.4	58.0	45.2	4.4	72.9	13.3	109.4	7.4	6.3	0.1	0.2	77.2	4.2	63.0	5.4	70.0	8.0	
	11.3	2.2	5.2	60.6	46.4	4.1	74.6	14.8	103.3	6.6	6.3	0.1	0.2	77.2	4.2	63.0	5.4	70.0	8.0	
	15.0	3.4	7.9	61.9	47.0	4.0	75.4	15.6	100.1	6.1	6.3	0.1	0.2	77.2	4.2	63.0	5.4	70.0	8.0	
100	7.5	1.0	2.4	54.1	43.4	4.8	70.6	11.2	118.8	8.9	1.8	0.1	0.2	33.1	1.7	27.2	5.6	70.0	8.0	
	11.3	2.2	5.1	56.6	44.5	4.5	72.0	12.5	112.8	8.2	1.8	0.1	0.2	33.1	1.7	27.2	5.6	70.0	8.0	
	15.0	3.3	7.7	57.9	45.2	4.4	72.8	13.2	109.7	7.4	1.8	0.1	0.2	33.1	1.7	27.2	5.6	70.0	8.0	
110	7.5	1.0	2.3	50.6	41.8	5.4	69.0	9.4	128.4	10.7	1.4	0.1	0.2	33.1	1.7	27.2	5.6	70.0	8.0	
	11.3	2.1	4.9	52.7	42.7	5.0	69.8	10.5	122.4	9.8	1.4	0.1	0.2	33.1	1.7	27.2	5.6	70.0	8.0	
	15.0	3.3	7.6	53.9	43.3	4.9	70.4	11.1	119.4	8.9	1.4	0.1	0.2	33.1	1.7	27.2	5.6	70.0	8.0	
120	7.5	0.9	2.1	48.1	41.0	6.1	68.8	7.9	138.3	12.4	1.1	0.1	0.2	33.1	1.7	27.2	5.6	70.0	8.0	
	11.3	2.1	4.8	49.5	41.4	5.6	68.7	8.8	132.2	11.2	1.1	0.1	0.2	33.1	1.7	27.2	5.6	70.0	8.0	
	15.0	3.2	7.5	50.4	41.7	5.4	68.9	9.3	129.2	10.6	1.1	0.1	0.2	33.1	1.7	27.2	5.6	70.0	8.0	

- Interpolation is permissible; extrapolation is not.
- All entering air conditions are 80°F (26.6°C) DB and 67°F (19.4°C) WB in cooling, and 70°F (21°C) DB in heating.
- AHRI/ISO certified conditions are 80.6°F (27°C) DB and 66.2°F (19°C) WB in cooling and 68°F (20°C) DB in heating.
- Table does not reflect fan or pump power corrections for AHRI/ISO conditions.
- All performance is based upon the lower voltage of dual voltage rated units.
- Performance stated is at the rated power supply; performance may vary as the power supply varies from the rated.
- Operation below 40°F (10.0°C) EWT is based upon 20% methanol antifreeze solution.
- Operation below 60°F (15.5°C) EWT requires optional insulated water/refrigerant circuit.
- See performance correction tables for operating conditions other than those listed above.
- See Performance Data Selection Notes for operation in the shaded areas.
- Regular Cooling operation with an EWT of less than 50°F (10.0°C) is not recommended unless variable water flow is available.
- Regular Heating operation with an EWT of more than 90°F (32°C) is not recommended unless variable water flow is available.
- For quiet operation and long term reliability, it is recommended that systems be designed to avoid continuous operation in the outlined areas.
- Performance capacities shown in thousands of Btuh
- Hot Water Generator Capacity is based on 90°F entering water and 0.5 GPM/Ton.

Models:
ME
024-072

Performance Data ME072 EC Blower Motor (Full Load)

1,900 CFM Rated Airflow

EWT °F	WPD			Cooling - EAT 80/67°F							WPD			Heating - EAT 70°F						
	FLOW GPM	PSI	FT	TC	SC	kW	HR	EER	LWT	HWG Cap	FLOW GPM	PSI	FT	HC	kW	HE	COP	LWT	HWG Cap	
20	12.8	Operation Not Recommended																		
	17.0	17.0	7.6	17.7	47.9	4.2	33.5	3.3	16.1	4.2										
30	8.5	2.2	5.0	78.5	53.4	3.1	89.0	25.4	50.2	2.5	8.5	2.2	5.0	50.2	4.4	35.3	3.4	21.7	4.3	
	12.8	4.5	10.4	76.1	51.4	2.9	85.9	26.5	42.9	2.4	12.8	4.5	10.4	51.5	4.4	36.3	3.4	24.3	4.3	
	17.0	6.8	15.7	74.5	50.1	2.8	84.0	26.8	39.4	2.4	17.0	6.8	15.7	52.2	4.5	36.9	3.4	25.7	4.3	
40	8.5	1.9	4.3	79.9	54.9	3.4	91.4	23.5	61.1	2.5	8.5	1.9	4.3	55.0	4.6	39.2	3.5	30.8	4.5	
	12.8	4.0	9.3	79.1	54.0	3.2	89.9	24.9	53.7	2.5	12.8	4.0	9.3	56.7	4.7	40.7	3.5	33.6	4.5	
	17.0	6.1	14.2	78.3	53.3	3.1	88.8	25.5	50.1	2.4	17.0	6.1	14.2	57.6	4.7	41.5	3.6	35.1	4.6	
50	8.5	1.7	3.8	79.4	55.2	3.7	92.1	21.3	71.4	3.1	8.5	1.7	3.8	60.5	4.8	44.0	3.7	39.6	5.0	
	12.8	3.6	8.4	79.9	55.1	3.5	91.8	23.0	64.1	3.0	12.8	3.6	8.4	62.7	4.9	45.9	3.7	42.8	5.1	
	17.0	5.6	13.0	79.8	54.9	3.4	91.3	23.7	60.5	3.0	17.0	5.6	13.0	63.9	5.0	47.0	3.8	44.5	5.1	
60	8.5	1.5	3.4	77.6	54.5	4.1	91.6	19.0	81.2	4.6	8.5	1.5	3.4	66.8	5.1	49.5	3.9	48.4	5.8	
	12.8	3.4	7.8	79.0	55.1	3.8	92.1	20.7	74.2	4.4	12.8	3.4	7.8	69.5	5.2	51.8	3.9	51.9	6.5	
	17.0	5.2	12.1	79.5	55.2	3.7	92.1	21.5	70.7	4.2	17.0	5.2	12.1	70.9	5.2	53.2	4.0	53.7	7.1	
70	8.5	1.4	3.2	74.8	53.2	4.5	90.2	16.6	90.5	5.8	8.5	1.4	3.2	73.5	5.3	55.4	4.1	57.0	6.5	
	12.8	3.2	7.3	76.9	54.2	4.2	91.2	18.3	84.0	5.2	12.8	3.2	7.3	76.7	5.4	58.3	4.2	60.9	7.3	
	17.0	4.9	11.4	77.8	54.6	4.1	91.6	19.2	80.6	5.0	17.0	4.9	11.4	78.4	5.4	59.8	4.2	63.0	7.9	
80	8.5	1.3	3.0	71.3	51.4	5.0	88.3	14.3	99.6	7.2	8.5	1.3	3.0	80.5	5.5	61.7	4.3	65.5	7.1	
	12.8	3.0	7.0	73.8	52.7	4.6	89.7	15.9	93.5	6.7	12.8	3.0	7.0	84.2	5.6	65.0	4.4	69.8	7.9	
	17.0	4.7	10.9	75.0	53.3	4.5	90.3	16.7	90.3	6.3	17.0	4.7	10.9	86.2	5.7	66.8	4.4	72.1	8.7	
85	8.5	1.3	3.0	69.4	50.5	5.3	87.3	13.2	103.9	8.2	8.5	1.3	3.0	84.1	5.6	65.0	4.4	69.7	7.7	
	12.8	3.0	6.8	72.0	51.8	4.9	88.7	14.7	98.2	7.4	12.8	3.0	6.8	88.0	5.7	68.5	4.5	74.3	8.1	
	17.0	4.6	10.7	73.3	52.4	4.7	89.4	15.5	95.0	6.9	17.0	4.6	10.7	90.1	5.8	70.4	4.6	76.7	8.8	
90	8.5	1.3	2.9	67.4	49.5	5.6	86.3	12.1	108.2	9.1	8.5	1.3	2.9	87.7	5.7	68.2	4.5	73.9	8.1	
	12.8	2.9	6.7	70.1	50.8	5.2	87.7	13.6	102.7	8.3	12.8	2.9	6.7	91.8	5.8	71.9	4.6	78.7	8.5	
	17.0	4.5	10.5	71.5	51.5	5.0	88.4	14.4	99.8	7.4	17.0	4.5	10.5	94.1	5.9	73.9	4.7	81.3	8.9	
100	8.5	1.2	2.8	63.2	47.6	6.2	84.5	10.2	116.6	10.6	Operation Not Recommended									
	12.8	2.8	6.5	66.0	48.9	5.8	85.7	11.5	111.7	9.9										
	17.0	4.4	10.2	67.4	49.5	5.5	86.4	12.2	109.0	9.0										
110	8.5	1.2	2.7	59.2	45.8	7.0	83.0	8.5	124.7	12.3										
	12.8	2.7	6.3	61.8	46.9	6.5	83.9	9.6	120.5	11.7										
	17.0	4.3	9.9	63.2	47.6	6.2	84.4	10.2	118.1	10.6										
120	8.5	1.1	2.6	55.4	44.4	7.9	82.4	7.0	132.5	14.1										
	12.8	2.6	6.1	57.8	45.2	7.3	82.7	7.9	129.0	13.6										
	17.0	4.1	9.6	59.1	45.8	7.0	83.0	8.4	127.0	12.4										

- Interpolation is permissible; extrapolation is not.
- All entering air conditions are 80°F (26.6°C) DB and 67°F (19.4°C) WB in cooling, and 70°F (21°C) DB in heating.
- AHRI/ISO certified conditions are 80.6°F (27°C) DB and 66.2°F (19°C) WB in cooling and 68°F (20°C) DB in heating.
- Table does not reflect fan or pump power corrections for AHRI/ISO conditions.
- All performance is based upon the lower voltage of dual voltage rated units.
- Performance stated is at the rated power supply; performance may vary as the power supply varies from the rated.
- Operation below 40°F (10.0°C) EWT is based upon 20% methanol antifreeze solution.
- Operation below 60°F (15.5°C) EWT requires optional insulated water/refrigerant circuit.
- See performance correction tables for operating conditions other than those listed above.
- See Performance Data Selection Notes for operation in the shaded areas.
- Regular Cooling operation with an EWT of less than 50°F (10.0°C) is not recommended unless variable water flow is available.
- Regular Heating operation with an EWT of more than 90°F (32°C) is not recommended unless variable water flow is available.
- For quiet operation and long term reliability, it is recommended that systems be designed to avoid continuous operation in the outlined areas.
- Performance capacities shown in thousands of Btuh
- Hot Water Generator Capacity is based on 90°F entering water and 0.5 GPM/Ton.

Performance Data ME072 EC Blower Motor Modulating Flow (Full Load)

Models:
ME
024-072

1900 CFM Rated Airflow

EWT °F	WPD			COOLING - EAT 80/67 °F							WPD			HEATING - EAT 70°F					
	FLOW GPM	PSI	FT	TC	SC	kW	HR	EER	LWT	HWG Cap	FLOW GPM	PSI	FT	HC	kW	HE	COP	LWT	HWG Cap
20	12.8	Operation Not Recommended																	
	17.0	17.0	7.6	17.7	47.9	4.2	33.5	3.3	16.1	4.2									
30	6.1	0.9	2.0	79.7	56.4	3.4	91.3	23.3	60.0	2.4	8.5	2.2	5.0	50.2	4.4	35.3	3.4	21.7	4.3
	6.1	0.9	2.0	79.7	56.4	3.4	91.3	23.3	60.0	2.4	12.8	4.5	10.4	51.5	4.4	36.3	3.4	24.3	4.3
	6.1	0.9	2.0	79.7	56.4	3.4	91.3	23.3	60.0	2.4	17.0	6.8	15.7	52.2	4.5	36.9	3.4	25.7	4.3
40	8.9	2.1	4.8	77.8	54.8	3.4	89.3	23.1	60.0	2.4	8.5	1.9	4.3	55.0	4.6	39.2	3.5	30.8	4.5
	8.9	2.1	4.8	77.8	54.8	3.4	89.3	23.1	60.0	2.4	12.8	4.0	9.3	56.7	4.7	40.7	3.5	33.6	4.5
	8.9	2.1	4.8	77.8	54.8	3.4	89.3	23.1	60.0	2.4	17.0	6.1	14.2	57.6	4.7	41.5	3.6	35.1	4.6
50	8.5	1.7	3.8	79.4	55.2	3.7	92.1	21.3	71.4	4.2	8.5	1.7	3.8	60.5	4.8	44.0	3.7	39.6	5.0
	12.8	3.6	8.4	79.9	55.1	3.5	91.8	23.0	64.1	3.8	12.8	3.6	8.4	62.7	4.9	45.9	3.7	42.8	5.1
	17.0	5.6	13.0	79.8	54.9	3.4	91.3	23.7	60.5	3.5	17.0	5.6	13.0	63.9	5.0	47.0	3.8	44.5	5.1
60	8.5	1.5	3.4	77.6	54.5	4.1	91.6	19.0	81.2	4.6	8.5	1.5	3.4	66.8	5.1	49.5	3.9	48.4	5.8
	12.8	3.4	7.8	79.0	55.1	3.8	92.1	20.7	74.2	4.4	12.8	3.4	7.8	69.5	5.2	51.8	3.9	51.9	6.5
	17.0	5.2	12.1	79.5	55.2	3.7	92.1	21.5	70.7	4.2	17.0	5.2	12.1	70.9	5.2	53.2	4.0	53.7	7.1
70	8.5	1.4	3.2	74.8	53.2	4.5	90.2	16.6	90.5	5.8	8.5	1.4	3.2	73.5	5.3	55.4	4.1	57.0	6.5
	12.8	3.2	7.3	76.9	54.2	4.2	91.2	18.3	84.0	5.2	12.8	3.2	7.3	76.7	5.4	58.3	4.2	60.9	7.3
	17.0	4.9	11.4	77.8	54.6	4.1	91.6	19.2	80.6	5.0	17.0	4.9	11.4	78.4	5.4	59.8	4.2	63.0	7.9
80	8.5	1.3	3.0	71.3	51.4	5.0	88.3	14.3	99.6	7.2	8.5	1.3	3.0	80.5	5.5	61.7	4.3	65.5	7.1
	12.8	3.0	7.0	73.8	52.7	4.6	89.7	15.9	93.5	6.7	12.8	3.0	7.0	84.2	5.6	65.0	4.4	69.8	7.9
	17.0	4.7	10.9	75.0	53.3	4.5	90.3	16.7	90.3	6.3	17.0	4.7	10.9	86.2	5.7	66.8	4.4	72.1	8.7
85	8.5	1.3	3.0	69.4	50.5	5.3	87.3	13.2	103.9	8.2	8.5	1.3	3.0	84.1	5.6	65.0	4.4	69.7	7.7
	12.8	3.0	6.8	72.0	51.8	4.9	88.7	14.7	98.2	7.4	12.8	3.0	6.8	88.0	5.7	68.5	4.5	74.3	8.1
	17.0	4.6	10.7	73.3	52.4	4.7	89.4	15.5	95.0	6.9	17.0	4.6	10.7	90.1	5.8	70.4	4.6	76.7	8.8
90	8.5	1.3	2.9	67.4	49.5	5.6	86.3	12.1	108.2	9.1	6.5	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
	12.8	2.9	6.7	70.1	50.8	5.2	87.7	13.6	102.7	8.3	6.5	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
	17.0	4.5	10.5	71.5	51.5	5.0	88.4	14.4	99.8	7.4	6.5	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
100	8.5	1.2	2.8	63.2	47.6	6.2	84.5	10.2	116.6	10.6	4.3	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
	12.8	2.8	6.5	66.0	48.9	5.8	85.7	11.5	111.7	9.9	4.3	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
	17.0	4.4	10.2	67.4	49.5	5.5	86.4	12.2	109.0	9.0	4.3	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
110	8.5	1.2	2.7	59.2	45.8	7.0	83.0	8.5	124.7	12.3	3.3	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
	12.8	2.7	6.3	61.8	46.9	6.5	83.9	9.6	120.5	11.7	3.3	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
	17.0	4.3	9.9	63.2	47.6	6.2	84.4	10.2	118.1	10.6	3.3	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
120	8.5	1.1	2.6	55.4	44.4	7.9	82.4	7.0	132.5	14.1	2.6	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
	12.8	2.6	6.1	57.8	45.2	7.3	82.7	7.9	129.0	13.6	2.6	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8
	17.0	4.1	9.6	59.1	45.8	7.0	83.0	8.4	127.0	12.4	2.6	0.1	0.2	84.4	5.6	65.2	4.4	70.0	8.8

- Interpolation is permissible; extrapolation is not.
- All entering air conditions are 80°F (26.6°C) DB and 67°F (19.4°C) WB in cooling, and 70°F (21°C) DB in heating.
- AHRI/ISO certified conditions are 80.6°F (27°C) DB and 66.2°F (19°C) WB in cooling and 68°F (20°C) DB in heating.
- Table does not reflect fan or pump power corrections for AHRI/ISO conditions.
- All performance is based upon the lower voltage of dual voltage rated units.
- Performance stated is at the rated power supply; performance may vary as the power supply varies from the rated.
- Operation below 40°F (10.0°C) EWT is based upon 20% methanol antifreeze solution.
- Operation below 60°F (15.5°C) EWT requires optional insulated water/refrigerant circuit.
- See performance correction tables for operating conditions other than those listed above.
- See Performance Data Selection Notes for operation in the shaded areas.
- Regular Cooling operation with an EWT of less than 50°F (10.0°C) is not recommended unless variable water flow is available.
- Regular Heating operation with an EWT of more than 90°F (32°C) is not recommended unless variable water flow is available.
- For quiet operation and long term reliability, it is recommended that systems be designed to avoid continuous operation in the outlined areas.
- Performance capacities shown in thousands of Btuh
- Hot Water Generator Capacity is based on 90°F entering water and 0.5 GPM/Ton.

Models:
ME
024-072

Full Load Performance: Correction Tables

Cooling Correction

Entering Air WB °F	Total Capacity	Sensible Cooling Capacity Multipliers - Entering DB °F									Power	Heat of Rejection
		65	70	75	80	80.6	85	90	95	100		
50	0.850	1.174	*	*	*	*	*	*	*	*	0.953	0.87
55	0.880	0.902	1.115	*	*	*	*	*	*	*	0.964	0.896
60	0.922	0.646	0.875	1.103	1.329	*	*	*	*	*	0.977	0.932
65	0.975		0.639	0.869	1.096	1.123	1.320	*	*	*	0.993	0.979
66.2	0.990		0.582	0.812	1.039	1.066	1.262	*	*	*	0.997	0.991
67	1.000		0.545	0.774	1.000	1.027	1.223	1.444	*	*	1.000	1.000
70	1.040			0.630	0.853	0.880	1.075	1.297	*	*	1.011	1.035
75	1.117				0.601	0.627	0.821	1.046	1.275	1.510	1.033	1.101

Notes:

- AHRI/ISO/ASHRAE 13256-1 uses entering air conditions of Cooling - 80.6°F (27°C) DB/ 66.2°F (19°C) WB, and Heating 68°F (20°C) DB/ 59°F (15°C) WB entering air temperature.
- Asterisks indicate that no correction factor is needed, Total Capacity equals Sensible capacity.
- Entering DB temperature range is based on operating limits, not on commissioning limits.
- Cooling and heating air corrections based on rated airflow.

Heating Correction

Entering Air WB °F	Heating Capacity	Power	Heat of Rejection
40	1.052	0.779	1.120
45	1.043	0.808	1.102
50	1.035	0.841	1.084
55	1.027	0.877	1.065
60	1.019	0.915	1.045
65	1.010	0.957	1.023
68	1.004	0.982	1.010
70	1.000	1.000	1.000
75	0.989	1.045	0.974
80	0.976	1.093	0.946

Airflow Correction

Airflow % of Rated	Cooling				Heating		
	Total Capacity	Sensible Capacity	Power	Heat of Rejection	Heating Capacity	Power	Heat of Extraction
60%	0.925	0.788	0.913	0.922	0.946	1.153	0.896
69%	0.946	0.829	0.926	0.942	0.959	1.107	0.924
75%	0.960	0.861	0.937	0.955	0.969	1.078	0.942
81%	0.972	0.895	0.950	0.968	0.977	1.053	0.959
88%	0.983	0.930	0.965	0.979	0.985	1.032	0.974
94%	0.992	0.965	0.982	0.990	0.993	1.014	0.988
100%	1.000	1.000	1.000	1.000	1.000	1.000	1.000
106%	1.007	1.033	1.020	1.009	1.006	0.989	1.011
113%	1.012	1.064	1.042	1.018	1.012	0.982	1.019
119%	1.016	1.092	1.066	1.025	1.018	0.979	1.027
125%	1.018	1.116	1.091	1.032	1.022	0.977	1.033
130%	1.019	1.132	1.112	1.037	1.026	0.975	1.038

Preventative Maintenance

WATER COIL MAINTENANCE (WATER LOOP APPLICATIONS)

Generally water coil maintenance is not needed for closed-loop systems. However, if the piping is known to have high dirt or debris content, it is best to establish a periodic maintenance schedule with the owner so the water coil is checked regularly. Dirty installations are typically the result of deterioration of iron or galvanized piping or components in the system. Open cooling towers requiring heavy chemical treatment and mineral buildup through water use can also contribute to higher maintenance. If periodic coil cleaning is needed, use standard coil cleaning procedures that are compatible with both the heat exchanger material and copper water lines. Generally, the more water flowing through the unit, the less chance for scaling. However, flow rates over 3 GPM per ton (3.9 l/m per kW) can produce water (or debris) velocities that can erode the heat exchanger wall and ultimately produce leaks.

HOT WATER GENERATOR COILS

See water coil maintenance for ground water units. If the potable water is hard or not chemically softened, the high temperatures of the desuperheater tends to scale faster than the water coil and may need more frequent inspections. In areas with extremely hard water, a HWG is not recommended.

FILTERS

Filters must be clean to obtain maximum performance. Filters should be inspected every month under normal operating conditions and be replaced when necessary. Never operate units without a filter.

CONDENSATE DRAIN

In areas where airborne bacteria may produce a slimy substance in the drain pan, it may be necessary to treat the drain pan chemically with an algacide approximately every three months to minimize the problem. The condensate pan may also need to be cleaned periodically to ensure indoor air quality. The condensate drain can pick up lint and dirt, especially with dirty filters. Inspect the drain twice a year to avoid the possibility of plugging and eventual overflow.

COMPRESSOR

Conduct annual amperage checks to ensure that amp draw is no more than 10% greater than indicated on the serial dataplate.

AIR COIL

The air coil must be cleaned to obtain maximum performance. Check once a year under normal operating conditions and, if dirty, brush or vacuum clean. Take care to avoid damaging the aluminum fins while cleaning.

CAUTION

Fin edges are sharp and may cause injury.

CABINET

Do not allow water to stay in contact with the cabinet for long periods of time to prevent corrosion of the cabinet sheet metal. Generally, vertical cabinets are set up from the floor a few inches (7 - 8 cm) to prevent water from entering the cabinet. The cabinet can be cleaned using a mild detergent.

REPAIRS TO SEALED COMPONENTS

Sealed electrical components shall be replaced.

Troubleshooting

GENERAL

If operational difficulties are encountered, perform the preliminary checks below before referring to the troubleshooting charts.

- Verify that the unit is receiving electrical supply power
- Ensure the fuses in the fused disconnect switches are intact

After completing the preliminary checks described above, inspect for other obvious problems such as leaking connections, broken or disconnected wires, etc. If everything appears to be in order, but the unit still fails to operate properly, refer to the **DXM2.6 Troubleshooting Flowchart** or the *Troubleshooting Table* section.

DXM2.6

DXM2.6 troubleshooting in general is best summarized as verifying inputs and outputs. After verifying inputs and outputs, board operation is confirmed and the problem must be elsewhere. Below are some general guidelines for troubleshooting the DXM2.6.

FIELD INPUTS

Conventional thermostat inputs are 24VAC from the thermostat and can be verified using a voltmeter between C and Y1, Y2, W, O, G. 24VAC will be present at the terminal (for example, between “Y1” and “C”) if the thermostat is sending an input to the DXM2.6.

Proper communications with a thermostat can be verified using the Fault LED on the DXM2.6. If the control is NOT in the Test mode and is NOT currently locked out or in a retry delay, the Fault LED on the DXM2.6 will flash very slowly (1 second on, 5 seconds off), if the DXM2.6 is properly communicating with the thermostat.

SENSOR INPUTS

All sensor inputs are paired wires connecting each component to the board. You can check continuity on pressure switches at the board connector. Measure thermistor resistance with the connector removed so that only the impedance of the thermistor is measured.

OUTPUTS

The compressor and reversing valve relays are 24VAC, and you can verify using a voltmeter. For units with EC blower motors, the DXM2.6 controls the motor using serial communications, and you should troubleshoot using the Wireless Service Tool. The alarm relay is either 24VAC as shipped or dry contacts for use with DDC controls by clipping the JW1 jumper. Electric heat outputs are 24VDC “ground sinking” and require a voltmeter set for DC to verify operation. The terminal marked “24VDC” is the 24VDC supply to the electric heat board; terminal “EH1” is stage 1 electric heat; terminal “EH2” is stage 2 electric heat. When electric heat is energized (thermostat is sending a “W” input to the DXM2.6), there is 24VDC between terminal “24VDC” and “EH1” (stage 1 electric heat) and/or “EH2” (stage 2 electric heat). A reading of 0VDC between “24VDC” and “EH1” or “EH2” indicates that the DXM2.6 is NOT sending an output signal to the electric heat board.

TEST MODE

Enter Test mode for 20 minutes by pressing the Test button. The DXM2.6 automatically exits Test mode after 20 minutes.

WARNING

HAZARDOUS VOLTAGE! DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS BEFORE SERVICING.

Failure to disconnect power before servicing can cause severe personal injury or death.

Troubleshooting

Models:
ME
024-072

ADVANCED DIAGNOSTICS

If the Wireless Service Tool (WST) is connected to the DXM2.6, additional diagnostic information and troubleshooting capabilities are available. You can verify the current status of all DXM2.6 inputs, including the current temperature readings of all temperature inputs. In the manual operating mode, you can control most DXM2.6 outputs for system troubleshooting. For more detailed information on the advanced diagnostics of the DXM2.6, see the DXM2.6 Application, Operation and Maintenance (AOM) manual (part #97B0142N01).

DXM2.6 TROUBLESHOOTING FLOWCHART/ TROUBLESHOOTING TABLE

The DXM2.6 Functional Troubleshooting Flowchart is a quick overview of how to start diagnosing a suspected problem using the fault recognition features of the DXM2.6. The Troubleshooting table on the following page is a more comprehensive method for identifying a number of malfunctions that may occur and is not limited to just the DXM2.6. The table contains the following columns:

- The Fault column describes the symptoms.
- The heating (HT) and cooling (CL) columns identify in the mode in which the fault is likely to occur.
- The Possible Cause column identifies the most likely sources of the problem.
- The Solution column describes troubleshooting steps to correct the problem.

Models:
ME
024-072


Troubleshooting DXM2.6 Functional Flow Chart

WARNING

HAZARDOUS VOLTAGE! DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS BEFORE SERVICING.

Failure to disconnect power before servicing can cause severe personal injury or death.

DXM2.6 Functional Troubleshooting Flow Chart

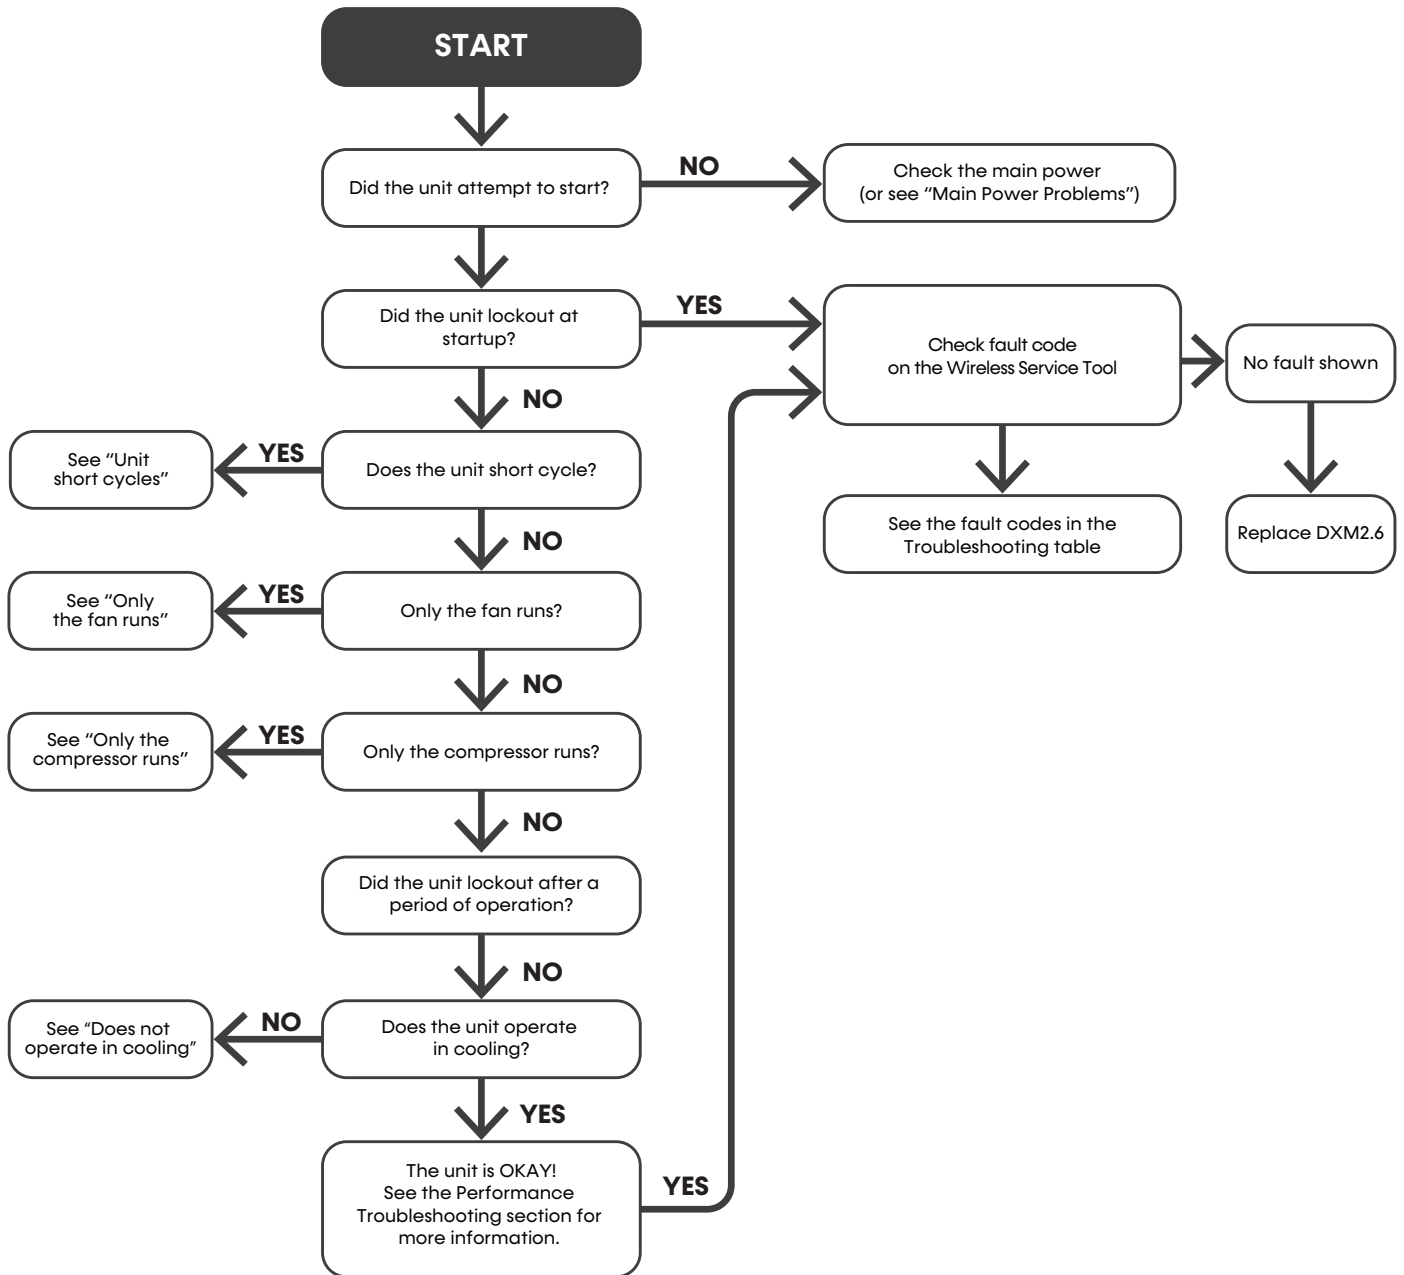

Troubleshooting Troubleshooting Table

Models:
ME
024-072

Fault LED/Fault/Symptom	HT	CL	Possible Cause	Solution
Main power problems	X	X	Green Status LED off	<ul style="list-style-type: none"> Check the line voltage circuit breaker and disconnect. Check for line voltage between L1 and L2 on the contactor. Check for 24VAC between R and C on the unit control. Check primary/secondary voltage on transformer.
Flash Code 2 HP Fault High Pressure		X	Reduced or no water flow in cooling	<ul style="list-style-type: none"> Check pump operation or valve operation/setting. Check water flow adjust to proper flow rate.
		X	Water temperature out of range in cooling	Bring water temp within design parameters.
	X		Reduced or no airflow in heating	<ul style="list-style-type: none"> Check for dirty air filter and clean or replace. Check fan motor operation and airflow restrictions. Dirty air coil. Clean out construction dust etc. Too high of external static? Check static vs blower table.
	X		Air temperature out of range in heating	Bring return air temp within design parameters.
	X	X	Non-condensables in system	Vacuum system and re-weigh in charge.
	X	X	Restricted metering device	Check superheat and subcooling per chart. Replace.
	X	X	Unit overcharged	Check superheat/subcooling vs typical operating condition table.
	X	X	Bad HP switch	Check switch continuity and operation. Replace.
Flash Code 3 LP/LOC Fault Low Pressure Loss of Charge	X	X	Insufficient charge	Check for refrigerant leaks.
	X	X	Bad LP switch	Check switch continuity and operation. Replace
	X		Reduced water flow in heating	<ul style="list-style-type: none"> Check pump operation or water valve operation/setting. Plugged strainer or filter? Clean or replace. Check water flow. Adjust to proper flow rate.
	X		Water temperature out of range	Bring water temperature within design parameters.
		X	Reduced airflow in cooling	<ul style="list-style-type: none"> Check for dirty air filter then clean or replace. Check fan motor operation and airflow restrictions. Is external static too high? Check static against blower table.
		X	Air temperature out of range	Is there too much cold vent air? Bring air temperature within design parameters.
	X		Compressor pump down at startup	Check charge and startup water flow.
Flash Code 4 LT1 Fault Water Coil Low Temperature Limit	X		Reduced or no water flow in heating	<ul style="list-style-type: none"> Check pump operation or water valve operation/setting. Plugged strainer or filter? Clean or replace. Check water flow. Adjust to proper flow rate.
	X		Inadequate antifreeze level	Check antifreeze density with hydrometer.
	X		Improper temperature limit setting (30°F vs 10°F [-1°C vs -2°C])	Clip JW3 jumper for antifreeze (10°F [-12°C]) use.
	X		Water temperature out of range	Bring water temp within design parameters.
	X	X	Bad thermistor	Check temp and impedance correlation per chart.
Flash Code 5 LT2 Fault Air Coil Low Temperature Limit		X	Reduced or no airflow in cooling	<ul style="list-style-type: none"> Check for dirty air filter and clean or replace. Check fan motor operation and airflow restrictions. Too high of external static? Check static against blower table.
		X	Air temperature out of range	Too much cold vent air? Bring entering air temp within design parameters.
		X	Improper temperature limit setting (30°F vs 10°F [-1°C vs -12°C])	Normal air side applications require 30°F (-1°C) only.
	X	X	Bad thermistor	Check temp and impedance correlation per chart.

Table continued on next page

Models:
ME
024-072

Troubleshooting Troubleshooting Table

Table continued from previous page

Fault LED/Fault/Symptom	HT	CL	Possible Cause	Solution
Flash Code 6 Condensate Fault	X	X	Blocked drain	Check for blockage and clean drain.
	X	X	Improper trap	Check trap dimensions and location ahead of vent.
		X	Poor drainage	<ul style="list-style-type: none"> Check for piping slope away from unit. Check slope of unit toward outlet. Poor venting? Check vent location.
		X	Moisture on sensor	Check for moisture shorting to air coil.
	X	X	Plugged air filter	Replace air filter.
	X	X	Restricted return airflow	Find and eliminate restriction. Increase return duct and/or grille size.
Flash Code 7 Over/Under Voltage (Auto Resetting)	X	X	Under voltage	<ul style="list-style-type: none"> Check power supply and 24VAC voltage before and during operation. Check power supply wire size. Check compressor starting. Need hard start kit? Check 24VAC and unit transformer. Tap for correct power supply voltage.
	X	X	Over voltage	<ul style="list-style-type: none"> Check power supply voltage and 24VAC before and during operation. Check 24VAC and unit transformer. Tap for correct power supply voltage.
Flash Code 8 Unit Performance Sentinel	X		Heating mode LT2>125°F (52°C)	Check for poor airflow or overcharged unit.
		X	Cooling Mode LT1>125°F (52°C) OR LT2< 40°F (4°C)	Check for poor water flow or airflow.
Flash Code 9 Swapped Thermistor	X	X	LT1 and LT2 swapped	Reverse position of thermistors
Flash Code 10 ECM Low RPM	X	X	Blower does not operate	<ul style="list-style-type: none"> Check blower line voltage Check blower low-voltage wiring
	X	X	Blower operating with incorrect airflow	<ul style="list-style-type: none"> Is the wrong unit size selected? Check unit configuration. Is the wrong unit family selected? Check unit configuration. The blower size is incorrect. The blower selection is incorrect.
Flash Code 13 Low Water Flow	X	X	Reduced or no water flow	<ul style="list-style-type: none"> Check pump or valve operation setting. Check water flow and adjust to proper flow rate. Clogged Y strainer, replace mesh.
	X		Inadequate antifreeze level	Check antifreeze density with hydrometer.
	X	X	Bad flow switch	Confirm applied flow to looks vs minimum flow switch setpoint on label.
Flash Code 14 Leaving Water Temperature Low	X		Reduced or no water flow in heating	<ul style="list-style-type: none"> Check pump or valve operation setting. Check water flow and adjust to proper flow rate.
	X		Inadequate antifreeze level	Check antifreeze density with hydrometer.
	X		Improper temperature limit setting (30°F vs 15°F [-1°C vs -9°C])	Clip JW3 jumper for antifreeze (15°F [-9°C]) use.
	X		Water temperature out of range	Bring water temperature within design parameters.
	X	X	Bad thermistor	Check temperature impedance correlation per chart.
Flash Code 15 Refrigerant and RDS	X	X	Refrigerant leak	Check the refrigerant charge. If the charge is low, identify and repair the leak.
		X	Faulty RDS sensor	Check the refrigerant charge. If the charge is not low, replace the RDS sensor.
Flash Code 20 ECM Configuration Fault (any)	X	X	Incorrect unit configuration	Check unit size.
	X	X	Incorrect motor size	Check motor size.

Table continued on next page

Troubleshooting Troubleshooting Table

Models:
ME
024-072

Table continued from previous page

Fault LED/Fault/Symptom	HT	CL	Possible Cause	Solution
No Fault Code Shown	X	X	No compressor operation	See the <i>Only Fan Runs</i> symptom.
	X	X	Compressor overload	Check and replace, if necessary.
	X	X	Control board	Reset power and check operation.
Unit Short Cycles	X	X	Dirty air filter	Check and clean air filter.
	X	X	Unit in Test mode	Reset power or wait 30 minutes for auto exit.
	X	X	Unit selection	Unit may be oversized for space. Check sizing for actual load of space.
	X	X	Compressor overload	Check and replace, if necessary.
Only Fan Runs	X	X	Thermostat position	Ensure thermostat set for heating or cooling operation.
	X	X	Unit locked out	Check for lockout codes. Reset power.
	X	X	Compressor overload	Check compressor overload. Replace if necessary.
	X	X	Thermostat wiring	Check thermostat wiring at heat pump. Jumper Y and R for compressor operation in test mode.
Only Compressor Runs	X	X	Thermostat wiring	<ul style="list-style-type: none"> • Check G wiring at heat pump. Jumper G and R for fan operation. • Check thermostat wiring at heat pump. Jumper Y and R for compressor operation in test mode.
	X	X		
	X	X	Fan motor relay	<ul style="list-style-type: none"> • Jumper G and R for fan operation. Check for line voltage across BR contacts. • Check fan power enable relay operation (if present).
	X	X	Fan motor	Check for line voltage at motor. Check capacitor.
Unit Doesn't Operate in Cooling		X	Reversing valve	Set for cooling demand and check 24VAC on RV coil and at the unit control.
		X		If RV is stuck, increase high pressure by reducing water flow and while operating engage and disengage RV coil voltage to push valve.
		X	Thermostat setup	Check for 'O' RV setup not 'B'.
		X	Thermostat wiring	Check O wiring at heat pump. Jumper O and R for RV coil 'click'.
		X		Put thermostat in cooling mode. Check 24VAC on O (check between C and O); check for 24VAC on W (check between W and C). There should be voltage on O, but not on W. If voltage is present on W, the thermostat may be bad or wired incorrectly.

Models:
ME
024-072


Troubleshooting Functional Troubleshooting Form

Customer: _____ **Loop Type:** _____ **Startup Date:** _____

Model #: _____ **Serial #:** _____ **Antifreeze Type:** _____ %

Complaint: _____

Refrigerant: R-454B
Operating Mode: Heating and Cooling

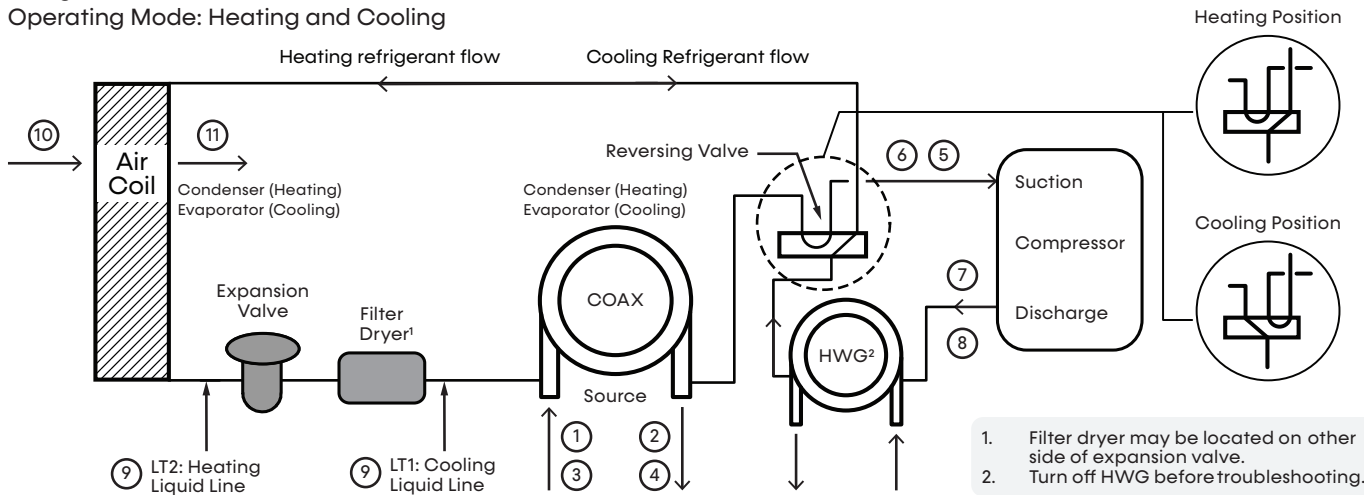

Description	Heating	Cooling	Notes
Water Side Analysis			
1	Water In Temp.		
2	Water Out Temp.		ΔT =
3	Water In Pressure		
4	Water Out Pressure		
4a	Pressure Drop		
4b	GPM		

Heat of Extraction (Absorption) or Heat of Rejection:
 HE (Btuh) = _____ or HR (Btuh) = _____
 _____ Flow Rate (GPM) x _____ ΔT (°F) x _____ Fluid Factor

Fluid Factor:
500 (Water) 485 (Antifreeze)

Refrigerant Analysis			
5	Suction Temp.		
6	Suction Pressure		
6a	Saturation Temp.		
6b	Superheat		
7	Discharge Temp.		
8	Discharge Pressure		
8a	Saturation Temp.		
8b	Subcooling		
9	Liquid Line Temp		
10	Return Air Temp.		
11	Supply Air Temp.		ΔT =
	Voltage		
	Compress Amps		

Startup Log Sheet

Models:
ME
024-072

Installer: Complete *Unit and System Checkout* and follow *Unit Startup Procedures* in the IOM. Use this form to record unit information, temperatures, and pressures during startup. Keep this form for reference.

Job Name: _____

Street Address: _____

Model Number: _____

Serial Number: _____

Unit Location in Building: _____

Date: _____

Sales Order Number: _____

In order to minimize troubleshooting and costly system failures, complete the following checks and data entries before the system is put into full operation.

Fan Motor	Description	Value
CV EC	CFM Setting	

Temperatures (check one): °F °C Antifreeze: _____ %

Pressures (check one): PSIG kPa Type: _____

	Cooling Mode	Heating Mode
Entering Fluid Temperature		
Leaving Fluid Temperature		
Fluid Temperature Differential		
Return-Air Temperature	DB	WB DB
Supply-Air Temperature	DB	WB DB
Air Temperature Differential		
Water Coil Heat Exchanger (Water Pressure IN)		
Water Coil Heat Exchanger (Water Pressure OUT)		
Pressure Differential		
Flow Rate GPM (l/s)		
Compressor		
Amps		
Volts		
Discharge Line Temperature		
Motor		
Amps		
Volts		

NOTES:

1. Allow unit to run 15 minutes in each mode before taking data.
2. Never connect refrigerant gauges during startup procedures.
3. Conduct water-side analysis using P/T ports to determine water flow and temperature difference.
4. If water-side analysis shows poor performance, refrigerant troubleshooting may be required.
5. Connect refrigerant gauges as a last resort.

Models:
ME
024-072

Warranty



LIMITED EXPRESS WARRANTY

Congratulations on purchasing your new HVAC equipment. It's been designed for long life and reliable service, and is backed by one of the strongest warranties in the industry. Your unit automatically qualifies for the warranty coverage listed below, providing you keep your proof of purchase (receipt) for the equipment and meet the warranty conditions.

LIMITED TWELVE (12) YEAR EXPRESS WARRANTY

Heat Controller warrants all parts of the ME Series residential geothermal heat pump including the compressor to be free from defects in workmanship and materials for normal use and maintenance for twelve (12) years from the date of purchase by the original consumer for the original installation. This Express Limited Warranty applies only when the geothermal heat pump is installed as a complete matched system, and only when the system is installed per Heat Controller installation instructions and in accordance with all local, state and national codes for normal use. Thermostats, auxiliary electric heaters, and geothermal pump flow centers purchased through Heat Controller and installed with an ME geothermal heat pump will be covered by the same twelve (12) year express warranty. All other accessories will have one (1) year.

LIMITED FIVE (5) YEAR LABOR ALLOWANCE

Labor is allowed for warranty service for a period of five (5) years from the date of purchase when the unit is properly registered and commissioned according to the start-up procedure specified in the Installation/Operation Manual, and when the Geothermal Start-Up Certification Form is completed and submitted to Heat Controller.

EXCEPTIONS

The Limited Express Warranty does not cover normal maintenance—Heat Controller recommends that regular inspection/maintenance be performed at least once a season and proof of maintenance be kept. Additionally, labor charges, transportation charges for replacement parts, replacement of refrigerant or filters, any other service calls/repairs are not covered by this Limited Warranty. It also does not cover any portion or component of the system that is not supplied by Heat Controller, regardless of the cause of failure of such portion or component.

CONDITIONS FOR WARRANTY COVERAGE

- Unit must be operated according to Heat Controller operating instructions included with the unit and cannot have been subjected to accident, alteration, improper repair, neglect or misuse, or an act of God (such as a flood)
- Installation was done by a trained, licensed or otherwise qualified HVAC dealer/contractor
- Performance cannot be impaired by use of any product not authorized by Heat Controller, or by any adjustments or adaptations to components
- Serial numbers and/or rating plate have not been altered or removed
- Damage has not been a result of inadequate wiring or voltage conditions, use during brown-out conditions, or circuit interruptions
- Air flow around any section of the unit has not been restricted
- Unit remains in the original installation
- Unit was not purchased over the internet

Please visit www.heatcontroller.com to register your new product



DURATION OF WARRANTY & REGISTRATION

The warranty begins on the date of purchase by the original consumer. The consumer must retain a receipted bill of sale as proof of warranty period. Without this proof, the express warranty begins on the date of shipment from the factory.

REMEDY PROVIDED BY THE LIMITED EXPRESS WARRANTY

The sole remedy under the Limited Warranty is replacement of the defective part. If replacement parts are required within the period of this warranty, Heat Controller replacement parts shall be used; any warranty on the replacement part(s) shall not affect the applicable original unit warranty. Ready access to the unit for service is the owner's responsibility. Labor to diagnose and replace the defective part is not covered by this Limited Express Warranty. If for any reason the replacement part/product is no longer available during the warranty period, Heat Controller shall have the right to allow a credit in the amount of the current suggested retail price of the part/product instead of providing repair or replacement.

LIMITATION OF LIABILITY

1. There are no other express or implied warranties. Heat Controller makes no warranty of merchantability. We do not warrant that the unit is suitable for any particular purpose or can be used in buildings or rooms of any particular size or condition except as specifically provided in this document. There are no other warranties, express or implied, which extend beyond the description in this document.
2. All warranties implied by law are limited in duration to the seven-year term of the parts warranty. Your exclusive remedy is limited to the replacement of defective parts. **We will not be liable for any consequential or incidental damages caused by any defect in this unit.**
3. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow limitation on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.
4. No warranties are made for units sold outside the continental United States and Canada. Your distributor or final seller may provide a warranty on units sold outside these areas.
5. Heat Controller will not be liable for damages if our performance regarding warranty resolution is delayed by events beyond our control including accident, alteration, abuse, war, government restrictions, strikes, fire, flood, or other acts of God.

HOW TO OBTAIN WARRANTY SERVICE OR PARTS

If you have a warranty claim, notify your installer promptly. If the installer does not remedy your claim, write to Heat Controller, 1900 Wellworth Ave., Jackson MI 49203. Enclose a report of inspection by your installer or service person. Include model number, serial number, and date of purchase.

Owner responsibilities are set forth in the instruction manual—read it carefully.

KEEP THIS INFORMATION AS A RECORD OF YOUR PURCHASE	
GEOTHERMAL HEAT PUMP	INSTALLATION
Model Number _____	Installer Name _____
Serial Number _____	Phone Number/Contact Information _____
Date of Purchase _____	Date Installation Completed _____
<input type="checkbox"/> Component of new HVAC system	<input type="checkbox"/> Replacement heat pump only
Remember to retain your bill of sale as proof of warranty period.	

Notes

Models:
ME
024-072

Models:
ME
024-072

Notes

Notes

Models:
ME
024-072

Models:
ME
024-072

Revision History

Date	Section	Description
03/25/26	All	Updated DXM2.5 to DXM2.6 throughout
01/16/26	Model Nomenclature	Updated
	General Information	Updated the Altitude Adjustment table and the maximum allowable altitude
	Physical Data	Updated system water volume
	Horizontal Installation	Updated
	Variable Water Flow Heat Pump	Updated configurations
	Hot Water Generator	Added maximum amperage in the HWG Wiring figure
	Operating Limits and Commissioning Conditions	Updated max pressure for the variable-speed pump
	Performance Data	Added data for units without Variable Water Flow
12/12/25	Ground-Loop Heat Pumps	Updated antifreeze setup instructions
	Electrical Data	Added new data for additional configurations
	Example Wiring Diagram	Updated
	Refrigerant Detection System	Updated
	Unit and System Checkout	Added new note
	Unit Startup Procedure	Updated
	All	Updated instructions and added data to support the Wireless Service Tool Updated organization, figure references, and table references Updated condensate drain connection size and threading
04/25/25	Electrical data	Updated CV EC FLA for sizes 036-048
		Updated Total Unit FLA for sizes 036-048
		Updated Minimum Circuit Amp for sizes 036-048
	Unit Operating Conditions	Updated Air Temp Drop for size 036
		Corrected headers



1900 Wellworth Ave. | Jackson, MI 49203
Phone: 517-787-2100
www.heatcontroller.com

Due to ongoing product improvements, specifications and dimensions are subject to change and correction without notice or incurring obligations. Determining the application and suitability for use of any product is the responsibility of the installer. Additionally, the installer is responsible for verifying dimensional data on the actual product prior to beginning any installation preparations.

Incentive and rebate programs have precise requirements as to product performance and certification. All products meet applicable regulations in effect on date of manufacture; however, certifications are not necessarily granted for the life of a product. Therefore, it is the responsibility of the applicant to determine whether a specific model qualifies for these incentive/rebate programs.

Engineered and assembled in the USA.

© Heat Controller, Inc. All Rights Reserved 2024